# **Create/Modify Entities**


Model courtesy of the NHTSA website: www.ncac.gwu.edu




## Creating/Modifying Entities

- In PRIMER an entity is defined as any LS-DYNA keyword entity, this would include nodes, beams, shells, solids, parts etc.
- To create or modify these entities the process is essentially the same and each entities' panel can be found under the green keywords buttons.

#### Create Entities – Creation Panel

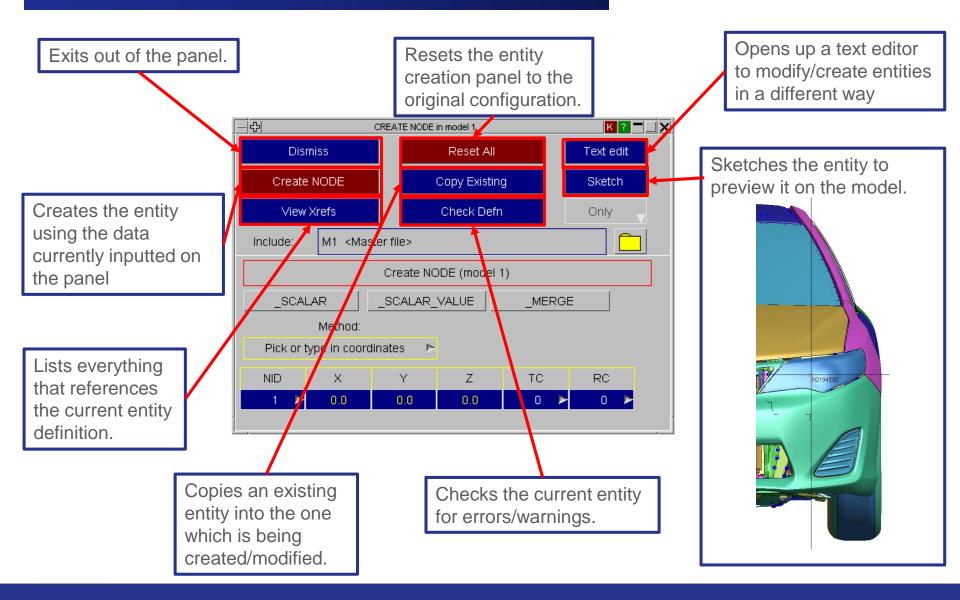

## Modify Entities – Modify Panel

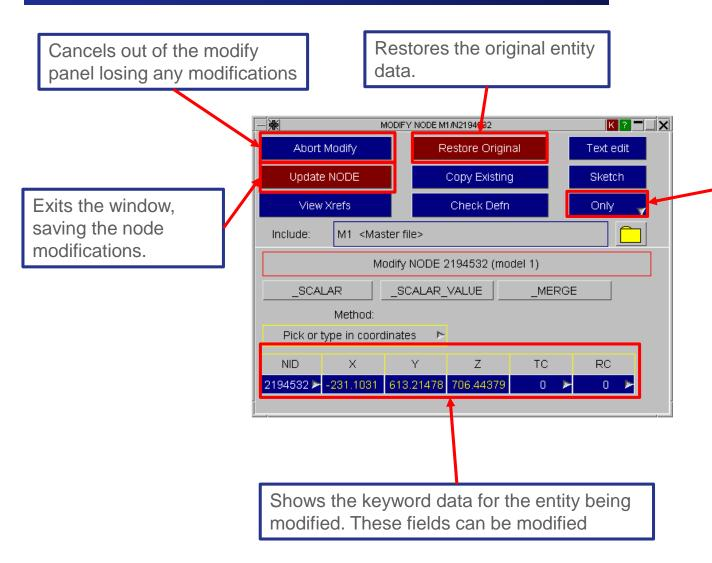

Options for displaying the entity. A right mouse click here gives other options for blanking and unblanking

#### **Contact Information**



www.arup.com/dyna

#### For more information please contact the following:

UK:	China:	India:
The Arup Campus	Arup	Arup
Blythe Valley Park	39F/41F	Ananth Info Park
Solihull	Huaihai Plaza	HiTec City
B90 8AE	1045 Huaihai Road (M)	Madhapur Phase-II
United Kingdom	Xuhui District	Hyderabad 500081, Telangana
	Shanghai 200031	India
	China	
T +44 121 213 3399	T +86 21 3118 8875	T +91 40 44369797 / 98
dyna.support@arup.com	china.support@arup.com	india.support@arup.com

or contact your local Oasys Ltd LS-DYNA Environment distributor

