

Pile

Version 19.7

Oasys

Oasys Ltd

13 Fitzroy Street
London
W1T 4BQ

Central Square
Forth Street
Newcastle Upon Tyne
NE1 3PL

Telephone: +44 (0) 191 238 7559

Facsimile: +44 (0) 191 238 7555

e-mail: oasys@arup.com

Website: <http://www.oasys-software.com/>

Pile Oasys Geo Suite for Windows

Copyright © Oasys 1997 - 2018

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

This document has been created to provide a guide for the use of the software. It does not provide engineering advice, nor is it a substitute for the use of standard references. The user is deemed to be conversant with standard engineering terms and codes of practice. It is the users responsibility to validate the program for the proposed design use and to select suitable input data.

Printed: October 2018

Table of Contents

1	About Pile	1
1.1	General Program Description	1
1.2	Program Features	1
1.3	Components of the User Interface	2
1.3.1	Working with the Gateway	2
1.3.2	Preferences	3
1.4	Step by Step Guide	4
2	Method of Analysis	7
2.1	Capacity	7
2.1.1	Shaft Friction	8
2.1.1.1	Total Stress Approach.....	8
2.1.1.2	Effective Stress Approach.....	9
2.1.1.3	Limiting Shaft Friction.....	9
2.1.1.4	Negative Skin Friction.....	10
2.1.2	End Bearing	10
2.1.2.1	Total Stress Approach.....	10
2.1.2.2	Effective Stress Approach.....	10
2.1.2.3	Limiting End Bearing.....	12
2.1.3	Bearing Capacity	12
2.1.3.1	Ultimate Capacity.....	13
2.1.3.2	Plugged Capacity.....	14
2.1.3.3	Unplugged Capacity.....	14
2.1.3.4	Allow able Capacity - Working Load Approach.....	16
2.1.3.5	Design Resistance - Limit State Approach.....	18
2.1.3.6	Code-Based.....	20
2.1.4	Solution Algorithm	20
2.1.4.1	Skin Friction Computation.....	20
2.1.4.2	End Bearing Computation.....	21
2.1.4.2.1	Berezantzev Method.....	22
2.1.4.2.2	Bolton Method.....	25
2.2	Settlement	25
2.2.1	Mindlin Approach	26
2.2.1.1	Theory of Analysis.....	26
2.2.1.2	Integration of Mindlin's equations.....	31
2.2.1.3	Pile Stiffness Matrix.....	36
2.2.2	t-z Curves	40
2.2.2.1	Soil Stiffness Matrix.....	40
2.2.2.1.1	Elastic-Plastic Curves	40
2.2.2.1.2	Hyperbolic Curves	42
2.2.2.1.3	Logarithmic	44
2.2.2.1.4	API	47
2.2.2.1.5	Emperical (Vijayvergiya).....	50
2.2.2.1.6	User-defined.....	52
2.2.2.2	Pile Stiffness Matrix.....	54

2.2.2.3	Effect of Cyclic Loading	55
2.2.2.3.1	Default Behaviour	55
2.2.2.3.2	Chin-Poulos	61
2.2.2.3.3	Logarithmic Curves.....	63
2.2.3	Different Young's Modulus for Compression and tension	70
2.2.4	Staged Analysis and Cyclic Loading	71

3 Opening the Program 72

3.1	Intranet Link and Emails	74
-----	--------------------------------	----

4 Assembling Data 75

5 Input Data 76

5.1	Titles	77
5.1.1	Titles window - Bitmaps	78
5.2	Units	78
5.3	Analysis Options	79
5.4	Capacity Data	80
5.4.1	Working Load	82
5.4.2	Design Resistance	84
5.4.3	EC7 (No National Annex)	85
5.4.4	EC7 (United Kingdom)	86
5.4.5	IS 2911	88
5.5	Settlement Data	90
5.6	Pile Geometry	91
5.6.1	Pile Properties	92
5.6.2	Pile Lengths	94
5.6.3	Pile Cross-section Dimensions	95
5.6.4	Under-ream	99
5.7	Material Properties	99
5.7.1	Undrained Materials	100
5.7.2	Drained Materials	102
5.8	Soil Profiles	104
5.9	Groundwater	107
5.10	Soil Profiles Groundwater Map	109
5.11	Effective Stress Profiles	109
5.12	Nq-Phi Curves	110
5.13	t-z Curve Data	110
5.13.1	Elastic-Plastic	111
5.13.2	Logarithmic	111
5.13.3	Chin and Poulos	112
5.13.4	API	113
5.13.5	Vijayvergiya	113
5.13.6	User Specified	114
5.14	Tip Load Curve Data	114
5.14.1	Elastic-Plastic	115
5.14.2	Chin and Poulos	115
5.14.3	Logarithmic	116

5.14.4API	117
5.14.5Vijayvergiya	117
5.14.6User Specified	118
5.15 Applied Loads & Displacements	119
5.16 Displacement Radii	121
5.17 Convergence Control Data	122
5.18 Thermal and Cyclic Loading	123
6 Staged Analysis	124
7 Output	126
7.1 Analysis and Data Checking	126
7.2 Tabular Output	127
7.3 Graphical Output	130
7.3.1 Length Wizard	133
8 Programming Interface	135
8.1 COM Automation	135
8.1.1 COM Export Functions	135
8.1.2 COM VBA Example	146
8.1.3 COM C++ Example	147
8.1.4 Python Sample	149
8.1.5 MATLAB Sample	151
9 List of References	152
9.1 References	152
10Manual Example	153
10.1 General	153
11Brief Technical Description	153
11.1 Pile	153
Index	155

1 About Pile

1.1 General Program Description

Oasys Pile Pile load capacity and Settlement

Oasys Pile calculates the vertical load carrying capacities and vertical settlements of a range of individual piles in a layered soil deposit. The theory is based on both conventional and new methods for drained (frictional) and undrained (cohesive) soils. Settlements are calculated for solid circular sections without under-ream.

1.2 Program Features

The main features of **Oasys Pile** are summarised below.

Capacity analysis, settlement analysis, or both can be performed for a range of pile lengths and cross-sections in different soil profiles.

Settlements are calculated for only solid circular cross-sections without under-ream.

The soil is specified in layers. Each layer is set to be drained (frictional) or undrained (cohesive) and appropriate strength parameters are specified. Maximum values can be set for ultimate soil/shaft friction stress and end bearing stress within each layer.

Levels may be specified as

- depth below ground level; or
- elevation above ordnance datum (OD).

Porewater pressures within the soil deposit can be set to hydrostatic or piezometric.

Pile capacities may be calculated for a range of pile lengths and a range of cross-section types such as circular, square and H-section. The circular and square cross-sections may be hollow or solid, whereas the H-section is only solid. Under-reams or enlarged bases may be specified.

Pile settlements may be calculated for a range of pile lengths and a range of solid circular cross-sections without under-ream.

There are three approaches available to calculate the capacity of the pile -

- working load approach,
- limit-state approach, and
- code-based approach.


The graphical output depicts the variation of different pile capacities such as shaft resistance, end bearing, total bearing with pile depth and settlements of pile or soil. This may be exported in WMF format.

The text output contains the tabular representation of the input data and results. They may be exported to CSV format.

Legacy Pile and Pilset files may be read. Limiting shaft skin friction is now calculated from the material properties, so the reading of limiting shaft skin friction from legacy Pilset files is ignored.

1.3 Components of the User Interface

The principal components of Pile's user interface are the Gateway, Table Views, Graphical Output, Tabular Output, toolbars, menus and input dialogs. These are illustrated below.

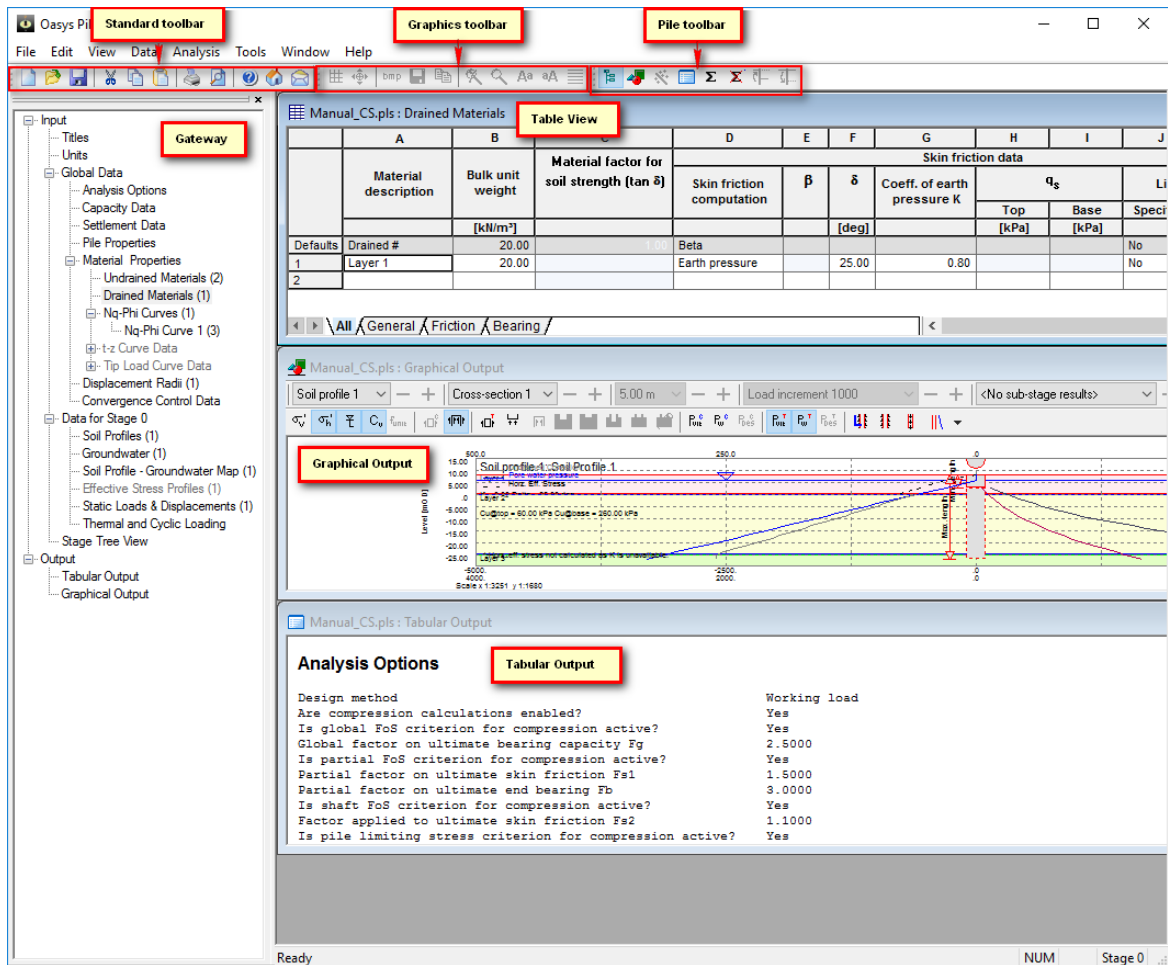

1.3.1 Working with the Gateway

The [Gateway](#) gives access to all the data that is available for setting up a Pile model.

Top level categories can be expanded by clicking on the '+' symbol beside the name or by double clicking on the name. Clicking on the '-' symbol or double clicking on the name when expanded will close-up the item.

Double-clicking on an item will open the appropriate table view or dialog for data input.

The inactive items such as "[Settlement Data](#)", "[t-z Curve Data](#)" etc are hidden when the corresponding options in the program are disabled. These items would be visible in the Gateway when the corresponding options are enabled by the user in the program. For example, when the user disables "Settlement" option in the "[Analysis Options](#)" dialog, the following items are hidden:

"[Settlement Data](#)",

"[t-z Curve Data](#)",

"[Tip Load Curve Data](#)",

["Applied Loads and Displacements"](#),
["Displacement Radii"](#),
["Convergence Control Data"](#),
["Thermal and Cyclic Loading"](#)


When the "Settlement" option is enabled in the ["Analysis Options"](#) dialog, along with "Mindlin" calculation method, all the above items except ["t-z Curve Data"](#) and ["Tip Load Curve Data"](#) are enabled. These two options are enabled only if "t-z" calculations method is active in the ["Analysis Options"](#) dialog.

Similarly, "Stage Tree View" item is enabled only if "Multiple Stages" option is selected in the ["Analysis Options"](#) dialog.

1.3.2 Preferences

This dialog can be accessed by clicking Tools | Preferences. Preferences can be set whether a file is opened or not.

The Preferences dialog is accessible by choosing Tools | Preferences from the program's menu. It allows the modification of settings such as numeric format for output, show welcome screen, print parameters and company information. These choices are stored in the computer's registry and are therefore associated with the program rather than the data file. All data files will adopt the same choices.

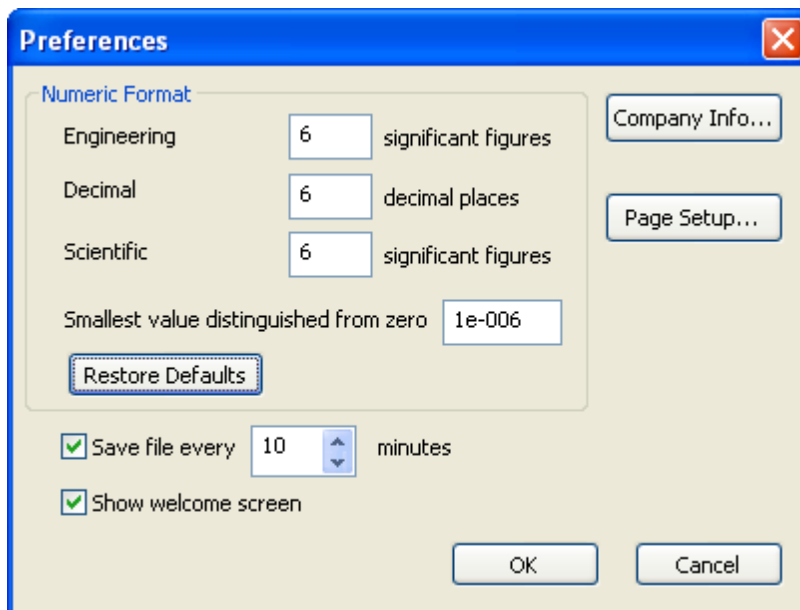


Numeric Format controls the output of numerical data in the Tabular Output. The [Tabular Output](#) presents input data and results in a variety of numeric formats, the format being selected to suit the data. Engineering, Decimal, and Scientific formats are supported. The numbers of significant figures or decimal places, and the smallest value distinguished from zero, may be set.

Restore Defaults resets the Numeric Format specifications to program defaults.

A time interval may be set to save data files automatically. Automatic saving can be disabled by clearing the **"Save file every ..."** check box.

Show welcome screen enables or disables the display of the Welcome Screen. The Welcome Screen will appear on program start-up, and gives the option to create a new file, to open an existing file by browsing, or to open a recently used file.

Company Info allows changes to the company name and logo on the top of each printed page. To add a bitmap enter the full path of the bitmap file. The bitmap will appear fitted into a space approximately 4cm by 1cm. The aspect ratio will be maintained. For Arup versions of the program the bitmap option is not available.

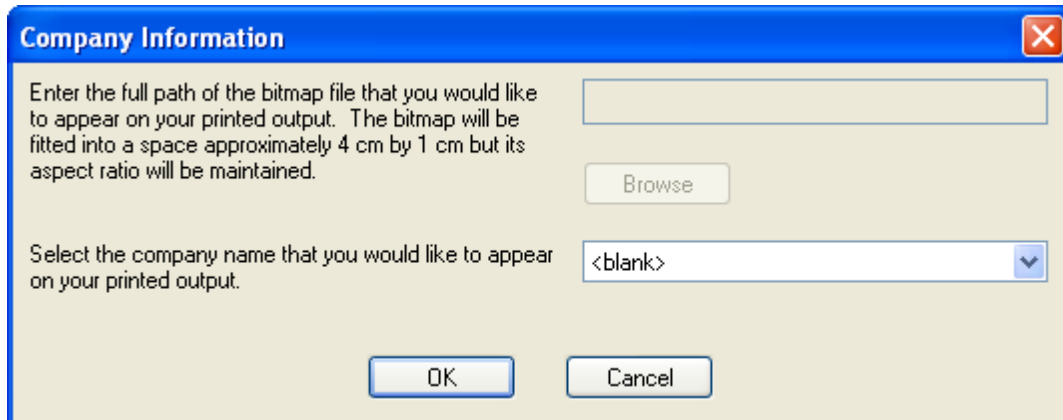

Page Setup opens the Page Setup dialog allowing the style of output for printed text and graphics to be selected.

If 'Calculation Sheet Layout' is selected the page is formatted as a calculation sheet with details inserted in the page header.

If 'Logo' is selected the company logo is inserted in the top left corner of the page.

If 'Border' is selected this gives a border but no header information.

If 'Clipped' is selected the output is clipped leaving a space for the logo. This has no effect on text output.

1.4 Step by Step Guide

To perform capacity and settlement analysis of a pile follow the steps listed below. The data file should be saved at frequent intervals.

Item	Description
1	Begin a new data file by selecting "File New" on the program menu.
2	Set the preferred units for data input and output in the Units dialog. The Units dialog is accessible by double-clicking "Units" in the Gateway , or via "Data Units" on the program menu.
3	Choose the analysis type, via the Analysis Options dialog - whether capacity or settlement or both.

Choose the effective stress profile, whether calculated or user-defined. Input for user-defined effective stresses profiles is explained in Item 8.

Choose the datum type, whether levels are entered as depths or elevations.

Choose the method for capacity analysis - whether working load or design resistance, and enter the factors for the selected method.

The Analysis Options dialog is accessible by double-clicking "Analysis Options" in the Gateway or via "Data | Analysis Options" on the program menu.

- 4 Specify the type of analysis i.e. Working Load / Design Resistance / Code-based, and also the relevant parameters using the [Capacity Data](#) property sheet.
- 5 Specify the method of settlement calculation i.e. Mindlin or t-z curves, and the relevant parameters such as Young's modulus of soil above and below pile base, rigid boundary level, number of load increments and number of pile elements. Data input for settlement analysis is available via the [Settlement Data](#) dialog.

If the t-z approach is selected, then input the relevant [t-z curves](#) and [tip load curves](#) to be used for the pile shaft and the pile base respectively.

A particular type of t-z or tip load curve can be input by double-clicking the appropriate type under the t-z Curve Data or Tip Load Curve Data gateway item, or under the "Data | t-z Curve Data or Tip Load Curve Data" item on the program menu.

- 6 Specify the type, length and diameter of pile via the [Pile Geometry](#) dialog. Follow the wizard to enter pile properties, pile lengths and pile cross-sections.

The Pile Geometry dialog is accessible by double-clicking "Pile Geometry" in the Gateway or via "Data | Pile Geometry" on the program menu.

- 7 Specify the input data for soil material, whether undrained or drained.

- 7.1 Specify any undrained material data in the [Undrained Material](#) table view.

The Undrained Material table view is accessible by double-clicking "Material Properties | Undrained Material" in the [Gateway](#) or via "Data | Material Properties | Undrained Material" on the program menu.

- 7.2 Specify any drained material data in the [Drained Material](#) table view.

The Drained Material table view is accessible by double-clicking "Material Properties | Drained Material" in the [Gateway](#) or via "Data | Material Properties | Drained Material" on the program menu.

- 8 Specify soil layers in the [Soil Profiles](#) table view. Multiple soil profiles can be defined.

The Soil Profiles table view is accessible by double-clicking "Soil Profiles" in the [Gateway](#) or via "Soil Profiles" on the program menu.

- 9 Specify any hydrostatic or piezometric pressure in the [Groundwater](#) table view. Multiple Groundwater tables can be defined.

The Groundwater table view is accessible by double-clicking "Groundwater" in the [Gateway](#) or via "Data | Groundwater" on the program menu.

Associate the groundwater data tables with soil profiles using the [Soil Profile - Groundwater Table Map](#). This can also be accessed from the gateway.

- 10 If any custom stress profiles need to be used, specify such user-defined effective stress profiles in the [Effective Stress Profiles](#) table view. At least one soil layer should be defined in order to access this table view.

The Effective Stress Profiles table view is accessible by double-clicking "Effective Stress Profiles" in the [Gateway](#) or via "Effective Stress Profiles" on the program menu.

- 11 Specify user-defined Nq-Phi curves in the [Nq-Phi curves](#) tabbed table view. This table view is accessible when capacity analysis is selected in [Analysis Options](#) dialog

The Nq-Phi curves tabbed table view is accessible by double-clicking "Nq-Phi curves" in the [Gateway](#) or via "Data | Nq-Phi curves" on the program menu.

- 12 Specify applied loads and prescribed displacements in the [Applied Loads & Displacements](#) table view. This table view is accessible when settlement analysis is selected in the [Analysis Options](#) dialog.

The Applied Loads & Displacements table view is accessible by double-clicking "Applied Loads & Displacements" in the [Gateway](#) or via "Data | Applied Loads & Displacements" on the program menu.

- 13 Specify any thermal and/or cyclic loads in the [Thermal and Cyclic Loading](#) dialog. This is relevant to only settlement analysis.

This is accessible by double-clicking "Thermal and Cyclic Loading" in the Gateway or via "Data | Thermal & Cyclic Loads" on the program menu.

- 14 If the Mindlin option for calculating displacements is used, specify the radial distance from the pile at which soil displacements are to be calculated in the [Displacement Radii](#) table view. This table view is accessible when settlement analysis is selected in the [Analysis Options](#) dialog

The Displacement Radii table view is accessible by double-clicking "Displacement Radii" in the [Gateway](#) or via "Data | Displacement Radii" on the program menu.

- 15 Specify convergence control data in the [Convergence Control Data](#) dialog. This dialog is accessible when settlement analysis is selected in the [Analysis Options](#) dialog.

The Convergence Control Data dialog is accessible by double-clicking "Convergence Control Data" in the [Gateway](#) or via "Data | Convergence Control Data" on the program menu.

- 16 If there are multiple stages of analysis, create new stages and enter stage-specific data as outlined in [Stage tree view](#).

- 17 Perform an analysis by clicking the Analyse button on the [Pile toolbar](#), or via "Analysis | Analyse" on the program menu.

- 18 Pile performs a check on data for consistency. Correct any errors that are shown in the subsequent report of warnings and errors.
- 19 Inspect the results in the [Tabular Output view](#) and/or the [Graphical Output](#).

These are accessible by double-clicking the "Output | Tabular Output", "Output | Graphical Output" in the [Gateway](#), via "View | Tabular Output", "View | Graphical Output" on the program menu, or via the appropriate buttons on the [Pile toolbar](#).
- 20 Adjust the data and re-analyse as necessary.

2 Method of Analysis

2.1 Capacity

The soil is split up into a number of layers - each having necessary data to calculate end bearing and skin friction.

The program will calculate bearing capacity at discrete elevations, either to provide a single bearing capacity at a single elevation or to develop a bearing capacity versus depth profile over a specified range of elevations.

The calculation procedure will involve identifying a number of sub-layers within each specified soil layer corresponding to:

- depths at which capacity is to be assessed where these fall within a layer;
- depths at which capacity is to be assessed to allow a graph to be produced;
- changes in pile properties (i.e. under-reams);
- changes in groundwater/pore-pressure profile.

If there are n layers between the ground surface and the toe of the pile:

$$Q_{se} = \sum_{j=1}^n \Delta Q_{se}^j$$

where:

$$\Delta Q_{se}^j = \text{incremental external skin friction accumulated within a soil layer outside the pile}$$

Within the layer:

$$\Delta Q_{se}^j = \Delta L_j P_e^j f_{se}^j$$

where:

$$\Delta L_j = \text{thickness of layer } j$$

P_e^j = average external perimeter of outside the pile in contact with soil in layer j

f_{se}^j = average external skin friction in layer j outside the pile

Similarly:

$$\Delta Q_{si}^j = \Delta L_j P_i^j f_{si}^j$$

where:

ΔQ_{si}^j = incremental internal skin friction accumulated within a soil layer inside the pile

P_i^j = average internal perimeter of the pile in contact with soil in layer j

f_{si}^j = average internal skin friction in layer j inside the pile

2.1.1 Shaft Friction

Two basic methods are available, total stress and effective stress. The former is appropriate to clays and soft rocks and the latter to cohesionless soils and clays for long term loading where the stress conditions are likely to change.

2.1.1.1 Total Stress Approach

The friction per unit area, f_s is given by:

$$f_s = \alpha c_u$$

where:

α = an adhesion factor

c_u = the average undrained shear strength in the layer

α may be either user-specified or calculated by the specified API method.

API Method 1

The current API code recommends that for driven tubular steel piles:

$$\alpha = 0.5 \Psi^{-0.5}, \Psi < 1.0$$

$$\alpha = 0.5 \Psi^{-0.25}, \Psi > 1.0$$

$$\Psi = c_u / \sigma_v'$$

where:

σ_v' = vertical effective stress

Caution is required for cases where Ψ is greater than 3 or for long flexible piles (a program warning is generated).

API Method 2

Earlier editions of the API code advised that:

$$\alpha = 1.0, c_u < 24\text{kPa}$$

$$\alpha = 0.5, c_u > 72\text{kPa}$$

with linear interpolation between these values.

2.1.1.2 Effective Stress Approach

The friction per unit area, f_s is computed by the following two methods.

Beta Method

The Beta method relates friction directly to vertical effective stress, σ_v' :

$$f_s = \beta \sigma_v'$$

Earth Pressure Method

More conventionally:

$$f_s = \sigma_h' \tan(\delta)$$

where:

σ_h' = average horizontal effective stress in layer

δ = soil/pile friction angle

σ_h' = either user-specified or calculated using:

$$\sigma_h' = K \sigma_v'$$

where:

K = earth pressure factor

2.1.1.3 Limiting Shaft Friction

Irrespective of the approach followed, the skin friction per unit area, f_s may be limited to a user-specified value.

If this value is set to zero, then the friction is assumed to increase indefinitely as one goes down the length of the pile.

2.1.1.4 Negative Skin Friction

Some layers may be defined as providing down-drag, in which case the cumulative capacity cannot contribute to the bearing capacity. The negative skin friction Q_{nsf} must be calculated separately to ensure that the factors of safety or partial load factors are applied correctly.

In bearing capacity calculations, negative skin friction is always calculated separately.

Cumulative skin friction is always exclusive of negative skin friction.

The negative skin friction is not taken into account when calculating the tension capacities, and in ["Design Resistance"](#) option.

2.1.2 End Bearing

Two basic methods are available, **total stress** and **effective stress** based. The former is appropriate to clays and soft rocks and the latter to cohesionless soils and clays for long term loading where the stress conditions are likely to change.

2.1.2.1 Total Stress Approach

In this approach, end bearing stress, q_b is given by:

$$q_b = N_c c_u$$

where:

N_c - the bearing capacity factor for cohesion

For solid piles $N_c = 9$ for embedment of over about $2D$.

where:

D - the diameter of the Pile

In the case of shallow embedment ($< 2D$), N_c is taken as zero and a warning to this effect is generated.

For hollow sections or H-piles, the pile wall acts more like a deep strip footing, therefore $N_c \approx 6$ is more appropriate.

2.1.2.2 Effective Stress Approach

In this approach, end bearing stress, q_b is given by:

$$q_b = N_q \sigma_v'$$

where:

σ_v' - the vertical effective stress at the base of the layer being considered

N_q - the bearing capacity factor for surcharge and friction.

The following methods may be used to calculate N_q :

i) N_q specified

The value of N_q can be user-specified.

ii) N_q calculated based on friction angle

The most commonly used method to assess N_q is that proposed by Berezantzev, as a function of drained friction angle ϕ . The relationship can be defined explicitly or as a look-up table.

iii) N_q based on mean effective stress, relative density and friction angle

A more refined approach is given by Bolton (1984) taking into account dilatancy effects and the influence of stress level, particularly with heavily loaded piles.

This is an iterative approach based on the following expressions:

$$I_R = I_D (10 - \ln p')^{-1}$$

where:

I_R - corrected relative density (0 to 1)

I_D - original relative density (0 to 1)

p' - mean effective stress (kPa), calculated as:

$$p' = (\sigma_v' + 2\sigma_h')/3$$

$$\phi = \phi_{cv}' + 3I_R \text{ (degrees)}$$

where:

ϕ_{cv}' = critical state angle of friction (degrees)

$$p' \approx (\sqrt{N_q})^* \sigma_v'$$

N_q is estimated using the Berezantzev method

To start the process it is suggested that N_q is first estimated using ϕ_{cv}' .

iv) N_q calculated based on friction angle, depth ratio (depth/width) and friction angle corresponding to the soil of overburden

This approach is based on the paper by [Berezantzev et al \(1961\)](#), wherein the bearing capacity is calculated from:

$$q_b = A_k \gamma B + B_k \alpha_T \sigma_v'$$

where:

A_k, B_k are coefficients depending upon ϕ , and are read from the $\phi - A_k$ and $\phi - B_k$ graphs respectively

γ is the unit weight of soil at the level of pile base. If the water table is above or at location of pile base, buoyant unit weight is used. Otherwise, bulk unit weight is used.

α_T is a function of D/B , ϕ' and ϕ_D .

ϕ_D pertains to the soil of overburden.

σ_v' is the effective vertical stress at the level of pile toe.

The value of N_q is then calculated from the resulting bearing capacity.

2.1.2.3 Limiting End Bearing

Irrespective of the approach followed, the end bearing stress q_b may be limited to a user-specified value.

If this value is set to zero, then the end bearing stress is assumed to increase indefinitely with increasing toe depth.

2.1.3 Bearing Capacity

The following capacities are calculated by the program.

Solid piles:

- Ultimate Capacity
- Allowable Capacity
- Design Capacity

Hollow piles:

- Plugged Capacity
- Unplugged Capacity (fixed and changing internal soil level)
- Ultimate capacity
- Allowable capacity
- Design Capacity

Solid piles

The total bearing capacity of solid piles is:

$$Q = Q_{se} + Q_b$$

where:

Q_{se} = cumulative skin (or shaft) friction

Q_b = end bearing

For piles in tension $Q_b = 0$

Hollow piles

The total bearing capacity of hollow piles is the lesser of:

$$Q_{\text{plugged}} = Q_{\text{bp}} + Q_{\text{bw}} + Q_{\text{se}} \text{ and}$$

$$Q_{\text{unplugged}} = Q_{\text{bw}} + Q_{\text{se}} + Q_{\text{si}}$$

where:

Q_{si} = cumulative internal skin friction (kN)

Q_{se} = cumulative external skin friction (kN)

Q_{bp} = end bearing acting over the soil plug area (kN)

Q_{bw} = end bearing acting over the pile wall area (kN)

For piles in tension $Q_{\text{bw}} = Q_{\text{bp}} = Q_{\text{si}} = 0$

2.1.3.1 Ultimate Capacity

Solid Piles

The ultimate bearing capacity, Q of solid piles is:

$$Q = Q_{\text{se}} + Q_b - Q_{\text{nsf}}$$

where:

Q_{se} = cumulative skin (or shaft) friction

Q_b = end bearing

Q_{nsf} = negative skin friction

For piles in tension $Q_b = Q_{\text{nsf}} = 0$

Hollow piles

The ultimate bearing capacity, Q of hollow piles is given by:

$$Q = \text{Minimum}(Q_{\text{plugged}}, Q_{\text{unplugged, case1}}, Q_{\text{unplugged, case2}})$$

where:

Q_{plugged} is the [plugged capacity](#) of the hollow pile

$Q_{\text{unplugged, case1}}$ is the [unplugged capacity for case 1](#)

$Q_{\text{unplugged, case2}}$ is the [unplugged capacity for case 2](#)

The above quantities are described below.

2.1.3.2 Plugged Capacity

The plugged capacity of hollow piles is given by:

$$Q_{\text{plugged}} = Q_{\text{bp}} + Q_{\text{bw}} + Q_{\text{se}} - Q_{\text{nsf,Ext}}$$

where:

Q_{se} = cumulative external skin friction exclusive of negative skin friction (kN)

Q_{bp} = end bearing acting over the soil plug area (kN)

Q_{bw} = end bearing acting over the pile wall area (kN)

$Q_{\text{nsf,Ext}}$ = external negative skin friction

For piles in tension, $Q_{\text{bp}} = Q_{\text{bw}} = Q_{\text{nsf,Ext}} = 0$

2.1.3.3 Unplugged Capacity

The unplugged capacity of hollow piles is given by:

$$Q_{\text{unplugged}} = Q_{\text{bw}} + Q_{\text{se}} + Q_{\text{si}} - Q_{\text{nsf,Ext}} - Q_{\text{nsf,Int}}$$

where:

Q_{si} = cumulative internal skin friction exclusive of negative skin friction (kN)

Q_{se} = The cumulative external skin friction exclusive of negative skin friction (kN)

Q_{bw} = end bearing acting over the pile wall area (kN)

$Q_{\text{nsf,Ext}}$ = external negative skin friction

$Q_{\text{nsf,Int}}$ = internal negative skin friction

When driving hollow piles it may not be possible to mobilise the full theoretical internal friction; this may be too great to allow the plug end bearing force to push the soil up inside the pile (typically in clay soils). In this situation the pile becomes plugged and the level of soil inside is lower than that outside. If the end bearing later increases within a deeper layer, the accumulated internal friction will be fully mobilised again and more material will be pushed up inside the pile. However the internal capacity will be less than if the plug level is at the ground surface.

Thus, there are two cases for calculation of unplugged capacity as described below.


- Case 1: Internal soil level is the same as external soil level, wherein the internal skin friction is calculated assuming an internal soil profile similar to the external soil profile. Thus, the external and internal friction will be in the ratio of external perimeter to internal perimeter of the pile.
- Case 2: Internal soil level changes with the driven pile depth. In this case, calculations are made at each depth increment to ensure that soil is pushed inside the pile only if the entire skin friction has been mobilised as follows.

During driving, the layers marked as contributing to negative skin friction will also act in the same way as the layers that do not contribute to negative skin friction.

However, the skin friction accumulated from the layers contributing to skin friction is stored separately from the skin friction from layers that do not contribute to negative skin friction.

Thus, it is assumed that the layers contributing to negative skin friction contribute to negative skin friction ONLY in the longer term, and not during the driving.

Consider two pile embedment depths $d1$ and $d2$ such that $d1 < d2$.

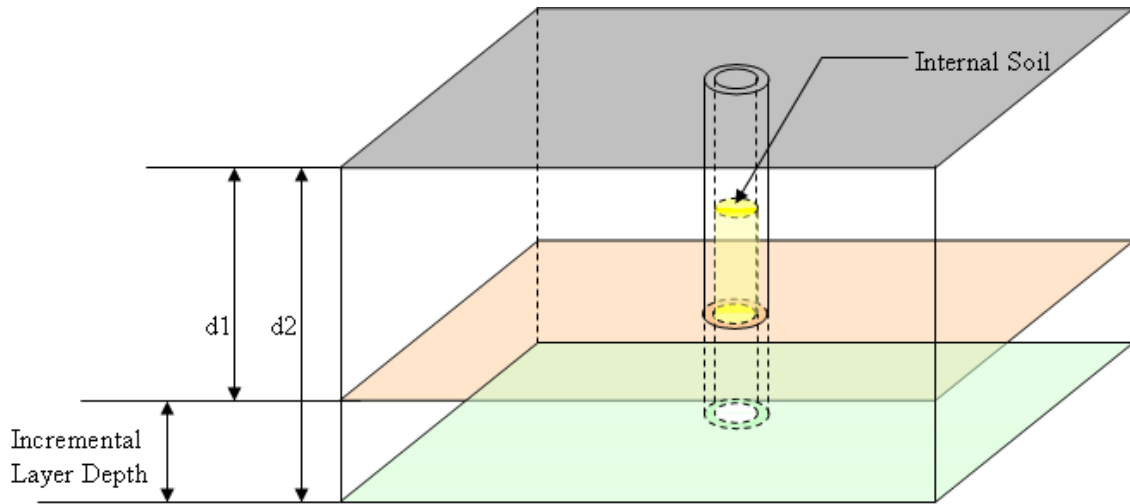

If the **incremental layer does not contribute to negative skin friction**

If

$$Q_{si,d1} + Q_{nsf,Int,d1} + Q_{si,inc} < Q_{bp,d2}$$

then

$$Q_{si,d2} = Q_{si,d1} + Q_{si,inc}$$

else

$$Q_{si,d2} = Q_{si,d1}$$

where:

$Q_{si,d1}$ = internal skin friction at a pile embedment depth $d1$

$Q_{si,d2}$ = internal skin friction at a pile embedment depth $d2$

$Q_{nsf,Int,d1}$ = cumulative internal negative skin friction accumulated over depth $d1$

$Q_{si,inc}$ = incremental internal skin friction between depths $d1$ and $d2$

$Q_{bp,d2}$ = bearing capacity at depth $d2$ over the plug area alone - excluding the wall area

However, if the incremental layer contributes to negative skin friction

If

$$Q_{si,d1} + Q_{nsf,Int,d1} + Q_{si,inc} < Q_{bp,d2}$$

then

$$Q_{nsf,Int,d2} = Q_{nsf,Int,d1} + Q_{si,inc}$$

else

$$Q_{nsf,Int,d2} = Q_{nsf,Int,d1}$$

where:

- $Q_{si,d1}$ = internal skin friction at a pile embedment depth d1
- $Q_{si,d2}$ = internal skin friction at a pile embedment depth d2
- $Q_{nsf,Int,d1}$ = cumulative internal negative skin friction accumulated over depth d1
- $Q_{nsf,Int,d2}$ = cumulative internal negative skin friction accumulated over depth d2
- $Q_{si,inc}$ = incremental internal skin friction between depths d1 and d2
- $Q_{bp,d2}$ = bearing capacity at depth d2 over the plug area alone - excluding the wall area

Note:

- The reported unplugged capacity from case 2 will be the minimum of the capacities from case 1 and case 2;
- For piles in tension, $Q_{bw} = Q_{nsf,Ext} = Q_{nsf,Int} = 0$.
- The program first divides the soil profiles into sub-layers with a minimum thickness of at least 1 cm or one-hundredth of the layer thickness - whichever is minimum. Then it uses bisection approach to find the transitions between plugged and unplugged phases.

2.1.3.4 Allowable Capacity - Working Load Approach

Traditionally, global factors of safety are applied to the ultimate end bearing capacity and the skin friction to take into account uncertainties in soil properties, loads, installation method and the calculation method and also to limit settlement.

Solid Piles

The factored load is termed the allowable or working load. For solid piles, this is defined as the lesser of:

$$P_d = (Q_s + Q_b)/F_g - Q_{nsf}$$

$$P_d = Q_s / F_{s1} + Q_b / F_b - Q_{nsf}$$

$$P_d = Q_s / F_{s2}$$

$$P_d = (f_{\text{allowable}}) * (A_p)$$

where:

Q_s = skin friction (cumulative positive skin friction)

Q_{nsf} = negative skin friction

Q_b = end bearing capacity of the solid pile

A_p = cross-sectional area of pile

$f_{\text{allowable}}$ = allowable stress in pile at working load (compression)

F_g = global factor applied to the calculated ultimate bearing capacity

F_{s1} = partial factor applied to the ultimate skin friction component

F_b = partial factor applied to the ultimate end bearing component

F_{s2} = factor applied to the ultimate skin friction component

Note: It is not mandatory to select all combinations. The same applies for the tension case and for hollow piles.

In tension, Q_b and Q_{nsf} are both zero, and the criteria are:

$$P_d = Q_s / F_{s2}$$

$$P_d = (f_{\text{allowable}}) * (A_p)$$

Note: The corresponding parameters (F_{s2} and $f_{\text{allowable}}$) for the tension case have to be explicitly specified.

Hollow piles

For hollow piles however, we have the following criteria to consider, owing to the plugged condition of the pile:

$$P_d = (Q_{se} + Q_{si} + Q_b) / F_g - Q_{\text{nsf},e} - Q_{\text{nsf},i}$$

$$P_d = (Q_{se} + Q_{si} + Q_b) / F_g - Q_{\text{nsf},e} - Q_{\text{nsf},i,\text{autoplugging}}$$

$$P_d = (Q_{se} + Q_b + Q_{\text{plug}}) / F_g - Q_{\text{nsf},e}$$

$$P_d = (Q_{se} + Q_{si}) / F_{s1} + Q_b / F_b - Q_{\text{nsf},e} - Q_{\text{nsf},i}$$

$$P_d = (Q_{se} + Q_{si}) / F_{s1} + Q_b / F_b - Q_{\text{nsf},e} - Q_{\text{nsf},i,\text{autoplugging}}$$

$$P_d = (Q_{se}) / F_{s1} + (Q_b + Q_{\text{plug}}) / F_b - Q_{\text{nsf},e}$$

$$P_d = (Q_{se}) / F_{s2}$$

$$P_d = (f_{allowable}) * (A_p)$$

where:

Q_{se} = external skin friction (excluding negative skin friction)

Q_{si} = internal skin friction (excluding negative skin friction)

$Q_{nsf,e}$ = external negative skin friction

$Q_{nsf,i}$ = internal negative skin friction - in this case, the top of the internal soil at the same level as ground level

$Q_{nsf,i,autoplugging}$ = internal negative skin friction - in this case, internal soil level changes with driven pile depth

Q_b = end bearing capacity of the hollow pile (over the wall area)

Q_{plug} = bearing capacity of the plugged portion of the hollow pile (excluding wall area)

A_p = cross-sectional area of pile

$f_{allowable}$ = allowable stress in pile at working load

F_g = global factor applied to the calculated ultimate bearing capacity

F_{s1} = partial factor applied to the ultimate skin friction component

F_b = partial factor applied to the ultimate end bearing component

F_{s2} = factor applied to the ultimate skin friction component

In tension, Q_b , Q_{plug} , $Q_{nsf,e}$ and $Q_{nsf,i}$ are all zero, and there are just the following criteria:

$$P_d = Q_{se} / F_{s2}$$

$$P_d = (f_{allowable}) * (A_p)$$

Note: The corresponding parameters (F_{s2} and $f_{allowable}$) for the tension case have to be explicitly specified.

2.1.3.5 Design Resistance - Limit State Approach

In limit state codes it is usual to assess the ultimate limit state (ULS) for one or more combinations of factored applied loads and material properties. Additional factors may be applied relating to the pile type and calculation method.

In EC7 terms the design action, based on factored loads, is compared with the design bearing resistance calculated using factored soil parameters and other related factors. Different factors are used, appropriate to one or more load cases. Other codes use a similar approach. The design bearing resistance **in compression** is the minimum of :

$$R_d = (R_{bk} / \gamma_b + R_{sk} / \gamma_s) / \gamma_{Rd}$$

$$R_d = (R_{bk} + R_{sk}) / (\gamma_t * \gamma_{Rd})$$

where:

R_{bk} = characteristic base resistance

R_{sk} = characteristic shaft resistance

γ_b and γ_s = base and shaft resistance factors respectively

γ_t = total resistance factor

γ_{Rd} = model factor (compression)

Only one of the above two combinations can be used depending on the code. For example, for EC7 calculations where shaft and base resistances are evaluated separately, only the first equation is applicable.

For solid piles the above definitions are straightforward. However, for hollow piles in compression, there are three conditions to be considered:

Unplugged condition - (internal soil level remains at ground level)

- R_{bk} is obtained by calculating bearing capacity only over the wall area.
- R_{sk} is obtained by adding the contributions of external skin friction and internal skin friction, assuming the internal soil level remains at ground level.

Unplugged condition - (internal soil level changes with driven pile depth)

- R_{bk} is obtained by calculating bearing capacity only over the wall area.
- R_{sk} is obtained by adding the contributions of external skin friction and internal skin friction, with the internal soil level not necessarily at ground level.

Plugged condition

- R_{bk} is obtained by calculating bearing capacity only over the wall area, and the plug area.
- R_{sk} is obtained by considering only the external skin friction.

For both hollow and solid piles in tension

$$R_d = (R_{sk})/(\gamma_{st} \gamma_{Rd})$$

where,

R_{sk} = characteristic shaft resistance (The internal skin friction is ignored for hollow piles in tension)

γ_{st} = shaft resistance factor in tension

γ_{Rd} = model factor (tension)

Depending on the load case under consideration, the characteristic resistances may or may not be determined using partial material factors. However, presently, **partial material factors are always applied when "Design Resistance" option is chosen.**

When calculating pile capacity it is important to note that the calculated bearing resistance is neither an allowable working load or an ultimate capacity, and must be compared with the

appropriately factored combination of applied loads, dependent on the design case being assessed.

The **negative skin friction** is treated as an "action" and is **not included** in the calculation of design resistance i.e. it is not subtracted from cumulative positive skin friction.

2.1.3.6 Code-Based

If the code-based option is chosen then one of the following design codes may be selected:

- EC7 (No National Annex)
- EC7 (United Kingdom)
- IS 2911

In EC7 (No National Annex) any of the three Design Approaches may be chosen, as may the Model Pile Procedure or Alternative Procedure. However, in EC7 (United Kingdom), only DA1 and the Alternative Procedure are allowed.

2.1.4 Solution Algorithm

1. divide the soil into required number of layers, based on:

- soil profile;
- effective stress profiles/groundwater profiles;
- depth of the pile (single or range);
- changes in the pile properties (eg. under-ream);

2. calculate the vertical stress profile and vertical effective stress profile (if not specified);

3. compute the skin friction and end bearing (if necessary) of each layer (as described below);

4. compute the cumulative positive skin friction and negative skin friction taking into account layers which contribute to negative skin friction;

5. compute the end bearing capacity of the pile;

6. compute the working load or the design resistance of the pile;

7. store the values obtained in steps 5 and 6, in order to plot the variation of the above quantities with depth.

2.1.4.1 Skin Friction Computation

If total stress:

1. Get the profile of c_u across the layer;
2. Get the profile of α across the layer (user-specified value or from API methods 1 or 2);
3. Get the profile of f_{se} and f_{si} (if necessary) across the layer, taking into account the limiting skin friction in the layer;

4. Get the average value of f_{se} and f_{si} for the layer;
5. Get the perimeter of the pile in the layer (both external and internal);
6. Compute external and internal skin friction provided by the layer;

Else if effective stress:

1. Get the profile of f_s based on the method selected:

If β method:

- a. Get the user-specified value β ;
- b. Get the profile of f_s from σ_v' profile using $f_s = \beta \sigma_v'$

Else if earth pressure method

- a. Get the profile of σ_h' (user-specified or using the value of earth pressure coefficient K , viz. $\sigma_h' = K\sigma_v'$);
 - b. Get the profile of f_s using the relation $f_s = \sigma_h' \tan \delta$, where δ is the friction angle between the pile and soil;
2. Get the average value of f_{se} and f_{si} for the layer;
 3. Get the perimeter P of the pile layer (both external and internal);
 4. Compute external and internal skin friction provided by the layer.

2.1.4.2 End Bearing Computation

1. Get the profile of bearing pressure, q_b :

If total stress:

- a. Get the profile of undrained cohesion, c_u , across the layer;
- b. Get value of N_c (user-specified or calculated) based on embedment depth;
- c. Get the profile of bearing pressure from $q_b = N_c c_u$;

Else if effective stress:

- a. Get the profile of σ_v' across the layer (either calculated or user-specified);
- b. Get the value of N_q – either user-specified, or Berezantzev Method or Bolton method;
- c. Get the bearing pressure, q_b from $q_b = N_q \sigma_v'$;

2. Get the cross sectional area of the pile base, pile wall, and soil plug as appropriate;
3. compute end bearing capacity of the pile.

2.1.4.2.1 Berezantzev Method

The following steps are implemented in the N_q calculation algorithm when "Berezantzev method" is selected in the [Effective stress](#) table view.

i) Berezantzev A_k B_k Curves

These curves are based on the paper by [Berezantzev et al \(1961\)](#).

This calculation algorithm is performed when the standard "Berezantzev A_k B_k Curves" option is selected in the N_q -Phi curve field of the [Effective stress](#) table view.

1. Get the user-specified value of drained friction angle ϕ' for the layer at the location of pile toe depth;
2. Get the user-specified value of friction angle ϕ_D corresponding to the soil of overburden;

Note: When there are multiple soil layers around the shaft, the program uses the user-specified ϕ_D of the layer at the location of pile toe depth as the equivalent ϕ_D of the whole overburden soil around the pile shaft.

3. From the given ϕ' value interpolate/extrapolate the value of coefficients A_k and B_k from the $\phi' - A_k$ and $\phi' - B_k$ graphs respectively;
4. The values of A_k and B_k in the program are calculated by the polynomial equations generated for the data points that are read from the graph;

Note: In digitising the curve, the lower bound values have been read.

the generated polynomial equations for A_k and B_k are given below:

$$A_k = 0.00261719 \times (\phi')^4 - 0.300278 \times (\phi')^3 + 13.0706 \times (\phi')^2 - 253.216 \times (\phi') + 1837.45$$

$$B_k = 0.0033242 \times (\phi')^4 - 0.363837 \times (\phi')^3 + 15.1495 \times (\phi')^2 - 280.875 \times (\phi') + 1955.20$$

Note: For the above two equations, the units of ϕ' are in degrees.

5. From the given ϕ' , ϕ_D and depth ratio (depth/width), calculate the value of α_T which is given by the following equation:

$$\alpha_r = 1 - \frac{2 \times f(\phi_D)}{s(\phi)} \times \left[1 + \frac{H\left(\frac{D}{B}\right)}{g(\phi_D)} \{1 - P(\phi_D)\} \right]$$

where:

$$\lambda = 2 \times \tan \phi_D \times \tan \left(\frac{\pi}{4} + \frac{\phi_D}{2} \right)$$

$$f(\phi_D) = \frac{\tan(\phi_D) \times \tan \left(\frac{\pi}{4} - \frac{\phi_D}{2} \right)}{\lambda - 1}$$

$$s(\phi) = \left[1 - \left(\frac{\ell_0}{R} \right)^{-2} \right]$$

$$g(\phi_D) = (2 - \lambda) \times \tan \left(\frac{\pi}{4} - \frac{\phi_D}{2} \right)$$

$$\ell_0 = R \times \left[1 + \frac{\left(\sqrt{2} \times e^{\left(\frac{\pi}{2} - \frac{\phi}{2} \right) \times \tan \frac{\phi}{2}} \right)}{\sin \left(\frac{\pi}{4} - \frac{\phi}{2} \right)} \right]$$

$$H\left(\frac{D}{B}, \phi\right) = \frac{1}{2 \times \left(\frac{D}{B}\right)} \times \left[1 + \frac{\left(\sqrt{2} \times e^{\left(\frac{\pi}{2} - \frac{\phi}{2} \right) \times \tan \frac{\phi}{2}} \right)}{\sin \left(\frac{\pi}{4} - \frac{\phi}{2} \right)} \right]$$

$$P\left(\phi_D, \phi', \frac{D}{B}\right) = \left\{ 1 + \left[\frac{1}{H\left(\frac{D}{B}\right)} \times \tan\left(\frac{\pi}{4} - \frac{\phi_D}{2}\right) \right] \right\}^{2-\lambda}$$

where:

R = radius of the pile

D = depth of the pile toe

B = diameter of the pile

ϕ' = angle of friction of the soil layer at the pile base

ϕ_D = angle of friction of the soil layer around the pile shaft

Note: For all the equations related to the calculation of α_T above, the units of ϕ' and ϕ_D are in radians. Also, in the [Berezantzev \(1961\)](#) paper, the value of α_T is given in a table as a function of D/B and ϕ_D alone. The ϕ' term does not seem to be considered when evaluating α_T . But, in the equation above, which has been derived based on the theory in the [Berezantzev \(1961\)](#) paper, the effect of both ϕ' and ϕ_D is considered.

6. Finally calculate the value of end bearing pressure q_b .

$$q_b = A_k \gamma B + B_k \alpha_T \sigma'_v$$

where:

σ'_v = effective vertical stress at the level of pile base

γ = unit weight of soil at the level of pile base. If the water table is above or at the location of the pile base, buoyant unit weight is used. Otherwise, bulk unit weight is used.

B = diameter of the pile

ii) User-defined Nq-Phi curve

This calculation algorithm is performed when any user-defined Nq-Phi curve is selected in the Nq-Phi curve field of the [Effective stress](#) table view.

1. Get the user-specified value of drained friction angle ϕ ;
2. Get the value of Nq based on user-specified equation or user-specified look-up table.

2.1.4.2.2 Bolton Method

This is a more refined approach is given by [Bolton \(1984\)](#), taking into account dilatancy effects and the influence of stress level, particularly with heavily loaded piles.

It involves the following steps:

1. Get the user-specified values of ϕ_{cv}' and I_R ;

where:

I_R = corrected relative density (0 to 1).

2. Get the value of $\phi' = \phi_{cv}' + 3I_R$;

3. Get the value of N_q using the [Berezantzev](#) method;

4. Get the value of mean effective stress p' , using the relation $p' \approx \sqrt{(N_q \sigma_v')}$;

5. Get the value of I_R using the relation $I_R = I_D (10 - \ln p')^{-1}$,

where:

I_R = Corrected relative density (0 to 1),

I_D = Original relative density (0 to 1).

6. Get the value of $\phi' = \phi_{cv}' + 3I_R$;

7. Get the value of N_q using the [Berezantzev](#) method;

8. If difference between the new value of N_q and value of N_q from step 3 is within tolerance, stop the iteration, else repeat steps 4 to 8.

2.2 Settlement

Settlement analysis calculates the settlement of a range of piles with different lengths and cross-section dimensions and of the surrounding soil. Pile soil slip is modelled, together with the effects of soil heave inducing tension, or settlement causing compression and negative skin friction. Currently, only solid circular piles can be analysed for settlements. The solid square pile is modelled by an equivalent circular pile whose area is the same as the original square pile.

There are two methods provided by the program for the settlement analysis: a) Mindlin (based on finite difference method)

finite element method)

b) t-z Curves (based on


2.2.1 Mindlin Approach

2.2.1.1 Theory of Analysis

Settlement calculation is based on theoretical analyses of the settlement of single compressible piles using linear elastic theory. The analysis uses the integral method adopted by [Mattes and Poulos](#), and is explained briefly below.

[Limiting shaft skin friction](#) is calculated from the material properties.

Soil Displacements

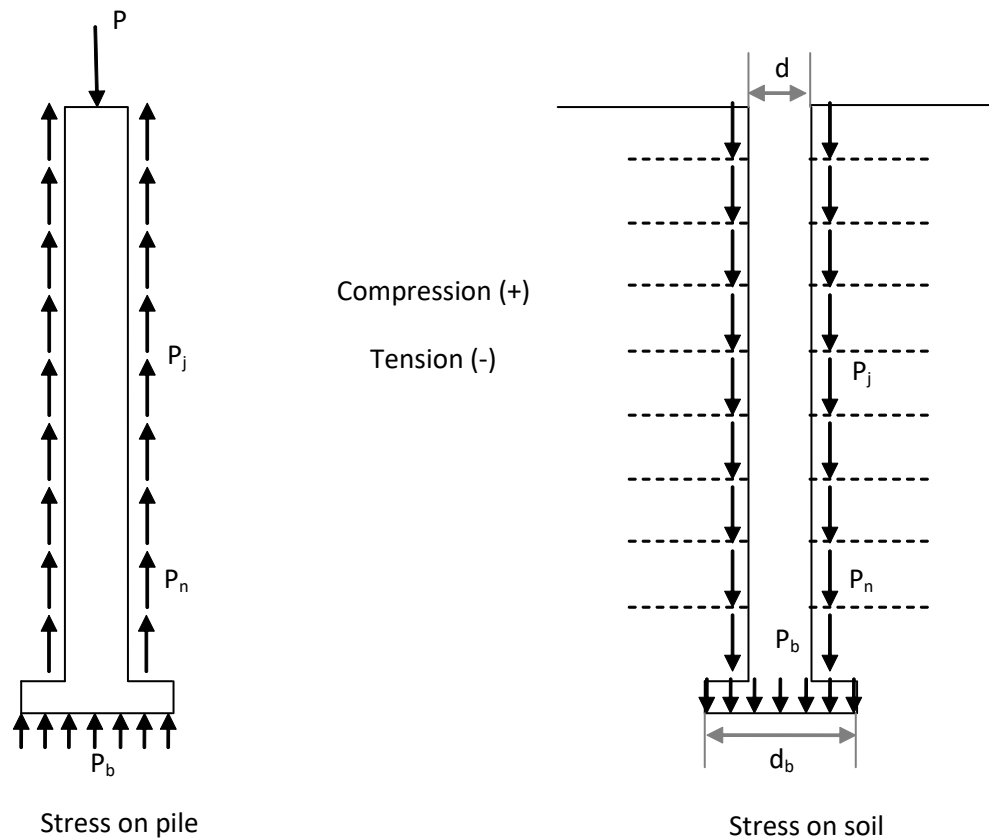

Stresses acting on Pile and Adjacent Soil

The soil displacements adjacent to the pile can be expressed by:

$$\{\rho^s\} = \frac{d}{E^s} [l^s] \{p\}$$

where:

$\{\rho^s\}$ = soil displacement vector

$$\{\rho^s\} = \begin{Bmatrix} \rho_1^s \\ \rho_2^s \\ \rho_3^s \\ \vdots \\ \vdots \\ \rho_n^s \\ \rho_b^s \end{Bmatrix}$$

$\{\rho^s\}$ = shaft skin friction vector

$$\{p^s\} = \begin{Bmatrix} p_1 \\ p_2 \\ p_3 \\ \vdots \\ \vdots \\ p_n \\ p_b \end{Bmatrix}$$

E^s = soil Young's modulus

n = number of nodes on pile shaft

$[l^s]$ = soil displacement factor matrix

$$[l^s] = \begin{bmatrix} l_{11} & l_{12} & \dots & \dots & l_{1n} & l_{1b} \frac{d_b}{d} \\ l_{21} & l_{22} & \dots & \dots & l_{2n} & l_{2b} \frac{d_b}{d} \\ \dots & \dots & \dots & \dots & \dots & \dots \\ l_{n1} & l_{n2} & \dots & \dots & l_{nn} & l_{nb} \frac{d_b}{d} \\ l_{b1} & l_{b2} & \dots & \dots & l_{bn} & l_{bb} \frac{d_b}{d} \end{bmatrix}$$

in which d = diameter of pile shaft
 d_b = diameter of pile base

where superscript s and subscript b denote soil and pile base respectively.

The elements in $[l^s]$ are derived from [integrations of Mindlin's equations](#).

The equation can be rewritten in the form of soil stiffness:

$$\{p\} = \frac{E^s}{d} [l^s]^{-1} \{\rho^s\}$$

Pile Displacements

The pile shaft stresses at nodes can be expressed by:

$$\{p\} = \frac{d}{4\delta^2} E^p R_A [l^p] \{\rho^p\} + \{Y\}$$

where:

superscript p denotes pile

$\{\rho^p\}$ = pile displacement vector

$$\{\rho^p\} = \begin{Bmatrix} \rho_1^p \\ \rho_2^p \\ \rho_3^p \\ \vdots \\ \vdots \\ \rho_n^p \\ \rho_b^p \end{Bmatrix}$$

δ = length of pile element

E^p = pile Young's Modulus

$$R_A = \frac{A}{1/4 \pi d^2}$$

A = pile cross-sectional area

$[l^p]$ = pile action matrix

$$[l^p] = \begin{bmatrix} -1 & 1 & 0 & 0 & \dots & \dots & \dots & 0 \\ 1 & -2 & 1 & 0 & \dots & \dots & \dots & 0 \\ \dots & \dots & \dots & \dots & \dots & \dots & \dots & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 & -2 & 1 \\ 0 & 0 & 0 & 0 & -0.2 & 2 & -5 & 3.2 \\ 0 & 0 & 0 & 0 & 0 & -1.33f & 12f & -10.67f \end{bmatrix}$$

in which:

$$f = \frac{\delta}{dR_A}$$

$\{Y\}$ = applied stress vector

$$\{Y\} = \frac{1}{\pi d \delta} \begin{Bmatrix} F_1 \\ F_2 \\ F_3 \\ \vdots \\ \vdots \\ F_n \\ F_b \end{Bmatrix}$$

in which:

F = applied force at node down the pile

The elements in $[l^p]$ are obtained using the [finite difference method](#).

Displacement Compatibility

When elastic conditions at the pile-soil interface are maintained, the displacements of adjacent points along the interface are equal.

$$\{\rho^s\} = \{\rho^p\} = \{\rho\}$$

$$\left[\frac{E^s}{d} [l^s]^{-1} - \frac{d}{4\delta^2} E^p R_A [l^p] \right] \{\rho\} = \{Y\}$$

The pile displacements are then calculated and shaft skin frictions are calculated from those pile displacements.

Effect of Rigid Boundary

The elements of $[l^s]$ apply only for the soil having an infinite depth, i.e. a floating pile. To allow for the effect of a rigid boundary on the pile displacement the [mirror-image](#) approximation suggested by [D'Appolonia and Romualdi](#) was introduced. The elements in $[l^s]$ are then corrected to $(l_{ij} - l'_{ij})$

where:

l_{ij} = vertical displacement factor for i due to shear stress on element j

l'_{ij} = vertical displacement factor for i due to shear stress on imaginary element j'

Pile-Soil Slip

Displacement compatibility requires that no slip occurs at the pile-soil interface. However, real soils have a finite shear strength. Slip or local yield will occur when the shaft skin friction reaches the limiting value so the elastic analysis as previously described is modified to take account of the possible slip.

For any loading stage, first the displacements are solved on the assumption that all elements are elastic. From these displacements the shear stresses are calculated and are then compared with

the specified limiting stresses. At an element, say element i , if the computed skin friction p_i exceeds the limiting value T_i the extra displacement caused by the out-of-balance force is calculated and is added to the previous elastic solution. The shear stresses are then calculated again based on the modified displacements. The procedure is repeated until all the computed shear stresses do not exceed the appropriate limiting shear stresses.

Downward drag (or gap between pile base and soil) correction

If there is a gap between the pile base and the soil beneath then Pile ignores the force due to end-bearing and iterates until force equilibrium and displacement compatibility are achieved.

Correction of Soil Stiffness

To allow for the two different soil stiffnesses above and below the pile toe an approximate treatment is included in the program.

The elements of the flexibility matrix $\{\delta\}$ consist of two components:

$$\delta_{ii} = \delta_{bi}(E_b) + (\delta_{ii} - \delta_{bi})(E_s)$$

where:

$\delta_{bi}(E_b)$ = displacement at the pile toe in the soil with E_b due to a unit load at element i

$(\delta_{ij} - \delta_{bi})(E_s)$ = relative displacement between i and b in the soil with E_s due to a unit load at element i ;

$$\delta_{ij} = \delta_{ji}(E_s) \times F_{ij} = \delta_{ij}$$

where F_{ij} is the smaller of:

$$\frac{\delta_{ii}}{\delta_{ii}(E_s)} \text{ and } \frac{\delta_{jj}}{\delta_{jj}(E_s)}$$



in which:

$\delta_{ii}(E_s)$ = displacement at element i in a soil with E_s due to a unit load at element i

$\delta_{jj}(E_s)$ = displacement at element j in a soil with E_s due to a unit load at element j

2.2.1.2 Integration of Mindlin's equations

Displacement of Point i due to Stress on Element j

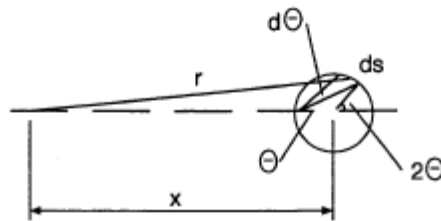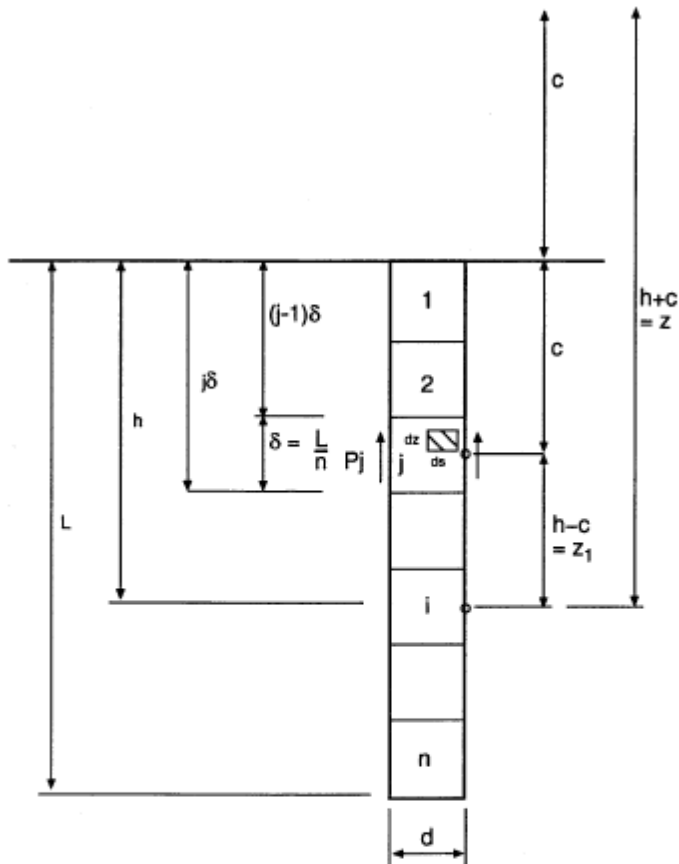

Geometry of Single Pile

For a general point i , the value of l_{ij} is

$$l_{ij} = 2 \int_{(j-1)\delta}^{j\delta} \int_0^{\pi/2} l^p d\theta dc$$

where:

l^P = influence factor for vertical displacement due to a vertical point load

From Mindlin's equation, l^P is given by:

$$l^P = \frac{(1 + \vartheta)}{8\pi(1 - \vartheta)} \left\{ \frac{z_1}{R_1^3} + \frac{(3 - 4\vartheta)}{R_1} + \frac{(5 - 12\vartheta + 8\vartheta^2)}{R_2} + \frac{[(3 - 4\vartheta)z^2 - 2cz + 2c^2]}{R_2^3} + \frac{[6cz^2(z - c)]}{R_2^5} \right\}$$

where:

$$z = h + c$$

$$z_I = h - c$$

$$R_1^2 = \frac{d^2}{4} + x^2 + dx \cos 2\theta + z_1^2$$

$$R_2^2 = \frac{d^2}{4} + x^2 + dx \cos 2\theta + z^2$$

The integral with respect to c is given by:

$$l^P dc = \frac{(1 + \vartheta)}{8\pi(1 - \vartheta)} \left\{ \frac{z_1}{D_1} - 4(1 - \vartheta) \ln(z_1 + D_1) + 8(1 - 2\vartheta + \vartheta^2) \ln(z + D) \right. \\ \left. + \frac{[2h^2z/r^2 - 4h - (3 - 4\vartheta)z]}{D} + \frac{2(hr^2 - h^2z^3/r^2)}{D} \right\}$$

where:

$$D_1 = \sqrt{(r^2 + z_1^2)}$$

$$D = \sqrt{(r^2 + z^2)}$$

and the limits of integration are:

$$z_I \text{ from } h - (j - 1)d \text{ to } h - jd$$

$$z \text{ from } h + (j - 1)d \text{ to } h + jd$$

The integration with respect to c is evaluated by numerical means.

Displacement of Base Centre due to Stress on Element j

$$l_{bj} = \pi \int_{(j-1)\delta}^{j\delta} l^p dc$$

the integral with respect to c is

$$l^p dc = \frac{(1 + \vartheta)}{8\pi(1 - \vartheta)} \left\{ \frac{z_1}{D_1} - 4(1 - \vartheta) \ln(z_1 + D_1) + 8(1 - 2\vartheta + \vartheta^2) \ln(z + D) \right. \\ \left. + \frac{[2h^2 z/r^2 - 4h - (3 - 4\vartheta)z]}{D} + \frac{2(hr^2 - h^2 z^3/r^2)}{D} \right\}$$


where:

$$h = L$$

$$D^2 = z^2 + \frac{d^2}{4}$$

$$D_1^2 = z_1^2 + \frac{d^2}{4}$$

Displacement of Base due to the Base itself

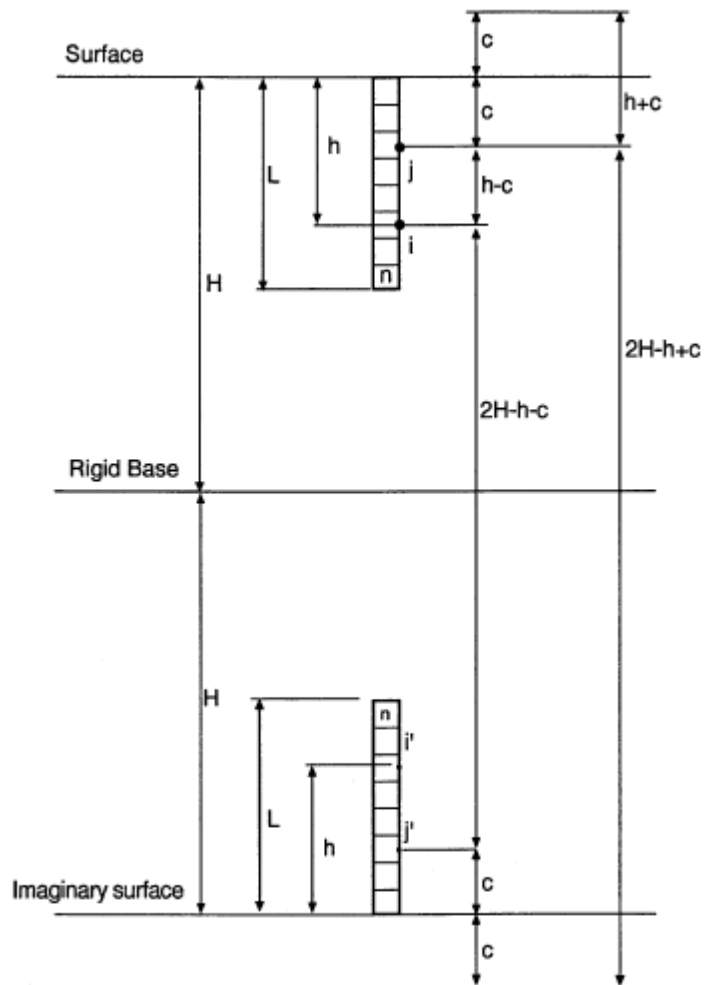

Geometry of Integration Over Pile Base Area

$$l_{bb} = \frac{\pi^2}{2d} \int_0^{d_b/2} l^p r dr$$

with:

$$c = L$$

$$R_I = r$$

$$R_2^2 = 4c^2 + r^2$$

$$z_I = 0$$

therefore:

$$l_{bb} = \frac{\pi(1+\vartheta)}{16(1-\vartheta)d} \left\{ (3-4\vartheta) \frac{d_b}{2} + (5-12\vartheta+8\vartheta^2)(R-z) + \frac{(5-8\vartheta)}{2} z^2 \left(\frac{1}{z} - \frac{1}{R} \right) + \frac{z}{2} - \frac{z^4}{2R^3} \right\}$$

where:

$$R = \sqrt{\left(z^2 + \frac{d_b^2}{4} \right)}$$

$$z = 2L$$

Displacement of Point i due to the Base

$$l_{jb} = \frac{1}{d} \int_0^{2\pi} \int_0^{d_b/2} l^p r dr d\theta$$

with:

$$c = L$$

$$R_1^2 = z_1^2 + x^2 + r^2 - 2rx \cos \theta$$

$$R_2^2 = z^2 + x^2 + r^2 - 2rx \cos \theta$$

$$z = z_I + 2c$$

the integration with respect to r is:

$$\begin{aligned} l^p r dr = \frac{(1+\vartheta)}{8\pi(1-\vartheta)} \left\{ \frac{z_1^2(rA - R_0^2)}{(R_0^2 - A^2)\sqrt{x_0}} + (3+4\vartheta)[\sqrt{x_0} + A \ln(r - A + \sqrt{x_0})] \right. \\ + (5-12\vartheta+8\vartheta^2)[\sqrt{x_1} + A \ln(r - A + \sqrt{x_1})] \\ + [(3-4z^2) - 2cz + 2c^2] \frac{(rA - R_1^2)}{(R_1^2 - A^2)\sqrt{x_1}} \\ \left. + 2cz^2(z-c) \left[\frac{(rA - R_1^2)}{(R_1^2 - A^2)\sqrt{x_1}} + \frac{2A(r-A)}{(R_1^2 - A^2)^2\sqrt{x_1}} \right] \right\} \end{aligned}$$

where:

$$R_0^2 = z_1^2 + x^2$$

$$A = x \cos \theta$$

$$x_0 = r^2 - 2Ar + R_0^2$$

$$R_1^2 = z^2 + x^2$$

$$x_1 = r^2 - 2Ar + R_1^2$$

$$z = z_I + 2c$$

$$c = L$$

The limit of integration is from 0 to $d_b/2$. The integration with respect to r is evaluated by numerical means.

It is assumed that the influence of the pile base on the displacement of i is negligible, hence

$$l_{ib} = 0$$

Mirror-Image Method


The element l_{ij}' is similar to l_{ij} , but with

$$z = 2H - h + c \text{ and}$$

$$z_I = 2H - h - c$$

2.2.1.3 Pile Stiffness Matrix

In calculating the displacement of the pile itself, only axial compression of the pile is considered.

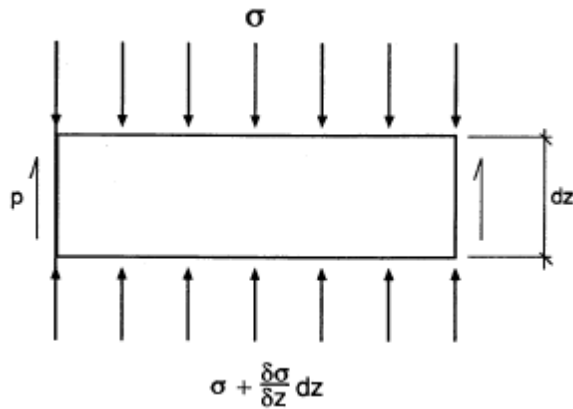

Consider the vertical equilibrium of a small element of the pile.

An equilibrium equation can be derived as:

$$\frac{\delta \sigma}{\delta z} = -\frac{p\pi d}{A} = -\frac{4p}{R_A d}$$

The axial strain of the element is approximately:


$$\frac{\delta \rho}{\delta z} = -\frac{\sigma}{E^p}$$

therefore:


$$\frac{\delta^2 \rho}{\delta z^2} = \frac{4p}{d} \frac{1}{E^p R_A}$$

This is solved by using finite difference method which may be approximately expressed by the Taylor Expansion.


Difference Formulations

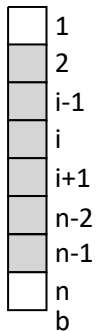


(i)

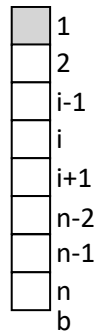

(ii)

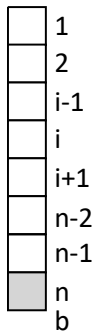

(iii)

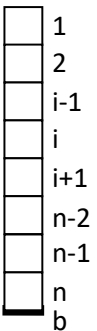

(iv)

(i) For $2 \leq i \leq n-1$

$$\rho_{i-1} = \rho_i - \delta \rho'_i + \frac{1}{2} \delta^2 \rho''_i$$

$$\rho_{i+1} = \rho_i + \delta \rho'_i + \frac{1}{2} \delta^2 \rho''_i$$

$$\rho''_i = \frac{\rho_{i-1} - 2\rho_i + \rho_{i+1}}{\delta^2}$$

therefore:

$$p_i = \frac{d}{4} E^p R_A \frac{(\rho_{i-1} - 2\rho_i + \rho_{i+1}))}{\delta^2}$$

(ii) For $i = 1$

$$\sigma = \frac{F_1}{A}$$

$$\frac{\delta \rho}{\delta z} = -\frac{\delta}{E^p} = -\frac{F_1}{AE^p}$$

$$\rho'_1 = \rho_1 - \delta \rho'_i$$

$$\rho'_1 = \frac{\rho_1 - \rho'_1}{\delta} = -\frac{F_1}{AE^p}$$

$$\rho'_1 = \rho_1 + \frac{F_1 \delta}{AE^p}$$

$$p_1 = \frac{d}{4} E^p R_A \frac{(-\rho_1 + \rho_2)}{\delta^2} + \frac{F_1}{\pi d \delta}$$

(iii) For $i = n$

$$\rho_b = \rho_n + 1/2 \delta \rho'_n + \frac{\delta^2}{8} \rho''_n$$

$$\rho_{n-2} = \rho_n + 2\delta \rho'_n + 4\delta^2 \rho''_n$$

so:

$$16\rho_b - \rho_{n-2} - 15\rho_n = 10\delta \rho'_n$$

$$\rho_{n-1} = \rho_n - \delta \rho'_n + 1/2 \delta^2 \rho''_n$$

or:

$$\rho'_n = \frac{1}{\delta} (\rho_n - \rho_{n-1} + 1/2 \delta^2 \rho''_n)$$

so:

$$16\rho_b - \rho_{n-2} - 15\rho_n = 10(\rho_n - \rho_{n-1} + 1/2 \delta^2 \rho''_n)$$

$$\rho''_n = \frac{1}{\delta^2} (-0.2\rho_{n-2} + 2\rho_{n-1} - 5\rho_n + 3.2\rho_b)$$

therefore:

$$\rho_n = \frac{d E^p R_A}{4 \delta^2} (-0.2 \rho_{n-2} + 2 \rho_{n-1} - 5 \rho_n + 3.2 \rho_b)$$

(iv) For pile base:

$$\rho_n = \rho_b - \frac{1}{2} \delta \rho'_b + \frac{\delta^2}{8} \rho''_b$$

$$\rho_{n-1} = \rho_b - \frac{3}{2} \delta \rho'_b + \frac{9}{8} \delta^2 \rho''_b$$

so:

$$\rho'_b = \frac{\rho_{n-1} - 9 \rho_n + 8 \rho_b}{3 \delta} = \frac{-p_b}{E^p}$$

therefore:

$$p_b = \frac{d E^p R_A}{4 \delta^2} \frac{\delta}{d R_A} \left(-\frac{4}{3} \rho_{n-1} + 12 \rho_n - \frac{32}{3} \rho_b \right)$$

$$p_b = \frac{d E^p R_A}{4 \delta^2} \left(-\frac{4}{3} f \rho_{n-1} + 12 f \rho_n - \frac{32}{3} f \rho_b \right)$$

where:

$$R_A = \frac{A}{1/4 \pi d^2}$$

$$f = \frac{\delta}{d R_A}$$

Pile Stiffness

The pile stiffness matrix is given by:

$$\frac{d E^p R_A}{4 \delta^2} \begin{bmatrix} -1 & 1 & 0 & 0 & \dots & \dots & \dots & 0 \\ 1 & -2 & 1 & 0 & \dots & \dots & \dots & 0 \\ \dots & \dots & \dots & \dots & \dots & \dots & \dots & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 & -2 & 1 \\ 0 & 0 & 0 & 0 & -0.2 & 2 & -5 & 3.2 \\ 0 & 0 & 0 & 0 & 0 & -1.33f & 12f & -10.67f \end{bmatrix}$$

2.2.2 t-z Curves

2.2.2.1 Soil Stiffness Matrix

The soil stiffness matrix is given by:

$$\begin{bmatrix} k_{11} & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & k_{22} & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & \dots & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & \dots & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & k_{ii} & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & \dots & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & k_{nn} \end{bmatrix}$$

where k_{ii} is the stiffness at node i , obtained from the t-z curve associated with the soil material in which the node lies. For the last node, i.e. for the base, the stiffness is sum of the stiffness obtained from t-z curve and the stiffness obtained from the tip load curve associated with the soil material in which the last node lies.

$$k_{shaft-node} = (k_{t-z})_{shaft-node}$$

$$k_{base-node} = (k_{t-z})_{base-node} + (k_{tip\ load})_{base-node}$$

If the node lies at the junction of two layers, then the top layer's curve is used.

The stiffness terms for the shaft and base springs are dependent on the type of t-z curves.


The types of t-z curves and tip load supported by the program are:

- Elastic-Plastic ([Randolph and Wroth](#));
- [Hyperbolic](#) (Chin & Poulos)
- Logarithmic
- [API](#)
- Empirical ([Vijayvergiya](#)); and
- User specified, in which stiffness values are calculated directly from stress-displacement curves given by the user.


2.2.2.1.1 Elastic-Plastic Curves

These curves are characterized by a constant stiffness till yield. After yield, the stiffness is zero. This is common to both the shaft and base curves. It is also important to note that the base curves are limited to compression only. They do not carry tension.

Typical elastic-plastic t-z curve is shown below:

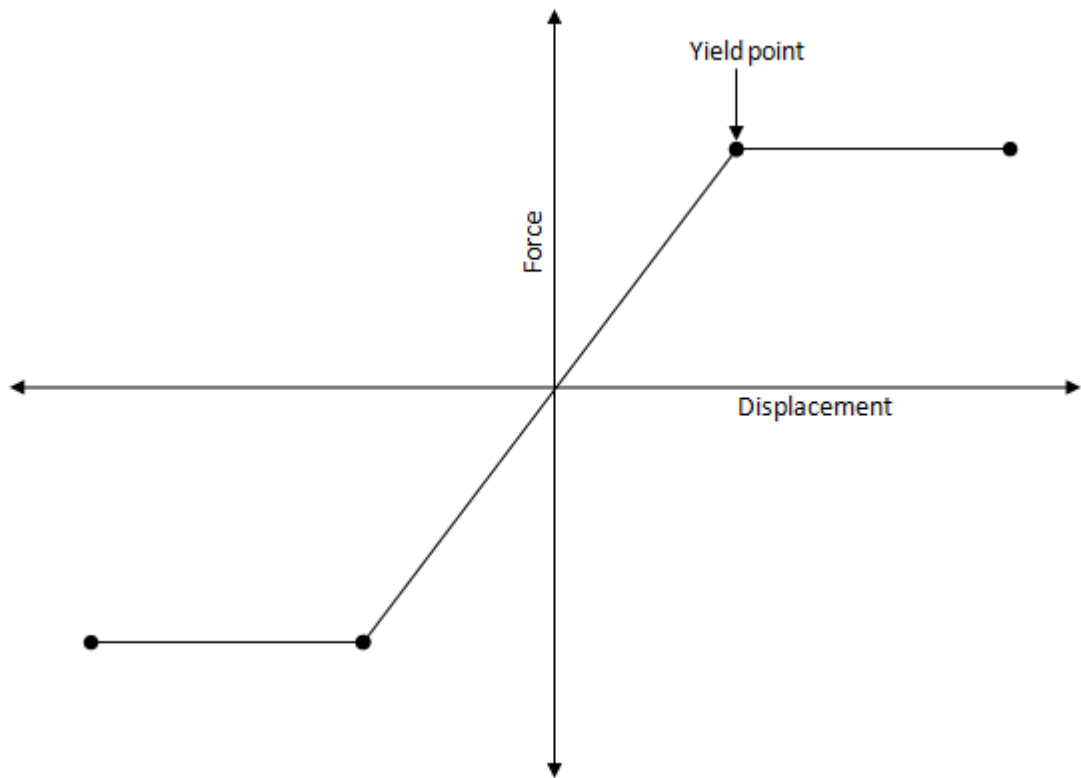

Typical elastic-plastic tip load load curve is shown below:

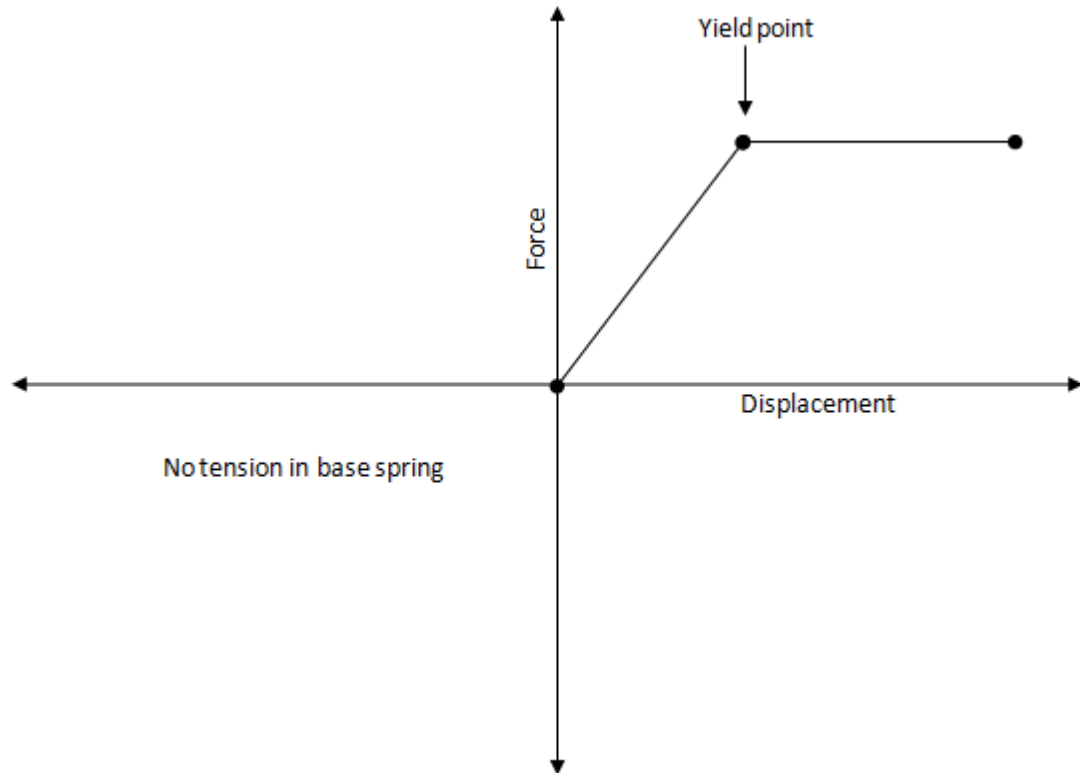

2.2.2.1.2 Hyperbolic Curves

These are based on Chin & Poulos (1991). These show a continuous degradation of stiffness with increasing load.

The equation for the initial loading curve for the shaft is given by:

$$z = \frac{\tau_0 r_0}{G_{max}} \ln \left[\frac{\frac{r_m}{r_0} - \frac{\tau_0}{\tau_f} R_f}{1 - \frac{\tau_0}{\tau_f} R_f} \right]$$

where :

r_0 is the radius of the pile

τ_0 is the pile-soil interface shear stress

τ_f is the limiting shear stress

r_m is the empirical distance at which the shear stress in the soil becomes negligible


R_f is a hyperbolic constant which controls the shape of the Force-displacement curve.

G_{max} is the initial shear modulus.

The displacement at maximum force is controlled by a hyperbolic constant R_f . For $R_f = 1$, the pile displacement is infinite at maximum force. The program generates 10 (t,z) pairs between $\tau_0 = 0$

and $\tau_0 = \tau_f$.

Typical t-z curve of this type is shown below:

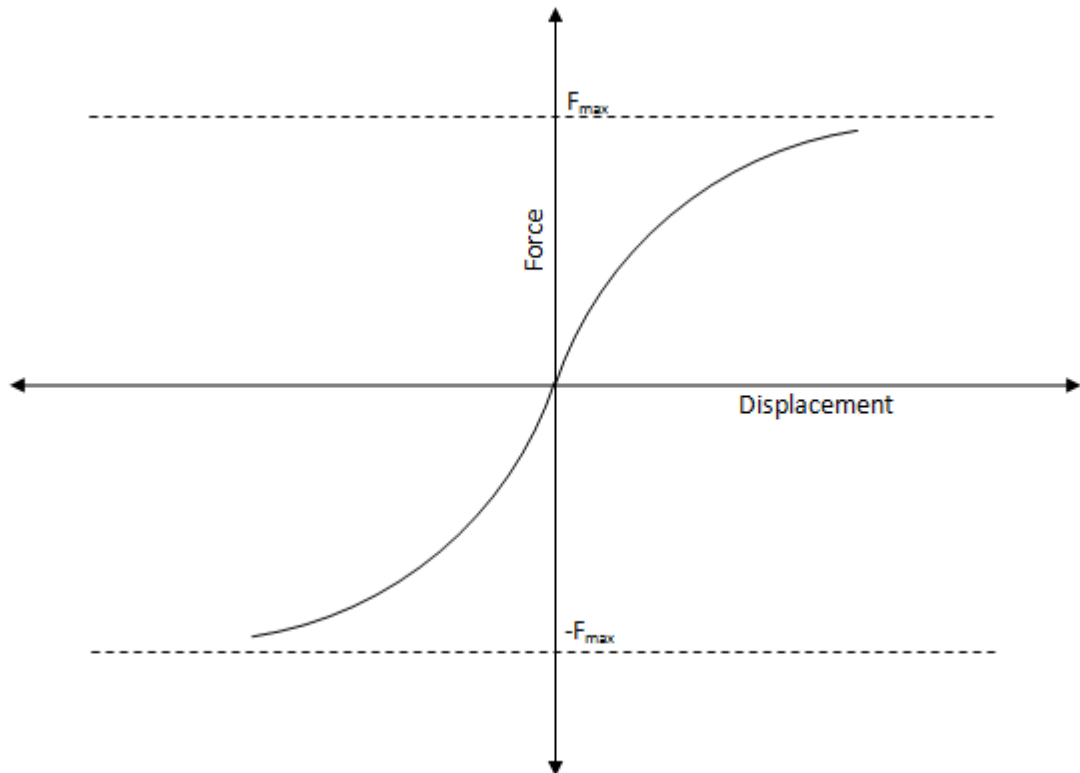

The equation for the initial loading curve for the base is given by:

$$z = \frac{p_b}{k_i * \left(1 - \frac{p_b * R_{fb}}{p_f}\right)}$$

where:

p_b is the mobilised shear load

R_{fb} is the hyperbolic curve fitting constant for the base


p_f is the limiting base load

k_i is the initial stiffness at the base and is given by

$$k_i = \frac{4G_i r_0}{(1 - \nu)} = \frac{2E_i r_0}{(1 - \nu^2)}$$

In the above expression, E_i and G_i are the initial Young's modulus and shear modulus of the soil respectively, and ν is the Poisson's ratio of the soil.


Typical tip load curve of this type is given below:

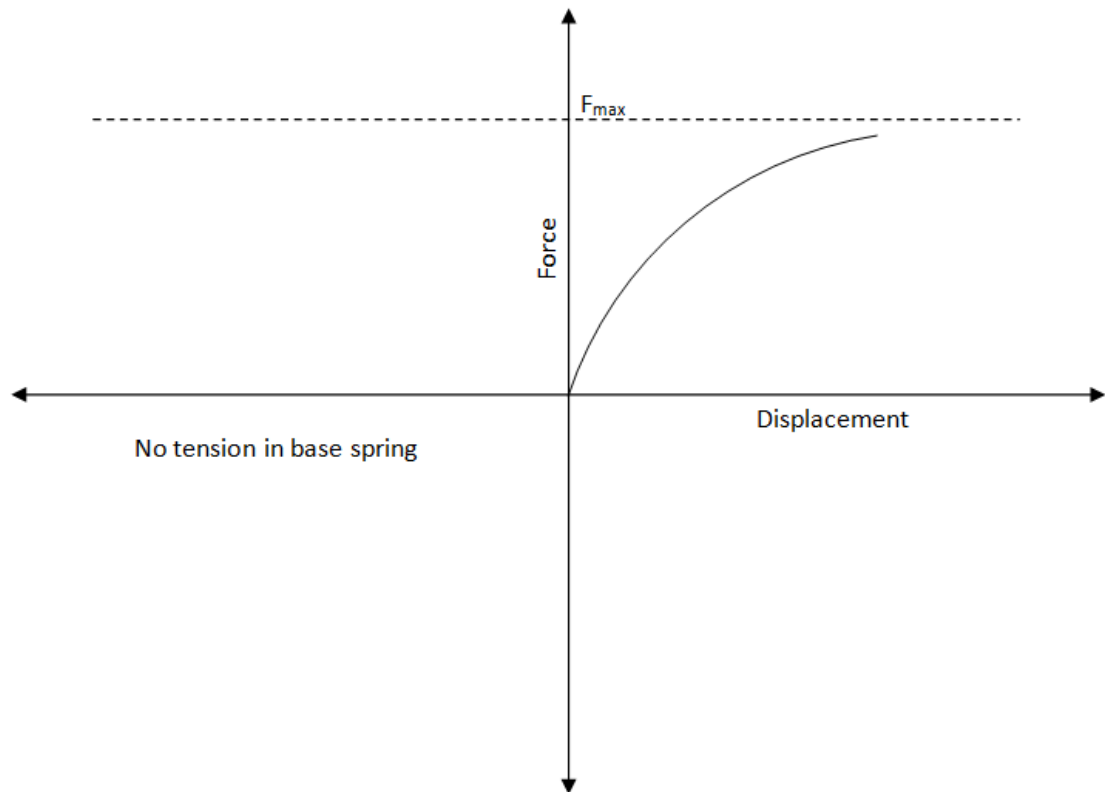

2.2.2.1.3 Logarithmic

For logarithmic shaft curves, the initial curve consists of three distinct zones:

- Linear elastic zone till yield;
- Logarithmic yielding zone;
- Exponential degrading zone.

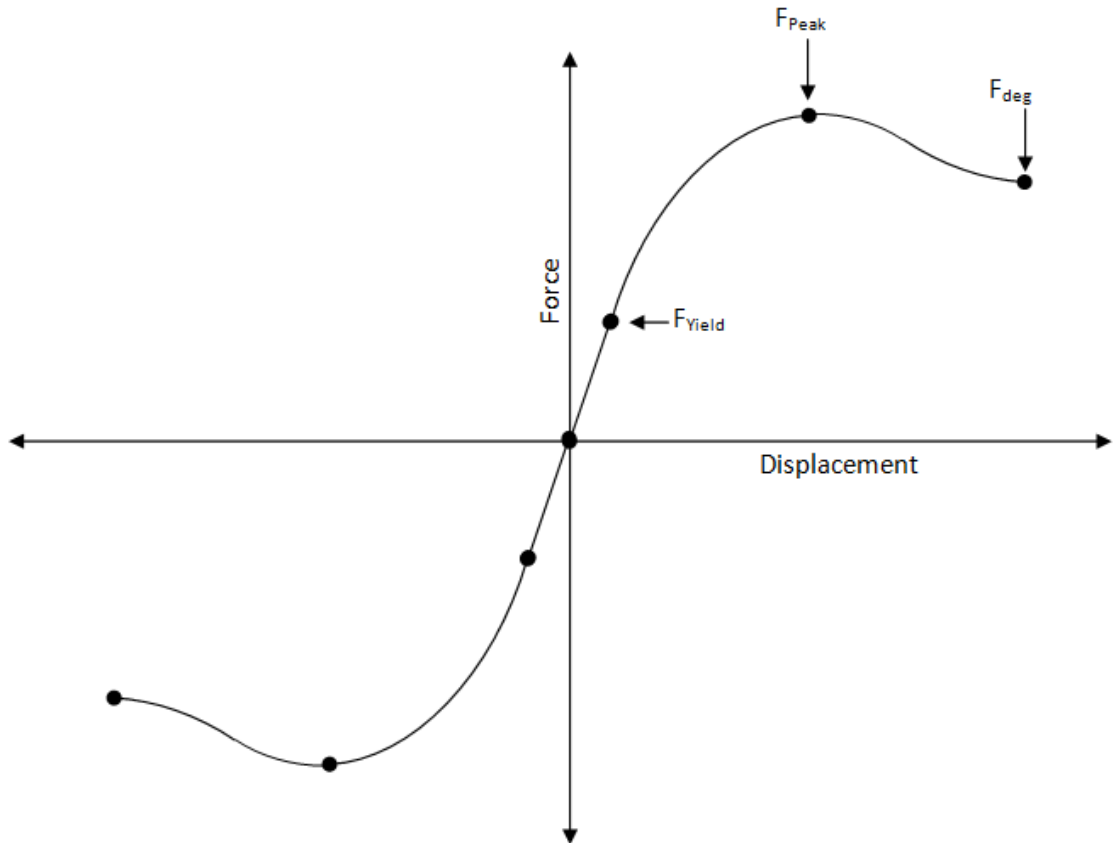

For the linear elastic zone the stiffness of the soil spring is given by:

$$k_{el} = \frac{E * (\Delta l)}{2 * (1 + \vartheta) * r_0 * \ln(r_m/r_0)}$$

where:

E = Young's modulus of soil layer at the location of soil spring.

Δl = length of the interaction area corresponding to the soil spring. This is the average length of elements connected to the node at the location of soil spring.

n = Poisson's ratio of the soil layer at the location of soil spring.

r_0 = radius of the pile.

r_m = distance from the axis of pile at which the shear stresses are negligible.

For the logarithmic yielding zone, the following equation for spring force f is used (based on [Puzrin & Burland, 1996](#); [Puzrin & Shiran, 2000](#)):

$$f = f_y + (w - w_y) \cdot \left(1 - \alpha \left\{ \ln \left[1 + \left(\frac{w - w_y}{f_p - f_y} \right) \cdot k_{sl} \right] \right\}^R \right)$$

$$x_L = \left(\frac{w_p - w_y}{f_p - f_y} \right) \cdot k_{sl}$$

$$R = \frac{c (1 + x_L) \ln(1 + x_L)}{x_L (x_L - 1)}$$

$$\alpha = \frac{x_L - 1}{x_L [\ln(1 + x_L)]^R}$$

where:

f = force in the soil spring for a deformation w in it.

f_y = yield force of the soil spring. It is expressed as a fraction ξ of the peak force, and marks the boundary between linear elastic zone and logarithmic yielding zone.

f_p = the peak force of the soil spring.

w_y = yield displacement of the soil spring.

$c = 1.0$ (to ensure gradient of function equals zero at f_p)

For the post-peak degrading portion, an exponential decay is assumed (based on [Siedel and Coronel \(2011\)](#)):

$$f_0 = f_p - 1.1 * (f_p - f_{deg}) * \left(1 - \exp \left(-2.4 * \left(\frac{\Delta w}{\Delta w_{res}} \right)^\eta \right) \right)$$

where:

f_0 is the force in soil spring for a post-peak deformation of Δw in the soil spring.


Δw_{res} is the total post-peak deformation in the soil spring leading to a residual force f_r in the soil spring.

f_{deg} is the minimum post-peak force of the soil spring.

f_p is the peak force of the soil spring.

w_y is yield deformation of the soil spring.

The tip load curves are treated in a similar way to the shaft curves described above. However, there is no softening portion for the base, as can be seen below:

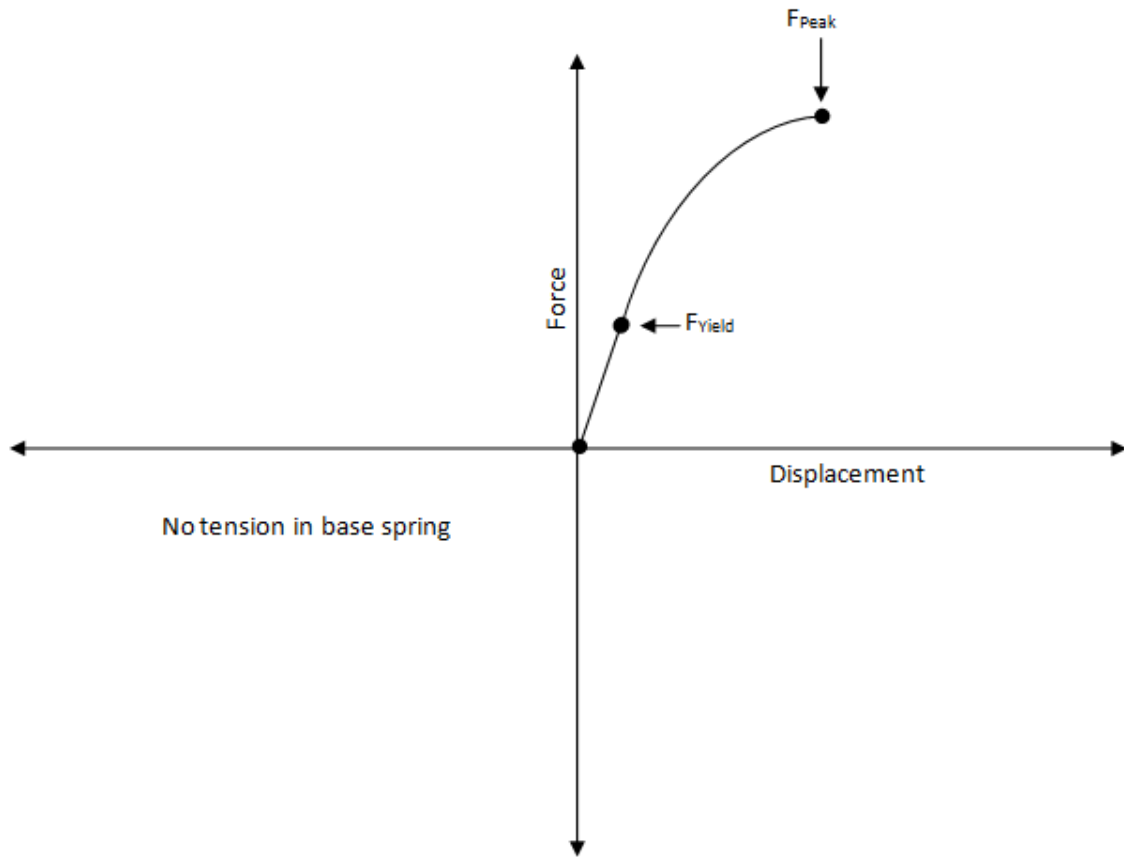


2.2.2.1.4 API

There are two different types of API curves for shaft -


- Sand:

The shaft curves in this case are essentially elastic-plastic. The user just needs to specify the yield displacement z_c to define the curve.

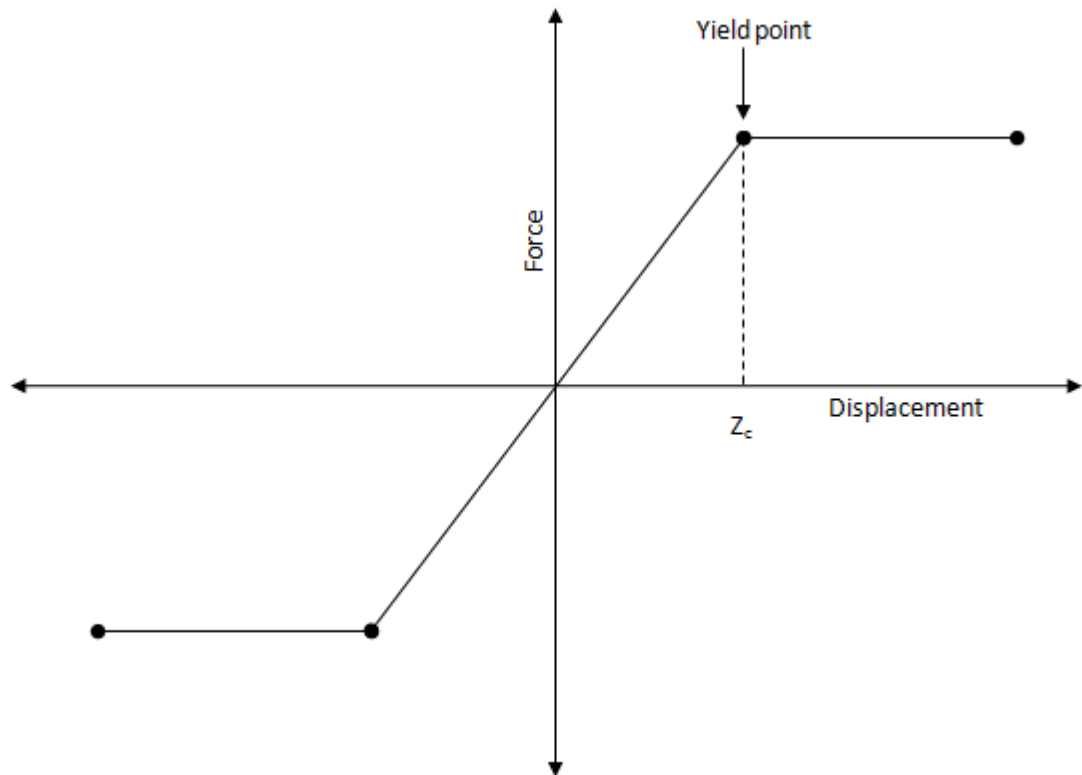


- Clay:

For clay, the program uses a set of multi-linear curves to model the pre-peak portion of the curve outlined in API 1993. The curve exhibits decreasing stiffness till peak, followed by softening behaviour. The user needs to enter the residual force as a fraction of the peak force to fully define the curve.

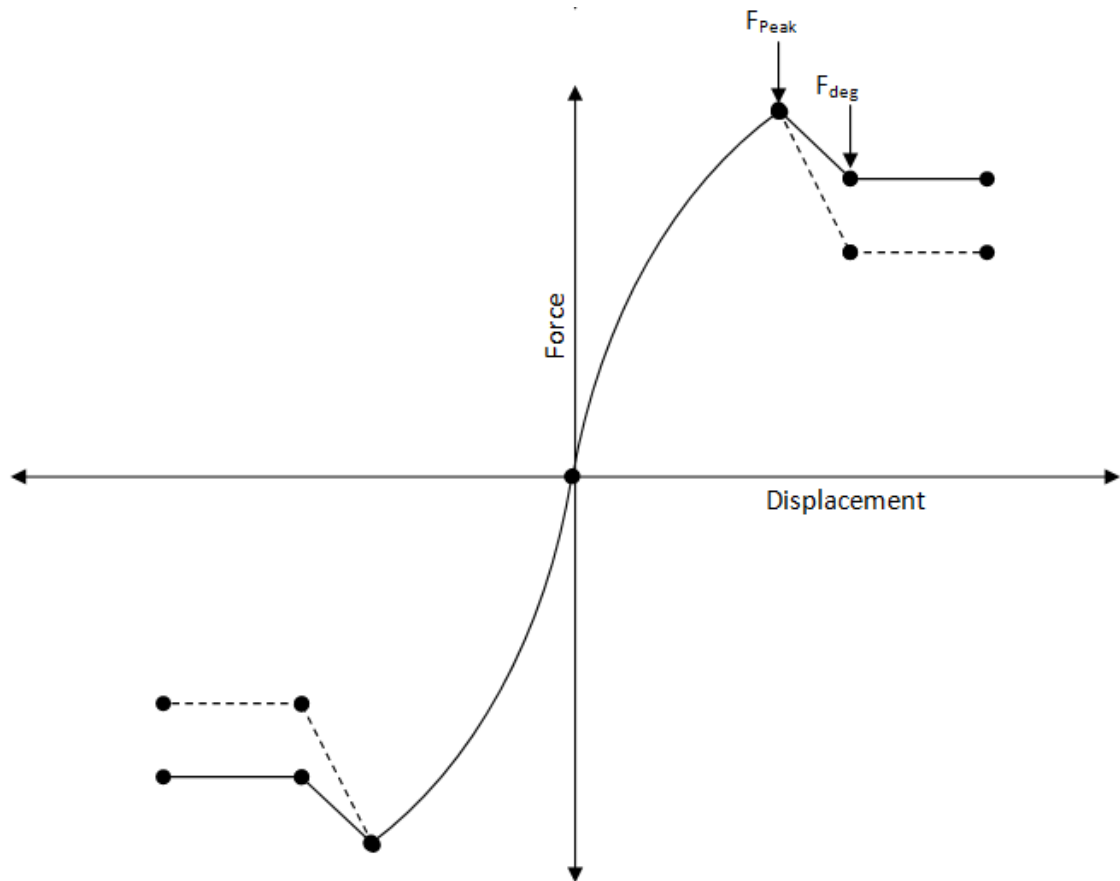

For base interaction, there is only one type of curve - same for both clay and sand. This is modeled by 5 points as specified in the API documentation.

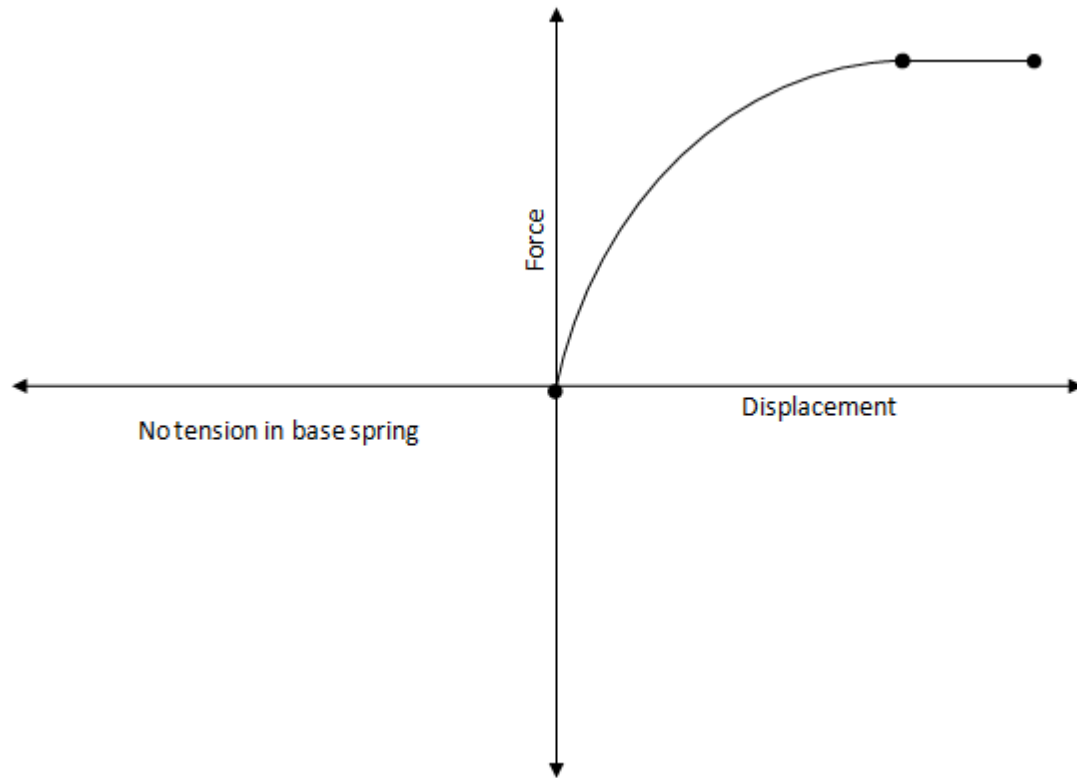

2.2.2.1.5 Emperical (Vijayvergiya)


For the shaft, the t-z curve is parabolic. The equation for the t-z curve is given by

When $z < z_c$

$$F = F_{\max} * \left(2 * \sqrt{\frac{z}{z_c}} - \frac{z}{z_c} \right)$$

When $z \geq z_c$

$$F = F_{\max}$$

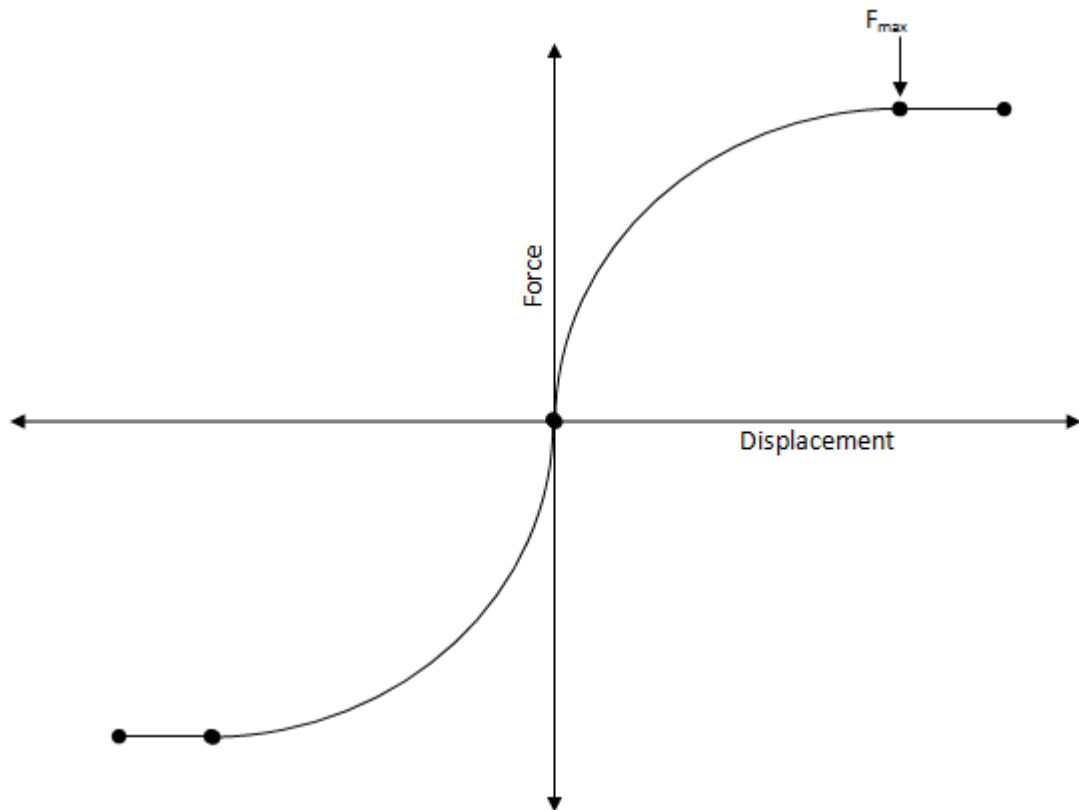


For the base, the tip load curve is given by

When $z < z_c$,

$$F = F_{\max} * \left(\frac{z}{z_c} \right)^{\frac{1}{3}}$$


When $z \geq z_c$

$$F = F_{\max}$$

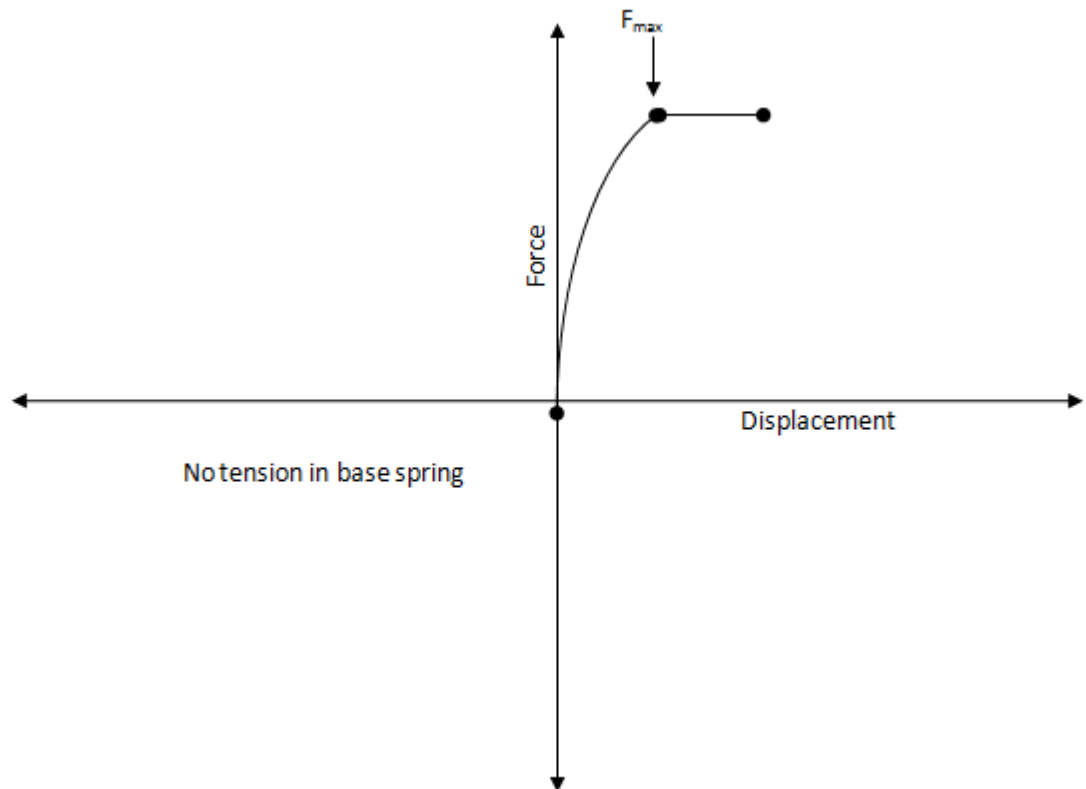


2.2.2.1.6 User-defined

When using this option, the user is required to enter a series of points to define a multi-linear force versus displacement curve. This curve is extended symmetrically into tension region for shaft curves.

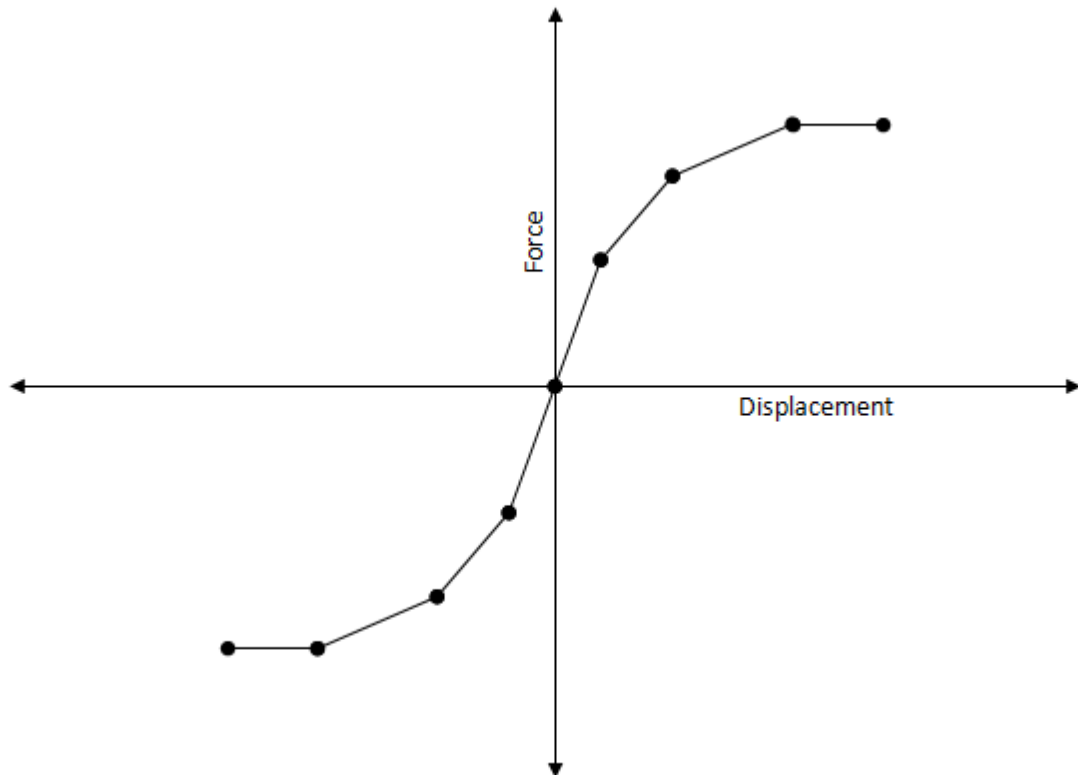

For the base curves too, the user is required to enter a series of points as discussed above. However, the curve is not extended into the tension region i.e. base spring does not take tension.

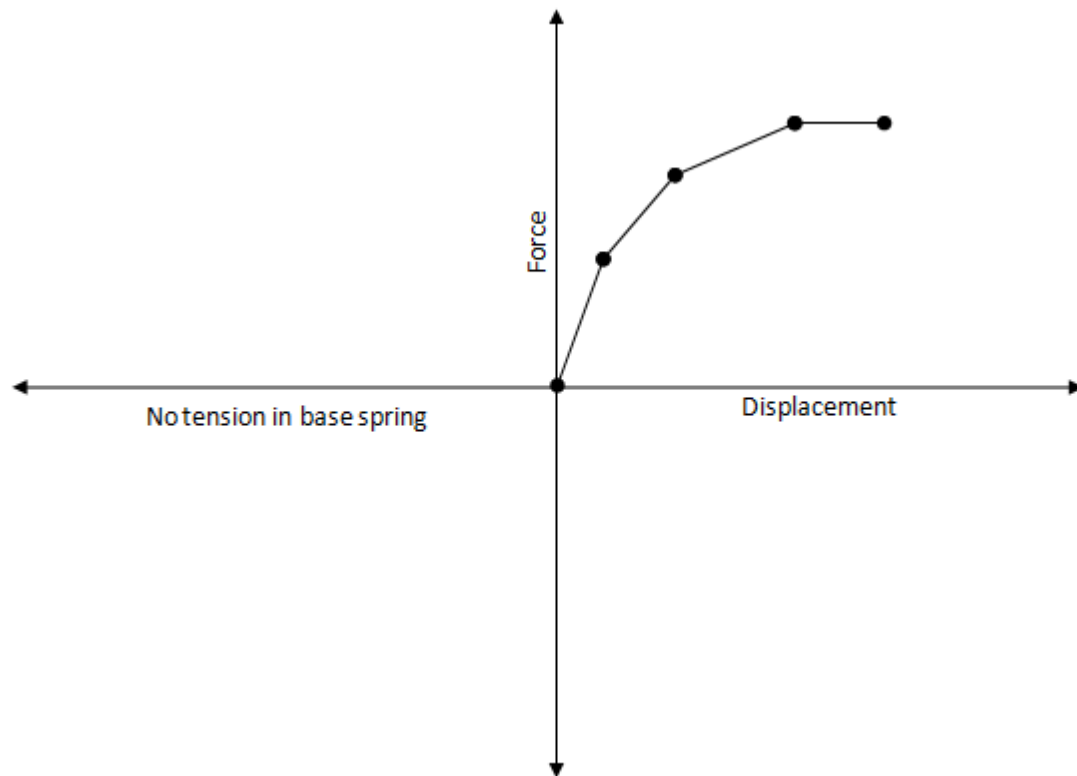

2.2.2.2 Pile Stiffness Matrix

The pile is modelled as a series of axial elements i.e. one dimensional elements, where the stiffness matrix of each element(based on 1D finite element method) is given by:

$$\begin{bmatrix} AE/L & -AE/L \\ -AE/L & AE/L \end{bmatrix}$$

where,

- A is the area of the element
- E is the Young's modulus of the material
- L is the element length

The total pile stiffness matrix of a pile with 'n' elements is of size (n+1) x (n+1) and is given by

$$\begin{bmatrix}
 k_{11}^1 & k_{12}^1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\
 k_{21}^1 & k_{22}^1 + k_{11}^2 & k_{12}^2 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\
 0 & k_{21}^2 & k_{22}^2 + k_{11}^3 & k_{12}^3 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\
 0 & 0 & k_{21}^3 & k_{22}^3 + k_{11}^4 & \dots & 0 & 0 & 0 & 0 & 0 & 0 \\
 0 & 0 & 0 & \dots & \dots & \dots & 0 & 0 & 0 & 0 & 0 \\
 0 & 0 & 0 & 0 & \dots & \dots & \dots & 0 & 0 & 0 & 0 \\
 0 & 0 & 0 & 0 & 0 & \dots & k_{22}^{i-1} + k_{11}^i & k_{12}^i & 0 & 0 & 0 \\
 0 & 0 & 0 & 0 & 0 & 0 & k_{21}^i & \dots & \dots & 0 & 0 \\
 0 & 0 & 0 & 0 & 0 & 0 & 0 & \dots & \dots & \dots & 0 \\
 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & \dots & k_{22}^{n-1} + k_{11}^n & k_{12}^n \\
 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & k_{21}^n & k_{22}^n
 \end{bmatrix}_{(n+1) \times (n+1)}$$

where the superscript indicates the element number.

This pile stiffness matrix is assembled with the soil stiffness matrix, and the resulting global stiffness matrix is used to calculate the displacements.

2.2.2.3 Effect of Cyclic Loading

There are currently 3 different ways in which the cyclic loading is handled in the program for t-z and tip load curves:

- Default behaviour (Elastic-plastic, User-defined, Vijayvergiya, and API curves)
- Logarithmic curves
- Chin-Poulos curves


The cyclic loading behaviour for these different cases is discussed next.

2.2.2.3.1 Default Behaviour


All types of t-z curves and tip load curves are updated after each loading stage to take into account load reversal and post yield behaviour. Internally, all the different types of curves are modelled as multi-linear force-displacement curves. For the Chin-Poulos curves and logarithmic curves, the equations of the curves for initial loading, unloading and reloading are explicitly given by equations.

For all the other types of curves, the following assumptions are made to generate curves to account for yielding and load reversals. The Non-softening curves are discussed first.


- Only the first segment is considered to be the elastic segment. This holds for both tension and compression cases.
- When the spring is loaded beyond the first yield point, plastic deformations are introduced. The unload curve in these cases are obtained by unloading parallel to the initial elastic segment. This is similar to and an extension of the elastic-perfectly plastic case. The illustrations are given below.

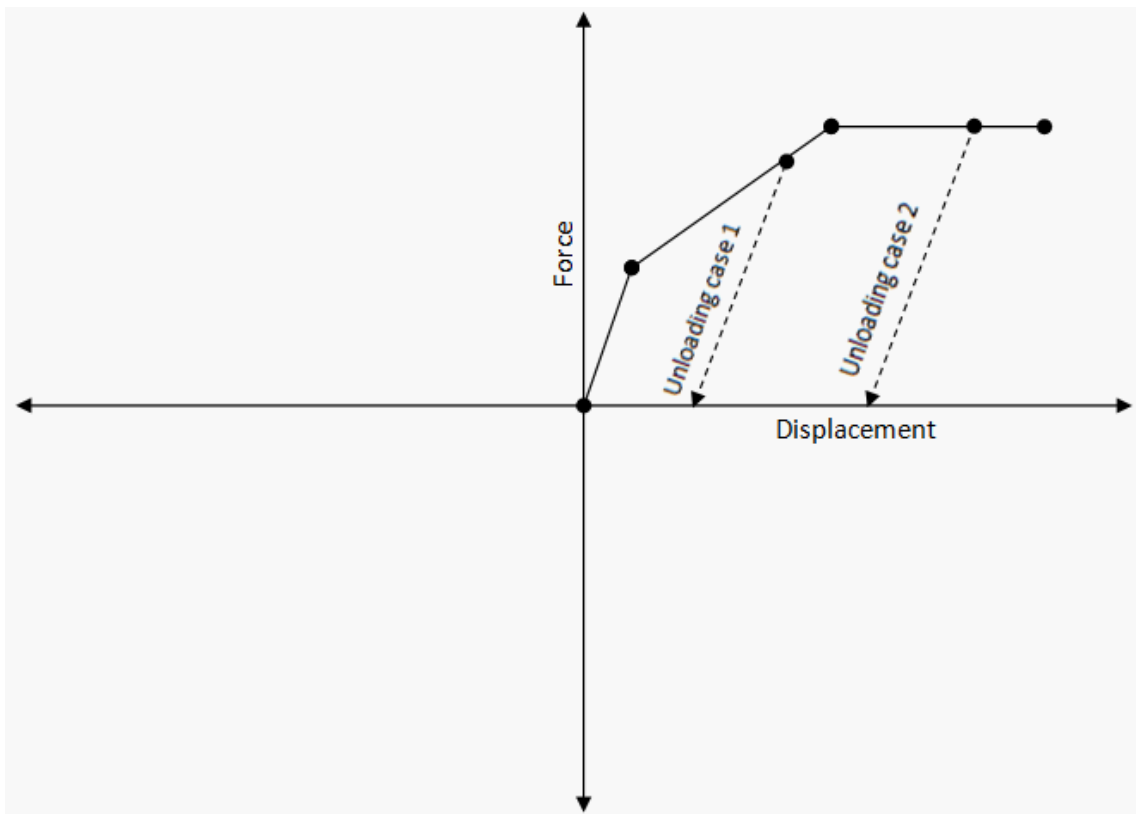


As a result, all the points on the unloading side of the curve shift parallel as shown below:

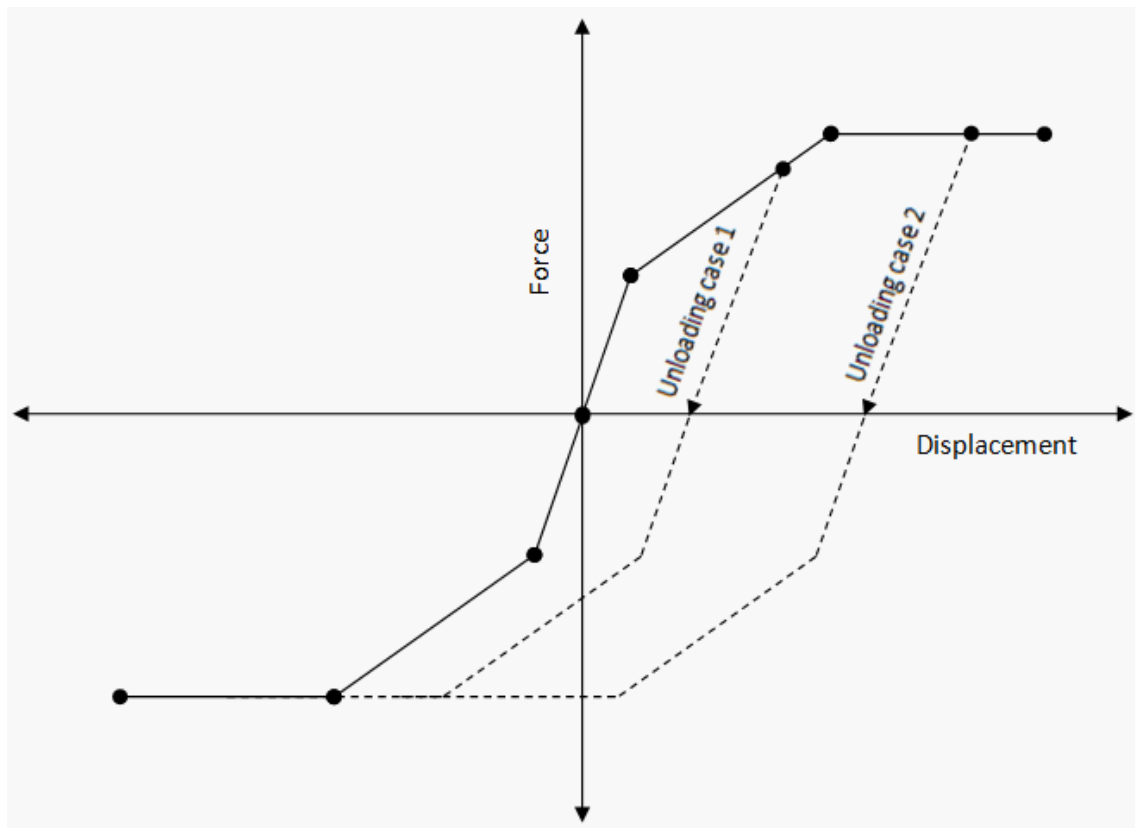

- If the spring is loaded until plastic deformation in one direction, unloaded to plastic deformation again in the opposite direction, and again reloaded in the original direction, the reloading curve runs parallel to the initial loading curve and merges with the perfectly plastic zone of the initial loading curve.

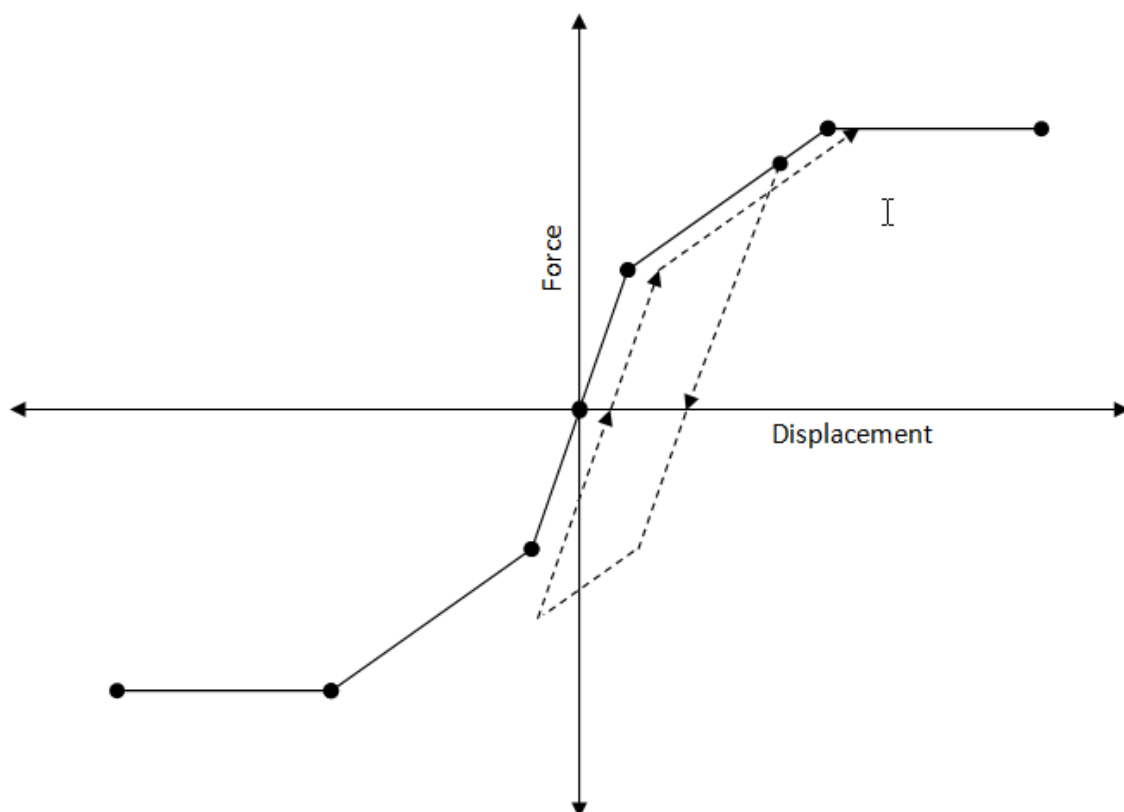


An alternative case where the the last load displacement curve shifts to the left of initial loading curve is given below:

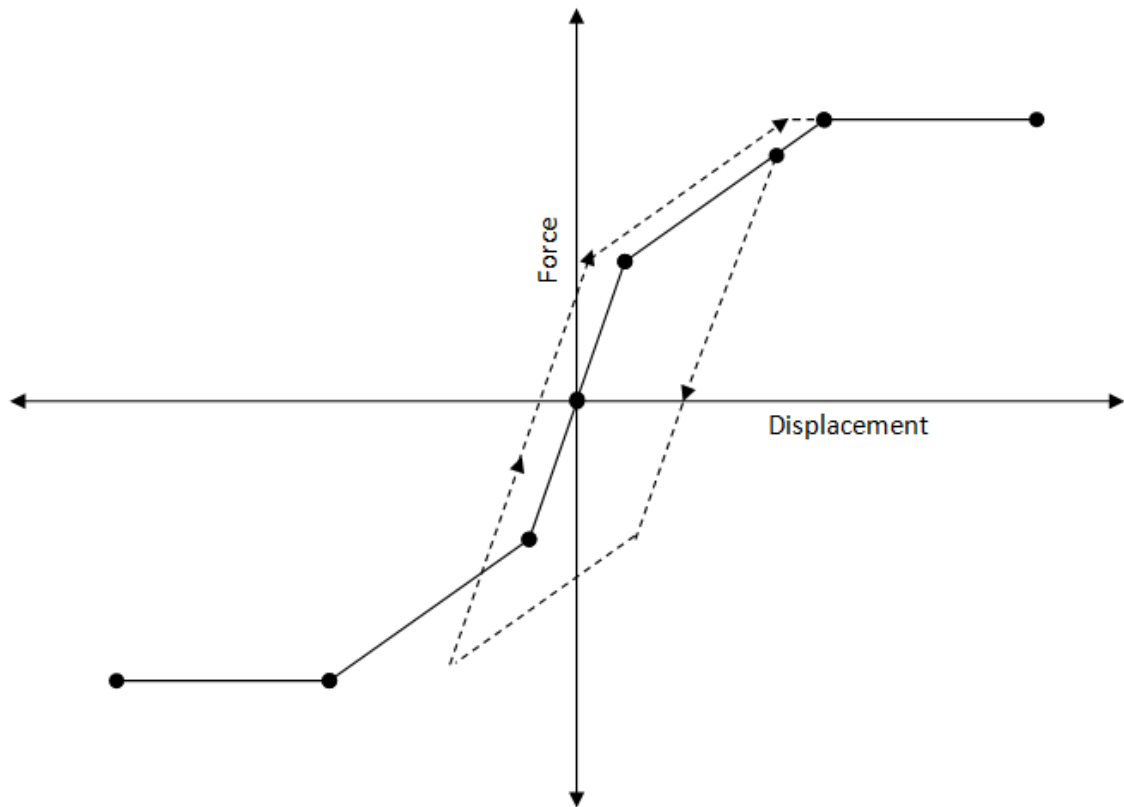

- The slope of the unloading curve, after plastic deformation sets in, is given by the slope of the initial loading curve at the origin. This poses a problem for the Vijayvergiya API curve since the slope of the parabolic force-displacement curve is infinity at the origin. Hence, the program uses the slope of the first segment of the 10 segments used in modelling this curve.

Post-peak behaviour - API Clay and other user defined curves with softening behaviour:

- For API Clay, the post-peak behaviour is as shown in the figure below:

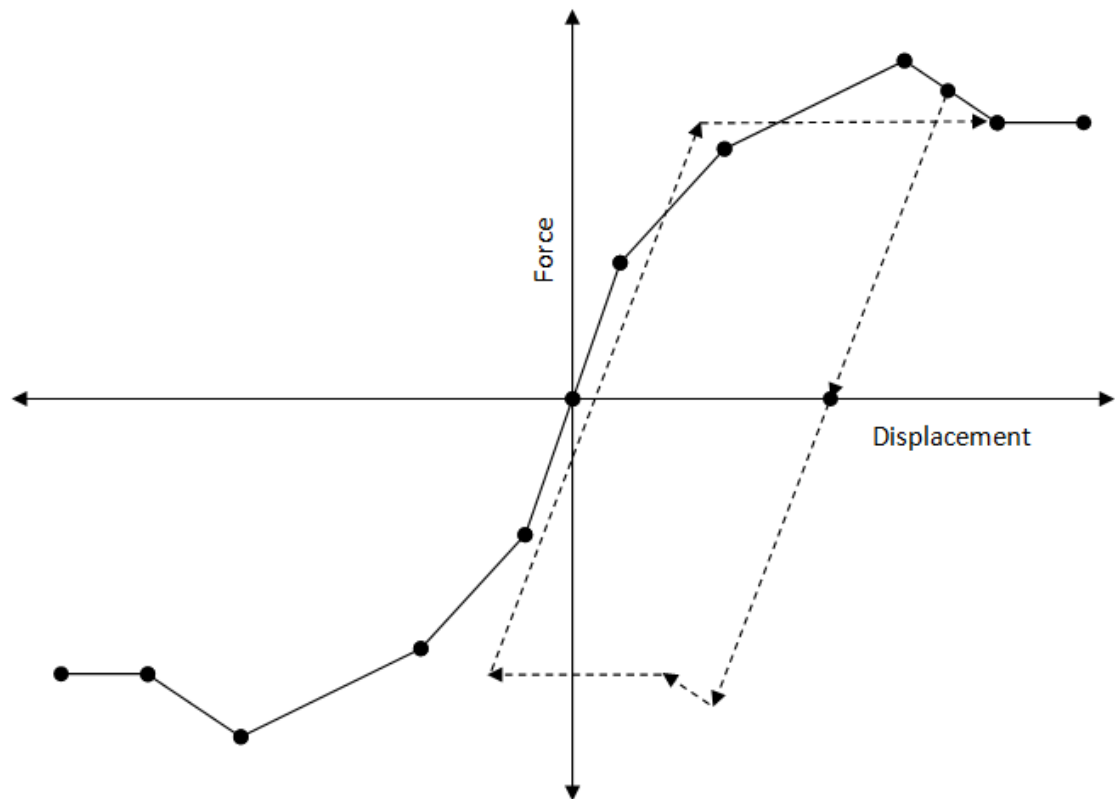

As can be seen from the figure above, when the spring is loaded into the post-peak softening zone, the peak strength for the subsequent stage is reduced to the value of the current force in the spring. In the subsequent stage also, if the spring is loaded into post-peak zone, there is a further reduction in strength i.e. peak force. This reduction continues until peak spring force falls to residual value. Thereafter, the behaviour is similar to the non softening case described above.

Base curves (Tip load curves)


The Slope of elastic portion is defined by Timoshenko & Goodier (1970) as:

$$w_b = \frac{P_b * (1 - \nu)}{4 * r_0 * G}$$

Where w_b is pile base displacement and P_b is pile base load (sb . . . r_0^2). The following input parameters are required:

- r_0 pile radius
- G shear modulus of soil [input as a value at top of layer and gradient with depth]
- Poisson's ratio

The tip load curves are treated in a similar way to the shaft curves described above. However, they neither carry tension nor exhibit softening behaviour.

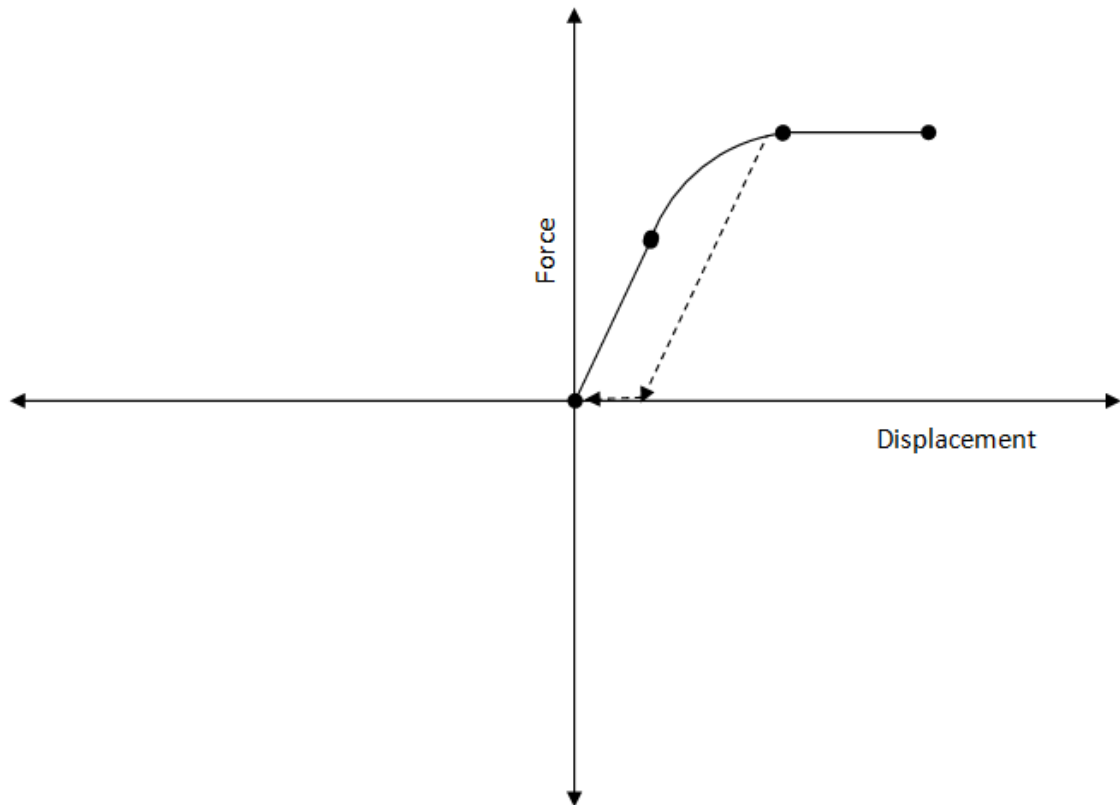

The pile base response should be parallel to the initial elastic gradient on unloading, with no tension capability. Upon reloading, the displacement should accumulate displacement with no load carried until it reaches the elastic unloading path, retrace the unloading path in the opposite direction up to the previous maximum stress on the initial loading path, then follow the initial loading path to peak stress.

2.2.2.3.2 Chin-Poulos

For [Chin-Poulos](#) t-z curves, the following equations are used to model the unload- reloading behaviour:

- Unloading curve:

$$z - z_i = \frac{\tau_0^* r_0}{G_{max}} \ln \left[\frac{\frac{r_m}{r_0} + \frac{\tau_0^*}{\tau_f} R'_{fu}}{1 + \frac{\tau_0^*}{\tau_f} R'_{fu}} \right]$$

$$R'_{fu} = \frac{R_f}{2R_u}$$

- Reloading curve:

$$z - z_i = \frac{\tau_0^* r_0}{G_{max}} \ln \left[\frac{\frac{r_m}{r_0} - \frac{\tau_0^*}{\tau_f} R'_{fr}}{1 - \frac{\tau_0^*}{\tau_f} R'_{fr}} \right]$$

$$R'_{fr} = \frac{R_f}{2R_r \delta}$$

where :

z_i is the pile node displacement at load reversal.

R_u is a curve fitting constant for the unloading curve.

R_r is a curve fitting constant for the reloading curve.

R_f is a curve fitting constant for the shaft.

δ is the degradation factor for the reloading curve.

τ_0^* is the difference between current shear stress and the stress at the load reversal point.

τ_f is the limiting shear stress

r_0 is the radius of the pile.

G_{max} is the initial shear modulus of the soil.

For the Chin-Poulos tip load curves, the following equations are used to model the unload-reload behaviour:

- Unloading curve:

$$R'_{fu} = \frac{R_f}{2R_u}$$

$$k_i = \frac{4G_{max}r_0}{(1-\vartheta)} = \frac{2E_{max}r_0}{(1-\vartheta^2)}$$

- Reloading curve:

$$z - z_i = \frac{(p_b - p_{b,i})}{k_i * \left(1 - \frac{(p_b - p_{b,i}) * R'_{fr}}{p_f}\right)}$$

$$R'_{fr} = \frac{R_f}{2R_r \delta}$$

$$k_i = \frac{4G_{max}r_0}{(1-\vartheta)} = \frac{2E_{max}r_0}{(1-\vartheta^2)}$$

where,

p_b is the current end bearing force.

z_i is the pile base displacement at load reversal.

$p_{b,i}$ corresponds to the load reversal point.

R_u is a curve fitting constant for the unloading curve.

R_r is a curve fitting constant for the reloading curve.

R_f is a curve fitting constant for the base.

δ is the degradation factor for the reloading curve.

p_f is the limiting end bearing force.

r_0 is the radius of the pile.

G_{max} is the initial shear modulus of the soil.

E_{max} is the initial Young's modulus of the soil.

ν is the Poisson's ratio of the soil.

2.2.2.3.3 Logarithmic Curves

Shaft curves

In the case of cyclic loading, the program keeps track of the elastic and irreversible deformation in the soil spring.

As long as the cumulative absolute irreversible displacement is less than the monotonic irreversible displacement to peak force, there is no degradation of the peak force in either tension or compression. However, when the accumulated irreversible displacement exceeds monotonic irreversible displacement, then degradation of peak force occurs.

The program deals with the pre-peak behaviour and post-peak behaviour separately. First the pre-peak behaviour is discussed.

Pre-peak behaviour:

When the spring is in the pre-peak zone, it unloads parallel to the linear elastic segment.


Even when the spring is in the pre-peak zone, when the cumulative absolute irreversible displacement exceeds the monotonic irreversible displacement required to mobilise peak force in a particular stage (such as after several cycles of pre-peak loading and unloading), the program reduces the peak force in the spring in a similar manner to post-peak monotonic exponential decay. This is based on

$$f_{p,i} = f_p - 1.1(f_p - f_r) \left\{ 1 - e^{-2.4[(\sum \Delta w_{pl,i-1} - \Delta w_{pl,m}) / \Delta w_{res}]^n} \right\}$$

In this equation, the subscript "i" denotes the half cycle number. Two consecutive half cycles correspond to a change in the direction of increasing force i.e. from increasing force to decreasing force or vice versa.

$\sum \Delta w_{pl,i-1}$ is the cumulative absolute irreversible displacement till the i-1th half cycle.

$\Delta w_{pl,m}$ is the monotonic irreversible displacement to the peak force. It is important to note that this excludes elastic displacement to peak force.

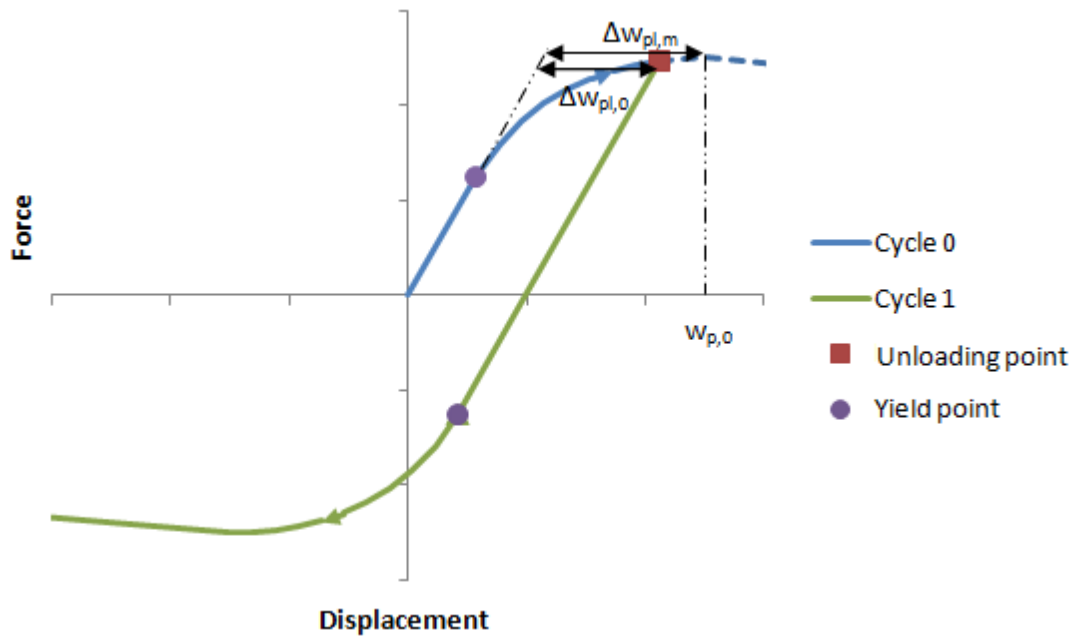

Also, the yield force in a particular stage (half cycle), depends on the spring force (f_{max}) in the previous two half cycles (i.e. one tension stage and a compression stage).

$$f_{y,i} = f_{max,i-1} + 0.5(1 + \xi)(f_{max,i-2} - f_{max,i-1})$$

with the requirement that the yield force calculated using the above equation should not be below $\zeta^* f_{peak}$.


In order to maintain a similar shape of logarithmic function during reloading and subsequent unloading stages, the displacement from yield force to peak force is a function of the amount by which the yield force has reduced from the maximum force, as well as the 'irreversible'

displacement that has occurred according to the following equation, which applies provided the previous cycles have been in the pre-peak region of the t-z curve:


$$w_{p,i} = w_{p,i-2} - \Delta w_{pl,i-1} + \Delta w_{pl,i-2} \cdot \left(\frac{f_{max,i-2} - f_{y,i}}{f_{max,i-2} - f_{y,i-2}} \right)$$

When using this equation, if the yield force $f_{y,i}$ has decreased from its previous value on this side of the axis $f_{y,i-2}$ (due to degradation of peak force from accumulated 'irreversible' displacement), then $f_{y,i}$ is replaced with $f_{y,i-2}$ and the equation becomes:

$$w_{p,i} = w_{p,i-2} - \Delta w_{pl,i-1} + \Delta w_{pl,0}$$

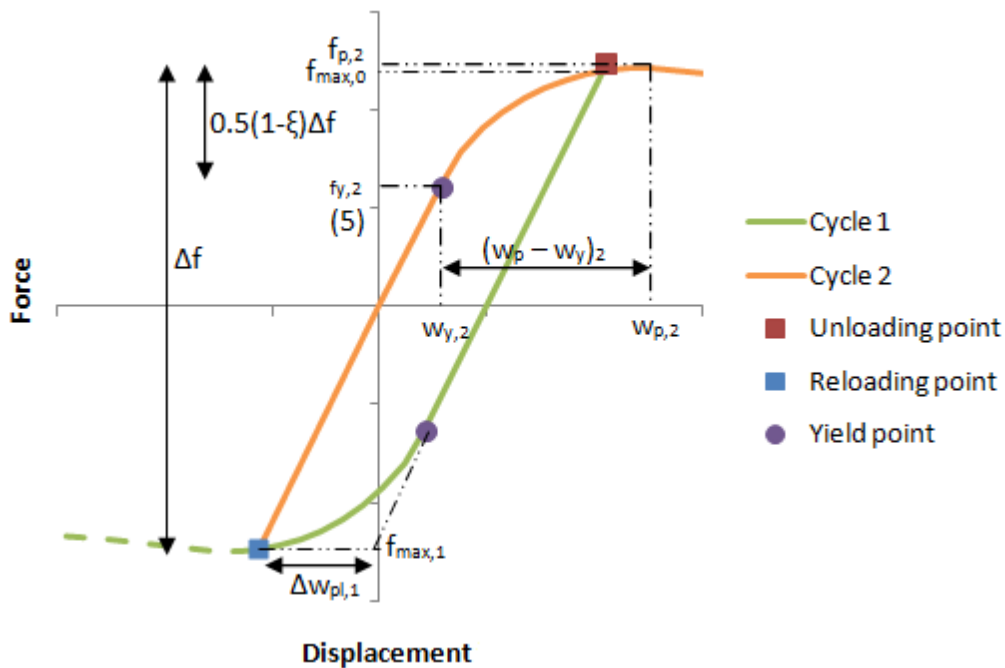

The above graphs show symmetrical two-way cycling, however the above equations are also designed to model the behaviour of unsymmetrical cycling, such as one-way cycling, as shown below. When there is post-peak degradation of the monotonic loading curve, a check is made to ensure the force-displacement path is limited by the monotonic post peak exponential curve. This is more of an issue for one-way rather than two-way loading, as additional 'irreversible' displacement during two-way loading ensures that the peak force degrades more with absolute displacement than monotonic loading alone. This is described further in the post-peak section below.

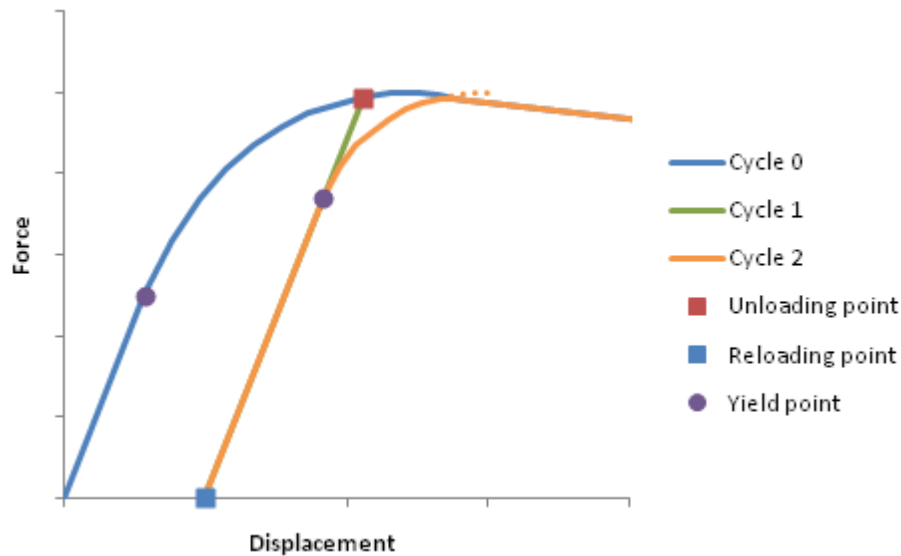

As can be seen from the graph above, cycle 2 is limited by the initial monotonic curve i.e. blue curve for cycle 0.

Post-peak behaviour:

If the spring is loaded to a failure force f_f after passing through peak force f_p , then the first unloading curve is a scaled down version of the initial loading curve, factored by f_f/f_p as follows:

The unloading stage initially follows a path parallel to the linear elastic portion of the loading curve.

The unloading yield force lies on the negative side of the spring force axis, and is a proportion of the failure force ($-f_f$) and is therefore less than f_p . The displacement at unloading yield ($w_{y,1}$) can be found from following the elastic gradient back from the displacement at maximum force (w_{max}).

The first unloading peak force lies on the negative side of the force axis, and is the same as the failure force of the initial loading stage ($-f_f$). The displacement of the peak stress point on unloading, $w_{p,0}$ is calculated based on the assumption that the displacement from zero force to peak force is always equal to the input value w_p which describes the monotonic displacement required to mobilise peak shaft resistance.

As before, on subsequent reloading and unloading stages, a detailed track of the yield and peak force points must be carried out.

The peak force that can be reached on subsequent reloading and unloading stages is again a function of the amount of 'irreversible' displacement that has accumulated from previous cycles, with a limit placed on the peak force that it must not exceed the minimum post-peak failure force, f_f reached on previous cycles. Degradation of peak force in one direction also limits the peak force


in the opposite direction to the same value. This is taken into account using the relationship for peak force based on accumulated 'irreversible' displacement as before.

$$f_{p,i} \leq f_{f,i-1} \leq f_{p,i-1}$$

When 'irreversible' displacement accumulates from two-way cycling

$$f_{p,i} = f_p - 1.1(f_p - f_{deg}) \left\{ 1 - e^{-2.4[(\sum \Delta w_{pl,i-1} - \Delta w_{pl,m}) / \Delta w_{res}]^\eta} \right\}$$

The post-peak 'irreversible' displacement that is accumulated on each cycle, w_{pl} , is the difference between the equivalent elastic displacement at peak force, $w_{el,p}$ (rather than the equivalent elastic displacement at current force) compared to the current post-peak displacement, w_f . This ensures that the peak force of the subsequent cycle calculated using the equation above equals the failure force of the previous cycle.

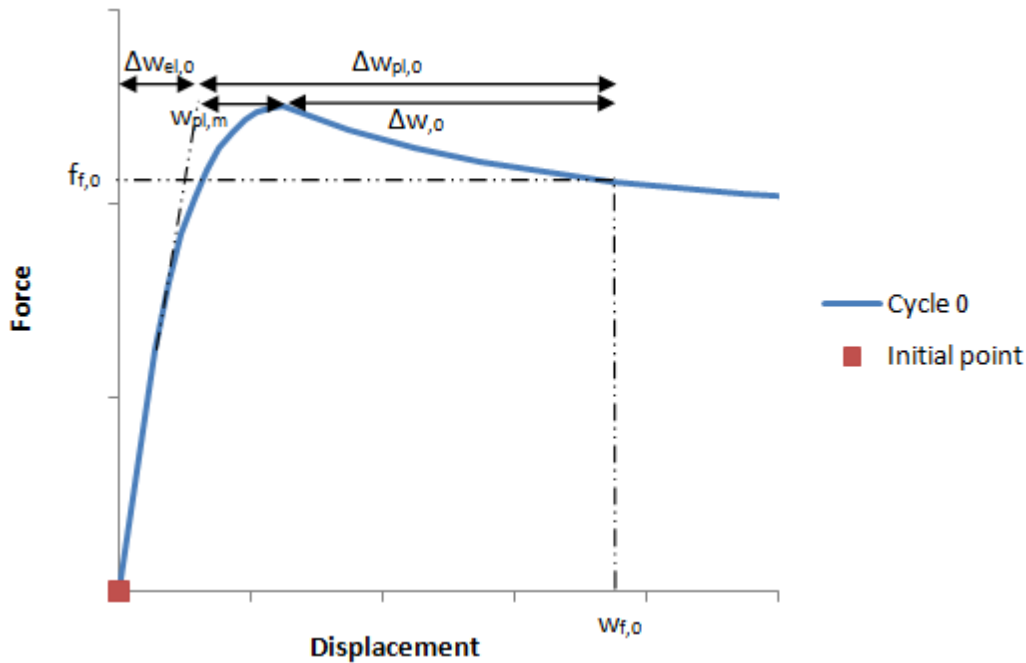

The yield force for the reloading stage again reduces with the unloading path as described earlier. During unloading, the yield force for the reloading cycle is initially at the maximum force obtained on initial loading, f_f , and decreases at half the rate of the unloading force point, to a minimum value of $f_{p,i}$, where $f_{p,i}$ is the peak force of the reloading cycle (which will have degraded as a function of the amount of pre- and post-peak 'irreversible' displacement accumulated). The yield point for the subsequent reloading stage can therefore be defined in the same manner as before, where f_f is used in place of f_{max} when post-peak displacement has occurred:

$$f_{y,i} = f_{f,i-1} + 0.5 (1 + \xi) (f_{f,i-2} - f_{f,i-1})$$


$$f_{y,i} \geq \xi f_{p,i}$$

In order to maintain a similar displacement to mobilise peak force during reloading and subsequent unloading stages, the displacement to peak force is proscribed as a function of the amount by which the yield force has reduced from the maximum force, as well as by following the amount of 'irreversible' displacement that has occurred according to the following equation, which applies to the post-peak region of the force-displacement curve, where w_f is the displacement at stress reversal points. w_{pl}^* is the difference between the equivalent elastic displacement at the current failure force (not peak force) and the displacement at the current failure force.

$$w_{p,i} = w_{p,i-2} + \Delta w_{pl,i-1} + \Delta w_{pl,i-2} \cdot \left(\frac{f_{max,i-2} - f_{y,i}}{f_{max,i-2} - f_{y,i-2}} \right)$$

When using this equation, if the yield force $f_{y,i}$ has decreased from its previous value on this side of the axis $f_{y,i-2}$ (due to degradation of peak stress from accumulated 'irreversible' displacement), then $f_{y,i}$ is replaced with $f_{y,i-2}$ and the equation becomes:

$$w_{p,i} = w_{p,i-2} + \Delta w_{pl,i-1} + \Delta w_{pl,0}$$

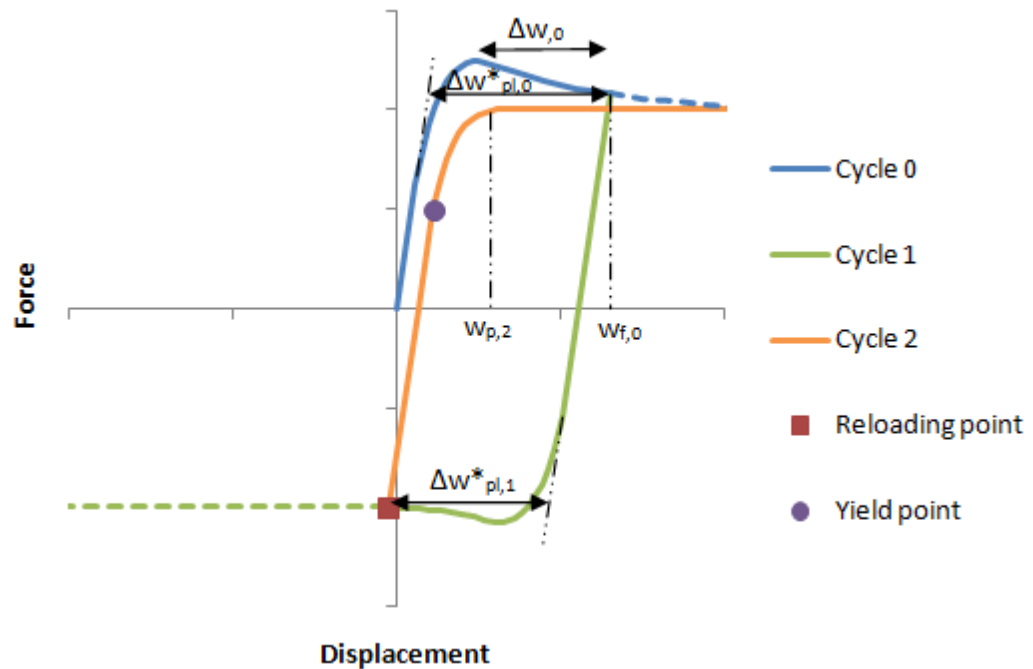

The above equations are used for both pre-peak and post-peak cycles by replacing the post-peak term with a pre-peak term for the cycle in question. The corresponding values for pre-peak instead of post-peak behaviour are: $w_{p,i-2}$ instead of $w_{f,i-2}$, $w_{pl,i-2}$ instead of $(w_{pl,i-2}^* - w_{i-2})$ and $f_{max,i-2}$ instead of $f_{f,i-2}$ for pre-peak displacement on load cycle i-2, while for pre-peak displacement on

load cycle $i-1$ $w_{pl,i-1}$ should be used instead of $w_{pl,i-1}^*$.

Post-peak degradation


On every cycle, peak force degradation to minimum post-peak force occurs after the spring is loaded beyond peak force. The degradation is of similar form to the monotonic post-peak degradation exponential curve, however the 'irreversible' displacements that have occurred over previous cycles must be accounted for in the degradation curve of the current cycle.

The displacement from peak to minimum force on the current cycle, $w_{res,i}$ is reduced by the sum of the accumulated 'irreversible' displacements, $w_{pl,i-1}$ over and above the monotonic 'irreversible' displacement required to reach peak force for the first time, $w_{pl,m}$.

$$\Delta w_{res,i} = \Delta w_{res} - (\sum \Delta w_{pl,i-1} - \Delta w_{pl,m})$$

The form of the equation for calculating the post-peak force similarly needs to account for the accumulated 'irreversible' displacements of previous cycles, and follows a similar shape of curve to the remaining portion beyond the maximum displacement reached on the previous cycle by referring to the values of monotonic peak and residual force, while accounting for the accumulating 'irreversible' displacements from all of the previous cycles:

$$f_i = f_p - 1.1(f_p - f_r) \left\{ 1 - e^{-2.4[(\Delta w_i + \sum \Delta w_{pl,i-1} - \Delta w_{pl,m})/\Delta w_{res}]^\eta} \right\}$$

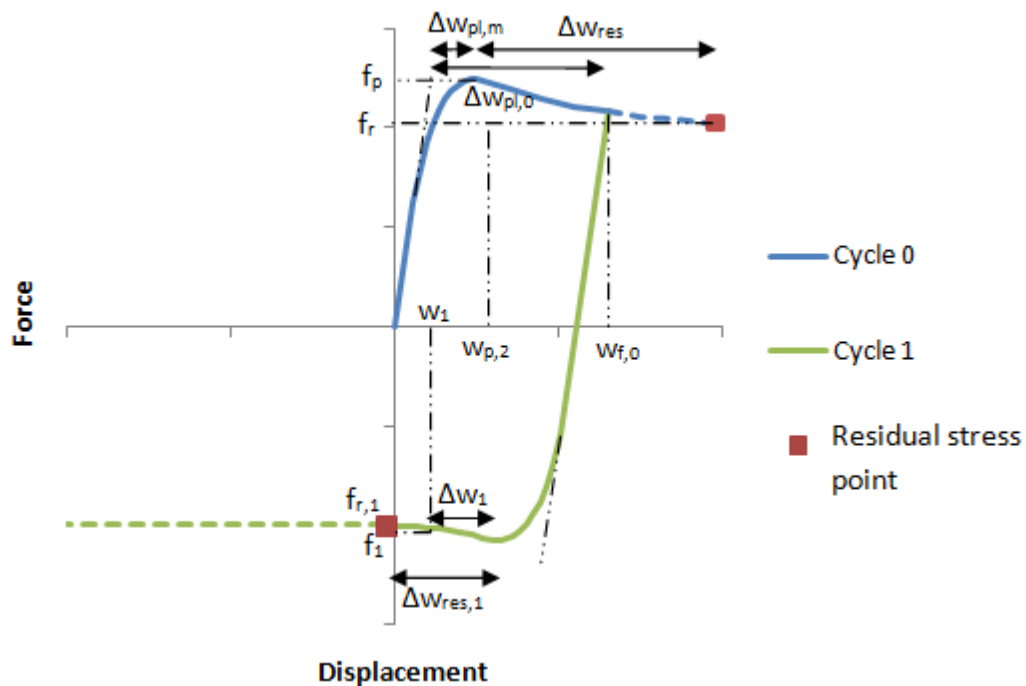


As noted previously, the form of the equations for the current value of peak force and the degradation to post-peak minimum force mean that for one-way cycling it may be possible for the peak force value to lie above the monotonic curve as accumulating 'irreversible' strains of the previous cycles only (and not the current cycle) are accounted for, therefore a comparison of the top portion of the loading curve to the monotonic curve is made to ensure that accumulating

displacement under one-way loading does not cause the current force point to go above the monotonic curve. Under two-way loading this is less of an issue as 'irreversible' displacements in both directions tend to degrade the peak force under low values of average absolute displacement and the monotonic curve is less critical to the behaviour.

Base curves (tip load curves)

The tip load curves are treated in a similar way to the shaft curves described above. However, there is no softening portion for the base. Further, the unloading behaviour is different as outlined below:

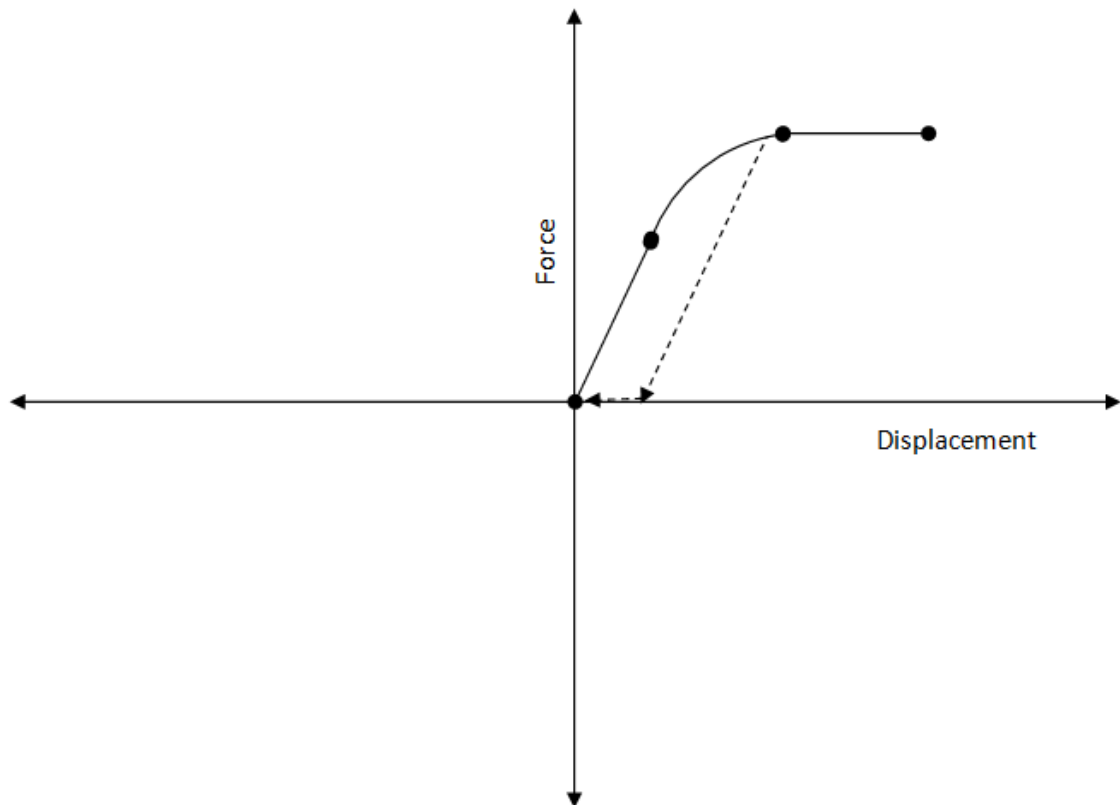

The pile base shows a response that is parallel to the initial elastic gradient on unloading, with no tension capability. Upon reloading, the displacement accumulates with no load carried until it reaches the elastic unloading path, retraces the unloading path in the opposite direction up to the updated yield stress on the initial loading path (as tracked using assumptions described for shaft curves), then follows the updated loading path to peak stress.

2.2.3 Different Young's Modulus for Compression and tension

Pile allows the input of different Young's modulus values for segments in compression and tension.


If the user selects this option in the Pile Properties' page, then the following action takes place in the solver.

- Initially all the segments are assumed to be in compression, hence, the Young's modulus value for compression is used for all the segments. Analysis is performed.
- After the analysis, if the sign of the stress of any segment is different from the initial sign, the Young's modulus of that segment is modified accordingly and the analysis is performed again.
- This procedure is repeated until the signs of stresses obtained for the segments (compression or tension) match the signs of the Young's modulus values that were assumed for that analysis iteration.
- However, if a segment is continuously oscillating between tension and compression after many iterations, the solver defaults its value to the Young's modulus in compression and a warning is given.


NOTE: In models with thermal loading, ONLY Young's modulus in compression is used i.e. the program does not consider different Young's moduli in tension and compression.

2.2.4 Staged Analysis and Cyclic Loading

When the t-z curves option is selected, a series of analysis stages that follow each other can be defined. In addition, cyclic thermal and mechanical loads can be defined in a particular stage.

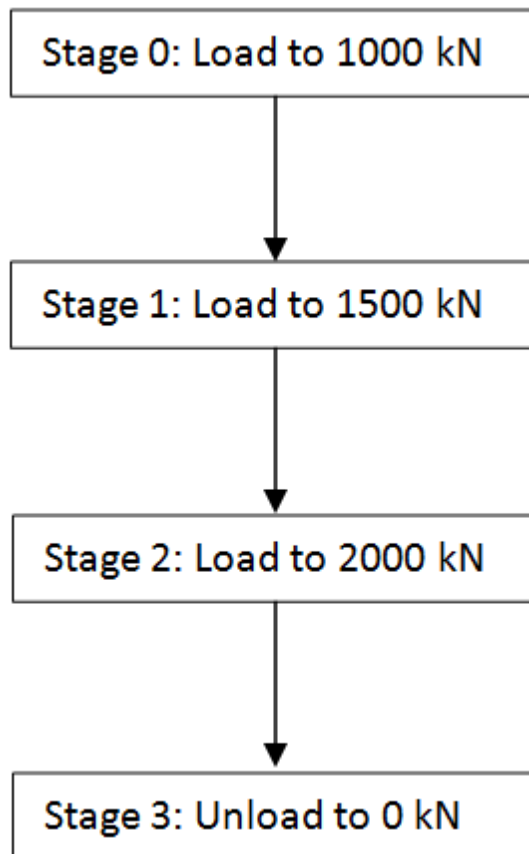

During analysis, when the program encounters a stage that has cyclic loading specified for 'N' cycles, it generates $2N+1$ sub-stages as shown below:

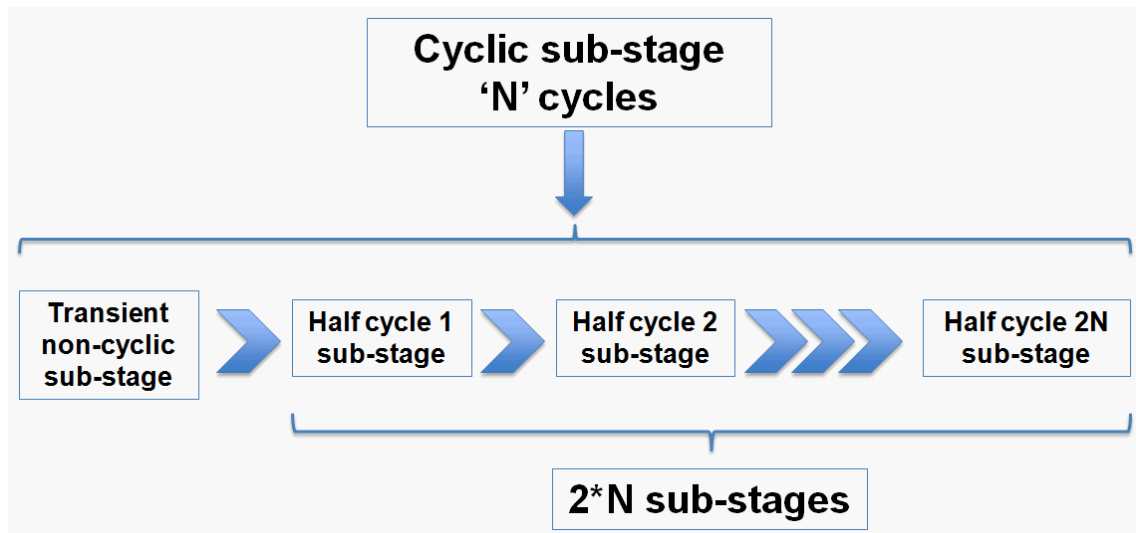


The transient sub-stage is inserted to explicitly apply non-cyclic loading component of the original loading stage. Then, in the subsequent sub-stages, additional cyclic loads are applied.


3 Opening the Program

The following provides details of all the information required to run the **Pile** program.

On selection of the **Pile** program the main screen will open.

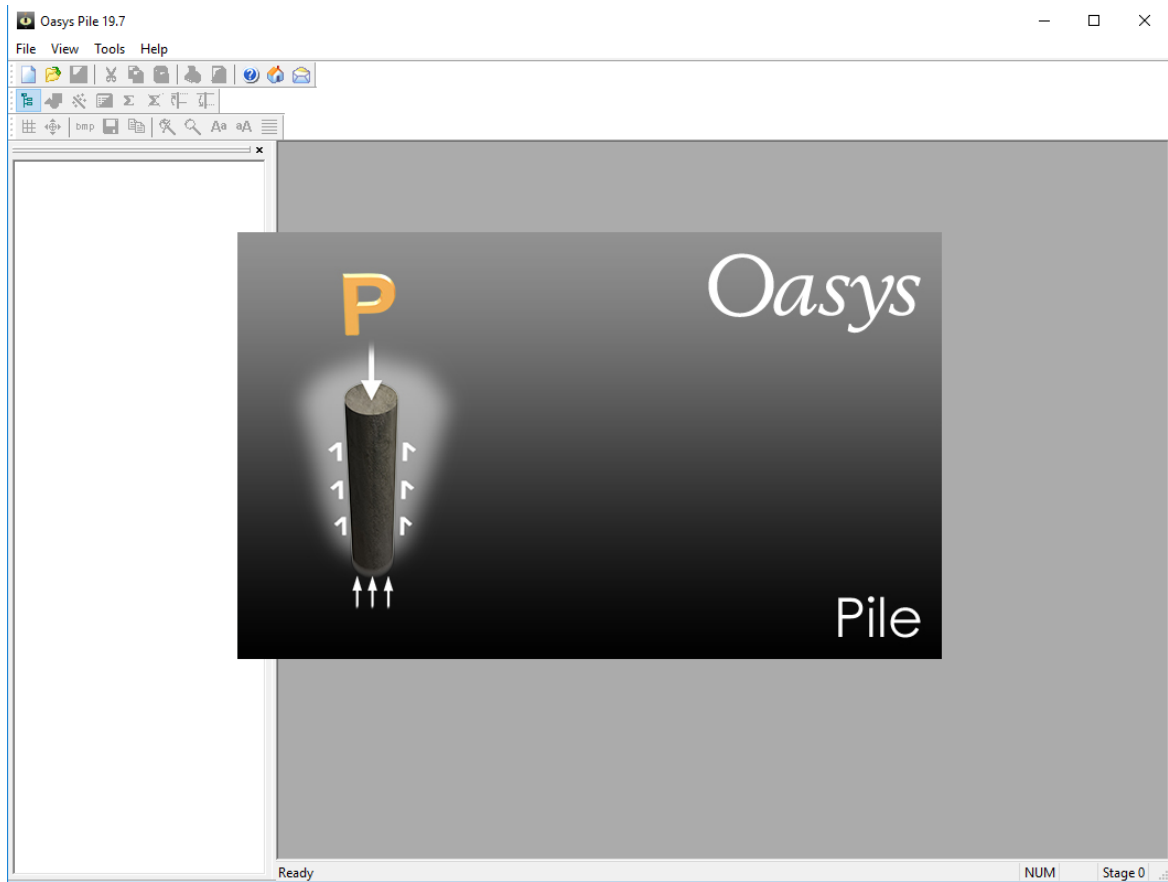

To start a new project file select "Create a new file" option on the opening screen.

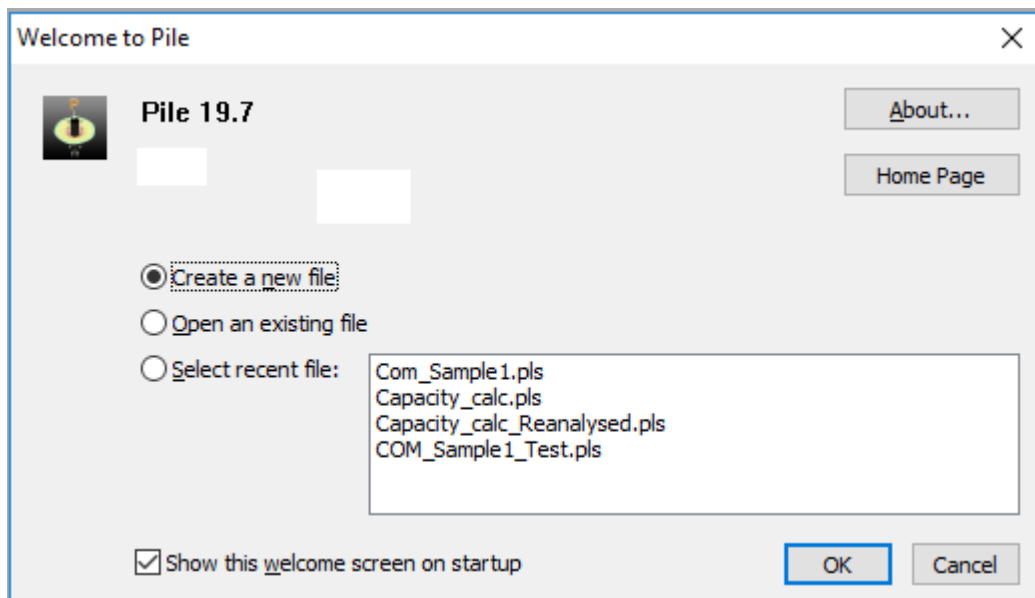

If the "Show this welcome screen on startup" option is unchecked then this dialog will not be displayed on startup. In that case a new data file may be created by clicking File | New on main


menu or the corresponding icon  on toolbar.

This will open a new Titles window and allow you to proceed.

To display Welcome to Pile at startup, check "Show welcome screen" in the Preferences dialog. The Preferences dialog can be accessed via Tools | Preferences.



It is possible to open more than one data file at any one time. The file name is therefore displayed in the title bar at the top of each child window.

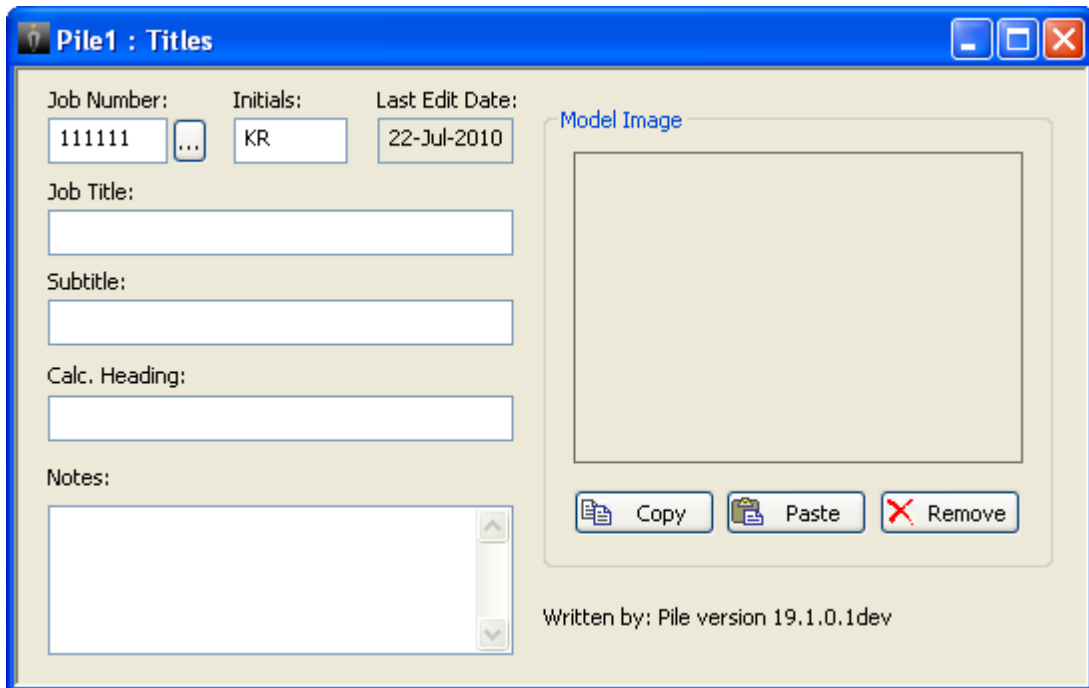It is possible to open legacy Pile and Pilset files in this version. (In this version limiting shaft skin friction is calculated from the material properties, so reading of limiting shaft skin friction from a Pilset file is ignored.)



3.1 Intranet Link and Emails

To view the latest information regarding the **Pile** program or to contact the support team click on

the internet  or  support team buttons on the Start screen or select them from the standard toolbar.

The list below gives information that should be gathered and action that should be taken before contacting the support team.

- version of **Pile** (see top bar of program or Help | About **Pile**)
- specification of machine being used
- type of operating system
- pre-check all input data
- access help file for information

- check web site for current information
- should a program malfunction be specified then attempt to repeat and record the process prior to informing the team

The web site aims to remain up to date with all data regarding the program and available versions. Should any malfunctions persist then the work-around or fix will be posted on the web site.

The input file can be emailed to the support team by choosing the 'Help | Email' from the program menu


4 Assembling Data

Details of the following should be gathered:

- the drained/undrained parameters of the different soil materials at the proposed site;
- ground water data - phreatic surface location and piezometric pressure distribution elevations if needed;
- soil layer levels;
- geometry of the pile and cross-section information, and depth of the pile.

5 Input Data


Data is input via options that are available in the Data menu, or via the [Gateway](#).

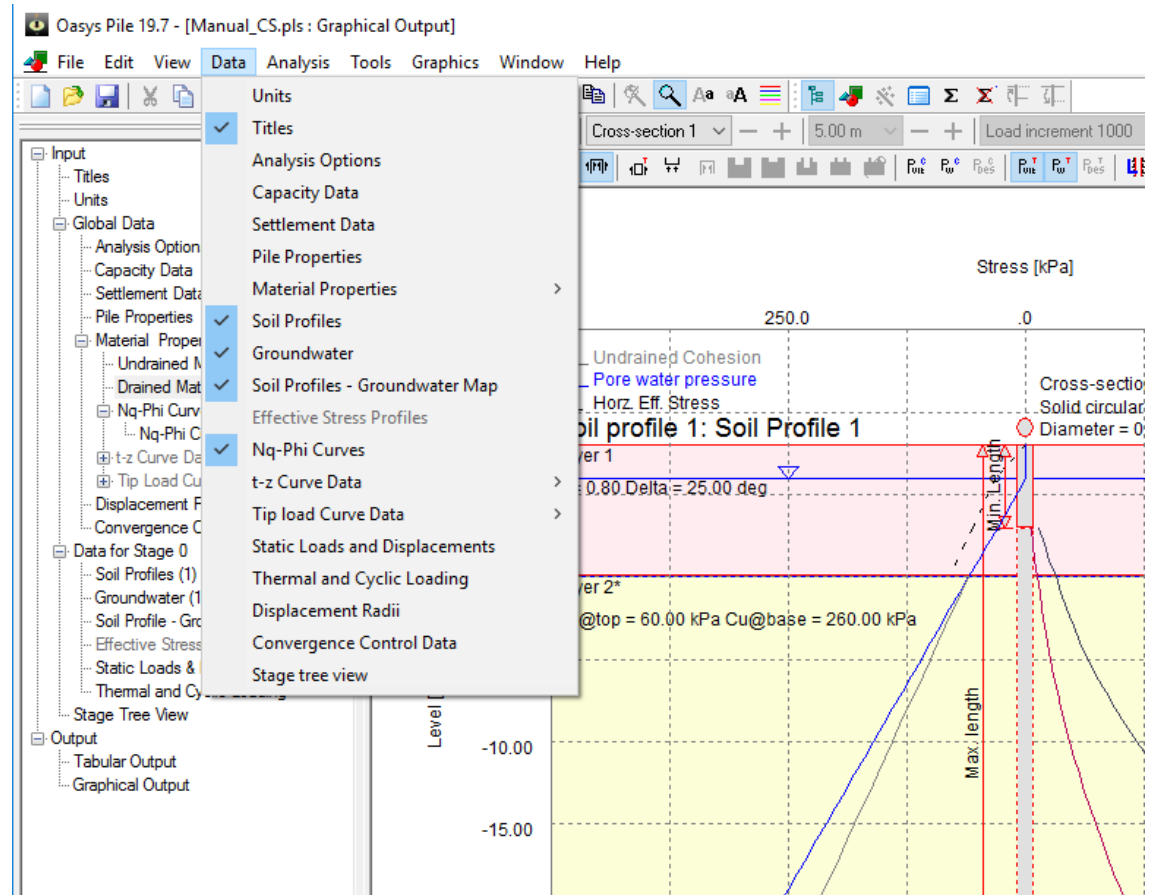

For options other than "Units and Preferences" and "Analysis Options" a check mark is placed against the option once data has been entered.

5.1 Titles

The first window to appear, for entry of data into **Pile**, is the Titles window.

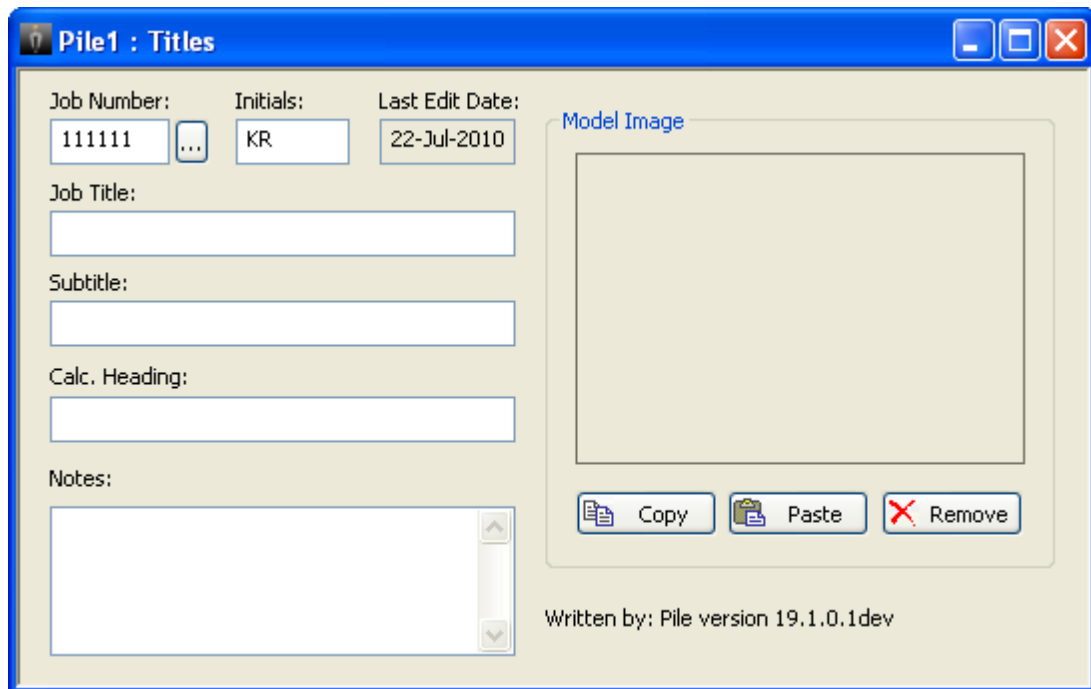

This window allows entry of identification data for each program file. The following fields are available.

Job Number allows entry of an identifying job number. By clicking the drop-down button, the job numbers previously used can be accessed.

Initials for entry of the user's initials.

Date this field is set by the program at the date the file is saved.

Job Title allows a single line for entry of the job title.

Subtitle allows a single line of additional job or calculation information.

Calculation Heading allows a single line for the main calculation heading.

The titles are reproduced in the title block at the head of all printed information for the calculations. The fields should therefore be used to provide as many details as possible to identify the individual calculation runs.

Notes allow the entry of a detailed description of the calculation. This can be reproduced at the start of the data output by selection of notes using File | Print Selection.

5.1.1 Titles window - Bitmaps

The box in the right of the Titles window can be used to display a picture beside the file titles.


To add a picture, place an image on to the clipboard. This must be in a RGB (Red / Green / Blue) Bitmap format. Select the "Paste Bitmap" button to place the image in the box.

The image is purely for use as a prompt on the screen and can not be copied into the output data. Care should be taken not to copy large bitmaps, which can dramatically increase the size of the file.

To remove a bitmap select the button "Remove Bitmap".

5.2 Units

The Units dialog is accessible via the [Gateway](#), or by choosing Data | Units from the program's menu. It allows the units for entering the data to be specified and reporting the results of the calculations. These choices are stored in, and therefore associated with, the data file.

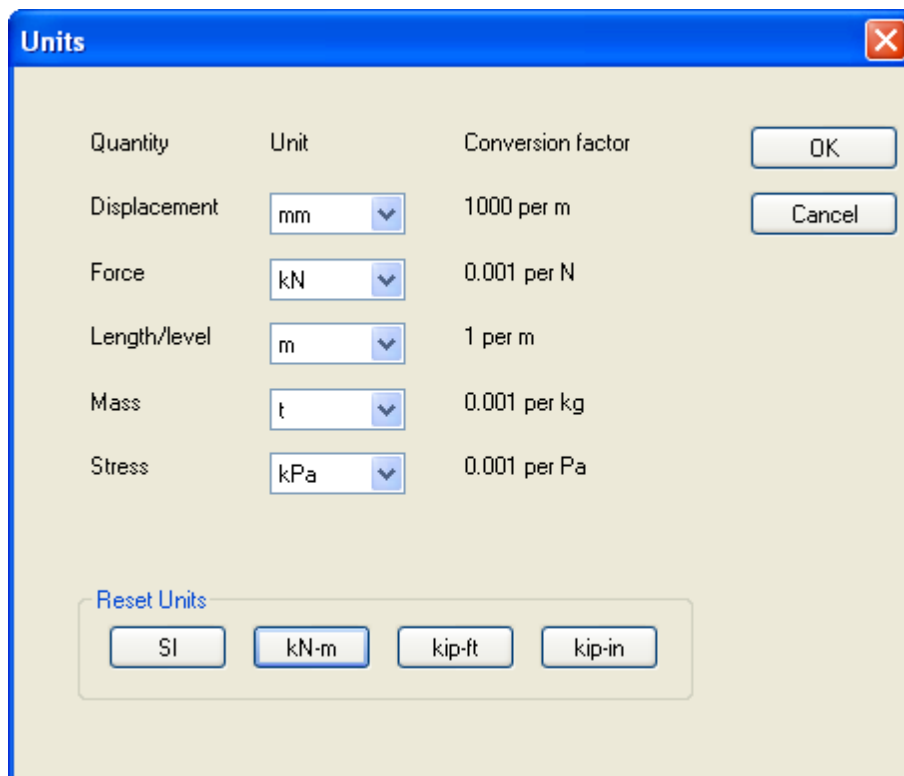

Default options are the Système Internationale (SI) units - kN and m. The drop down menus provide alternative units with their respective conversion factors to metric.

Standard sets of units may be set by selecting any of the buttons: SI, kN-m, kip-ft kip-in.

Once the correct units have been selected click 'OK' to continue.

SI units have been used as the default standard throughout this document.

5.3 Analysis Options

The following general data is entered to define the outline of the problem and type of analysis to be carried out.

The screenshot shows a software dialog box titled "Analysis Options". It contains four main sections with various input options:

- Analysis Type:** Two checkboxes, "Capacity" and "Settlement", both of which are checked.
- Effective Stresses:** Two radio buttons, "Calculated" (which is selected) and "User defined".
- Datum Information:** Two radio buttons, "Elevation" (which is selected) and "Depth below ground level".
- Staged Analysis:** Two radio buttons, "Single stage" and "Multiple stages" (which is selected).

At the bottom right of the dialog are two buttons: "OK" and "Cancel".

Analysis type

Type of analysis can be selected - either Capacity or Settlement or both. If only Capacity analysis is selected then the data input for Settlement will be disabled, and vice versa.

Effective Stresses

Either of the following options can be selected:

Calculated - the effective stresses in the soil layers are calculated by the program.

User-defined - the effective stress profiles (both vertical stress profile and horizontal stress profile) to be used by the program in calculating the pile capacity are specified.

Datum Information

There are two choices for datum.

- Depth below Ground Level
- Elevation (above Ordnance Datum).

Staged Analysis - Whether the given file is used to model single stage analysis or multiple stage analysis. The Gateway is updated according to the selection made here.

5.4 Capacity Data

The following data needs to be entered to specify the type of capacity calculations to be carried out:

Capacity Calculations

Calculation Method

☐ Working Load

☐ Design Resistance

☒ Code Based

Design Code

Country Code: IS 2911

Note:

1. In Working Load approach, user-defined partial/global factors are applied to skin friction and end bearing components. Negative skin friction is included in computation of allowable bearing capacity.

2. In Design Resistance approach, user-defined partial/global factors are still applied to skin friction and bearing components. However, user needs to specify material and model factors too. Negative skin friction is excluded in the calculation of design resistance.

3. In Code Based approach, FoS are taken directly from the code. They are not defined by the user unlike the above two methods.

< Back Next > Cancel Help

Calculation Method

There are three options available:

- **Working Load**
- **Design Resistance**
- **Code-based**

In this method, the explicit design code has to be specified. Presently, EC7(No National Annex), EC7(United Kingdom) and IS 2911 are available.

For theory about each of the above approaches, refer the topics [Working Load Approach](#), [Limit State Approach](#) and [Code-Based](#).

5.4.1 Working Load

The following factors of safety must be specified:

Working Load

Compression

- ☒ Calculate compressive capacity
- Global FoS**
 - ☒ Use global FoS criterion
 - Global factor on ultimate capacity (F_g)
- Partial FoS**
 - ☒ Use partial FoS criterion
 - Partial factor on ultimate skin friction (F_{s1})
 - Partial factor on ultimate end bearing (F_b)
- Shaft FoS**
 - ☒ Use shaft FoS criterion
 - Factor applied to ultimate skin friction (F_{s2})
- Limiting Pile Stress**
 - ☒ Use limiting pile stress criterion
 - Limiting pile material stress at working load kPa

Tension

- ☒ Calculate tensile capacity
- Shaft FoS**
 - ☒ Use shaft FoS criterion
 - Factor applied to ultimate skin friction (F_{s2})
- Limiting pile stress**
 - ☒ Use limiting pile stress criterion
 - Limiting pile material stress at working load kPa

< Back Finish Cancel Help

In this approach, the following factors need to be specified:

Global factor on ultimate capacity

Partial factor on ultimate skin friction

Partial factor on end bearing

Factor applied to ultimate skin friction

In the working load option, at least one of the following combinations should be selected:

- global factor of safety on total bearing capacity
- partial factors of safety on shaft skin friction and end bearing
- factor of safety on shaft skin friction only


The limiting pile stress criterion can also be selected.

The program calculates the minimum capacity from all the selected combinations and prints it as the allowable capacity.

Also, compression and tension related parameters need to be specified separately. At least one of tension or compression capacity computations should be selected.

For more information, refer to [Allowable Capacity - Working Load Approach](#)

5.4.2 Design Resistance

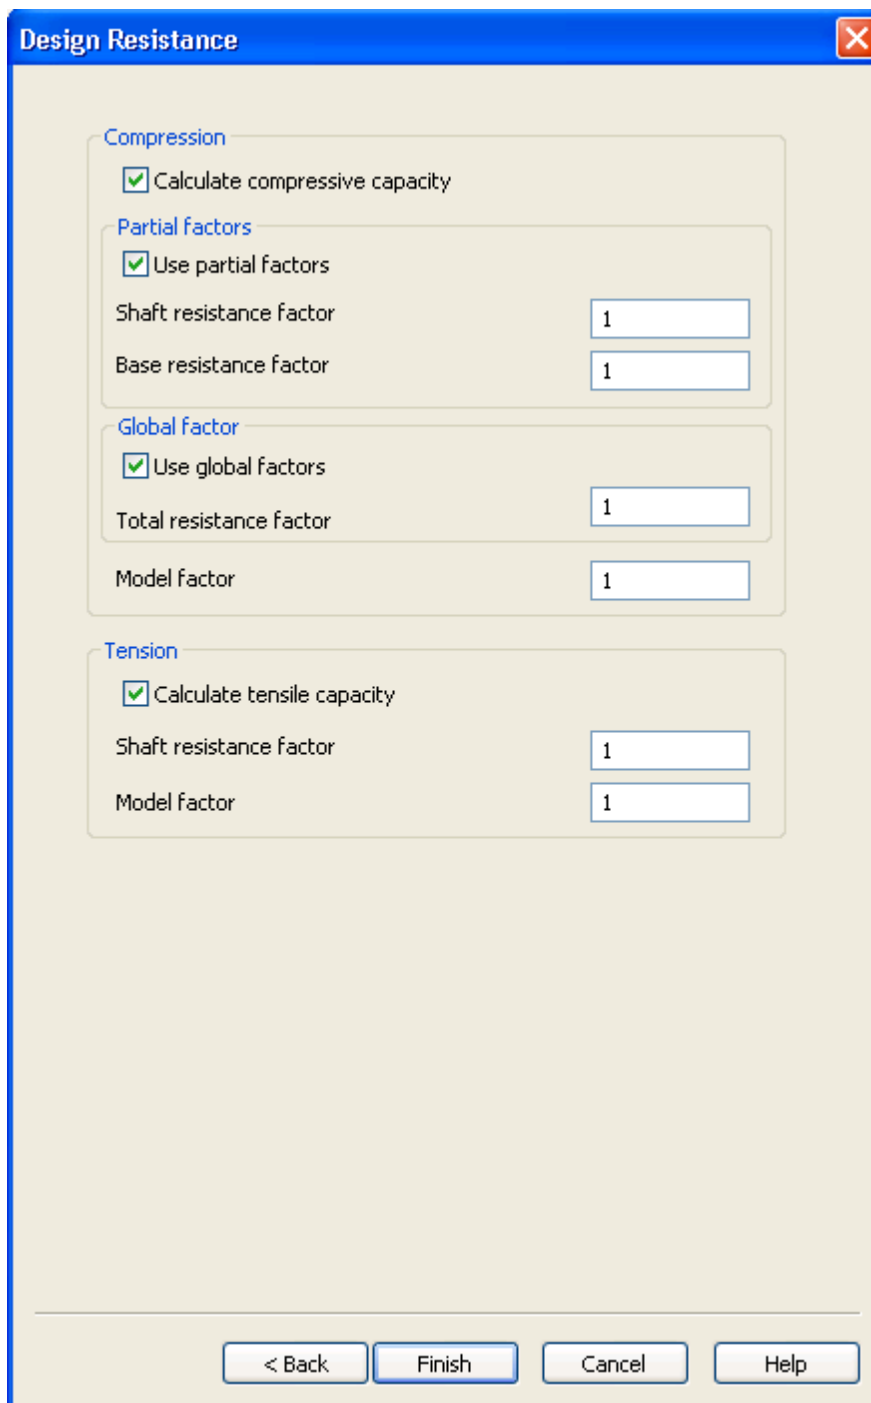

The image shows a software dialog box titled "Design Resistance". It contains several sections for configuring calculations. The "Compression" section has a checked checkbox for "Calculate compressive capacity". Below it, the "Partial factors" section has a checked checkbox for "Use partial factors" and two input fields: "Shaft resistance factor" and "Base resistance factor", both containing the value "1". The "Global factor" section has a checked checkbox for "Use global factors" and two input fields: "Total resistance factor" and "Model factor", both containing the value "1". The "Tension" section has a checked checkbox for "Calculate tensile capacity" and two input fields: "Shaft resistance factor" and "Model factor", both containing the value "1". At the bottom of the dialog are four buttons: "< Back", "Finish", "Cancel", and "Help".

Design Resistance

Compression

☒ Calculate compressive capacity

Partial factors

☒ Use partial factors

Shaft resistance factor: 1

Base resistance factor: 1

Global factor

☒ Use global factors

Total resistance factor: 1

Model factor: 1

Tension

☒ Calculate tensile capacity

Shaft resistance factor: 1


Model factor: 1

< Back Finish Cancel Help

In this approach, either compression or tension computations or both can be selected. For the compression case, the program computes the lowest capacity from the selected combinations (partial factors' combination and/or global factor combination), and reports it as the design capacity. Design resistance does not include any contribution from negative skin friction.

For more information, refer to [Design Resistance - Limit State Approach](#)

5.4.3 EC7 (No National Annex)

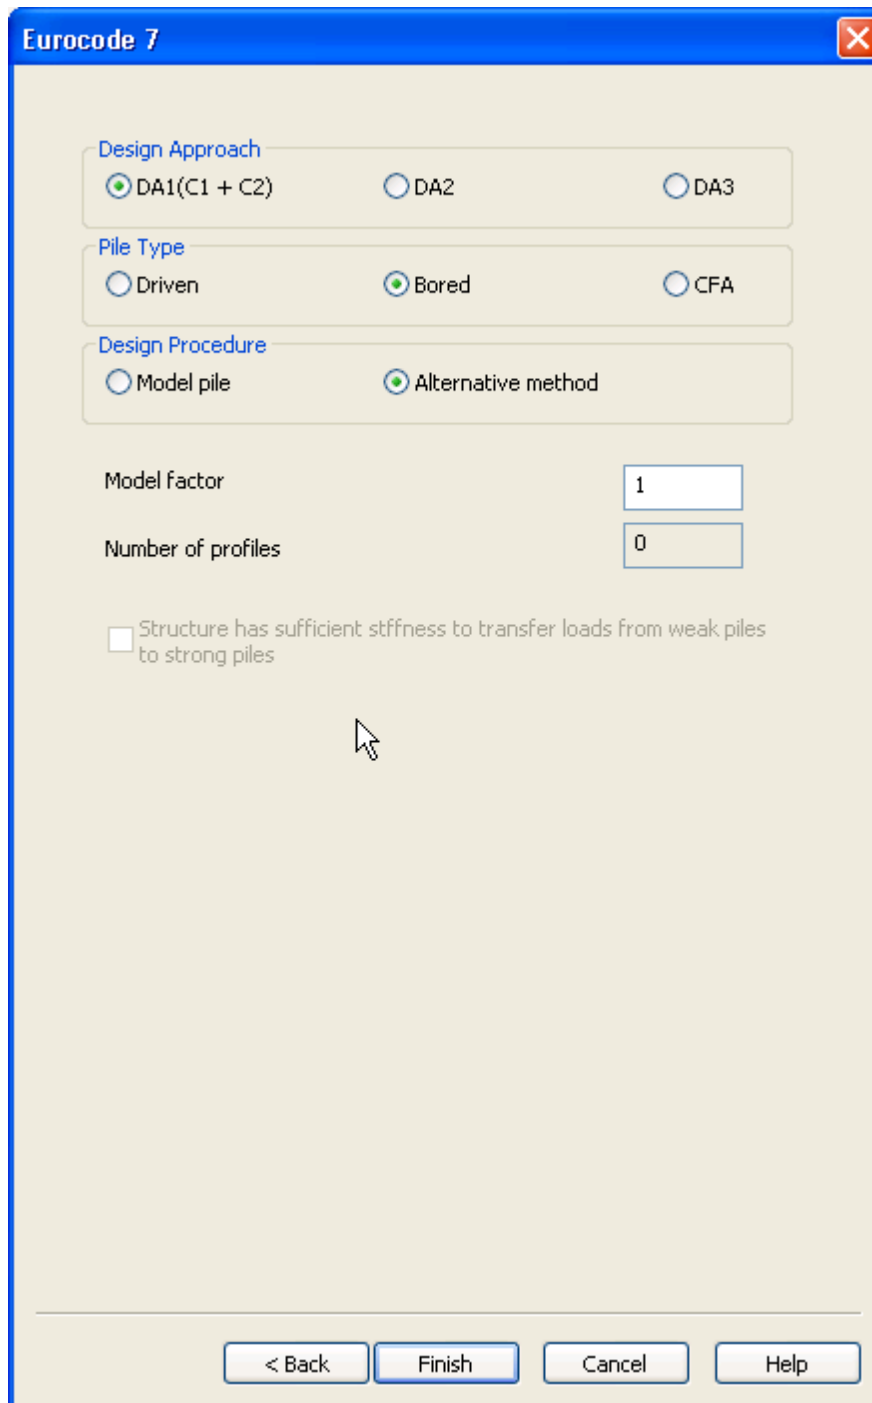

The image shows a software dialog box titled "Eurocode 7". It contains three sections for selection: "Design Approach" with radio buttons for DA1(C1 + C2), DA2, and DA3; "Pile Type" with radio buttons for Driven, Bored, and CFA; and "Design Procedure" with radio buttons for Model pile and Alternative method. Below these are two input fields: "Model factor" with the value 1 and "Number of profiles" with the value 0. There is an unchecked checkbox labeled "Structure has sufficient stiffness to transfer loads from weak piles to strong piles". At the bottom are four buttons: "< Back", "Finish", "Cancel", and "Help".

Eurocode 7

Design Approach

☒ DA1(C1 + C2) ☐ DA2 ☐ DA3

Pile Type

☐ Driven ☒ Bored ☐ CFA

Design Procedure

☐ Model pile ☒ Alternative method

Model factor: 1

Number of profiles: 0

☐ Structure has sufficient stiffness to transfer loads from weak piles to strong piles

< Back Finish Cancel Help

Code specific data should be specified in this dialog. Either of DA1, DA2 and DA3 can be specified. Further, either model pile procedure or alternate procedure can be specified.

The check box regarding stiffness is active only when the model pile procedure is selected.

The "Number of profiles" refers to number of soil profiles and is read-only.

5.4.4 EC7 (United Kingdom)

Eurocode 7 (U.K.)

Design Approach

☒ DA1(C1 + C2) ☐ DA2 ☐ DA3

Pile Type

☒ Driven ☐ Bored ☐ CFA

Model factor: 1.4

Partial Factors On Negative Skin Friction

Set A1 partial factor: 1

Set A2 partial factor: 1

☐ Serviceability is verified by load tests (preliminary/working) carried out on more than 1% of constructed piles to loads not less than 1.5 times the representative load for which they are designed

☐ Resistance is verified by a maintained load test taken to the calculated, unfactored, ultimate resistance.

Partial Resistance Factors

DA1 C1

Shaft resistance factor for set R1 (Compression): 1.00

Base resistance factor for set R1: 1.00

Shaft resistance factor for set R1 (Tension): 1.00

DA1 C2

Shaft resistance factor for set R4 (Compression): 1.50

Base resistance factor for set R4: 1.70

Shaft resistance factor for set R4 (Tension): 2.00

BS 8004:2015

☒ Enable serviceability check by applying Fos on shaft capacity

Shaft only resistance factor (Compression): 1.2

Shaft only resistance factor (Tension): 1.2

< Back Finish Cancel Help

In this case, only DA1 is available. The model factor is read-only, and depends on whether the the second check box shown above is selected or not.

Also, partial factors on negative skin friction for the two action factor sets A1 and A2 respectively need to be specified. The negative skin friction is considered only in compression calculations as unfavourable permanent load. It is not considered at all in tension calculations. It is recommended to refer to A.3.1 section in the UK national annex for guidance on these factors. These values can be ignored if there is no negative skin friction in the model.

The user can also enable BS 8004 serviceability check by selecting the relevant check box. When this option is selected, the partial factor for shaft specified in this dialog is used in the calculations. Also, the program compares the capacities from DA1 C1 and DA1 C2 with the capacity from BS8004 serviceability check, and output the minimum of these as the design capacity of the pile. The load factors used in this serviceability check are all 1.00 - even for negative skin friction.

5.4.5 IS 2911

IS 2911

Pile Type (Concrete)

☐ Driven cast in-situ
☐ Bored cast in-situ
☒ Driven pre-cast
☐ Bored pre-cast

Factors of Safety

Global factor of safety in compression: 2.6

Global factor of safety in tension: 3.1

Partial FoS

☒ Use partial FoS in addition to Global FoS

Partial factor on shaft (compression): 2.8

Partial factor on base (compression): 3.1

Tension reduction factor for skin friction: 0.9

Critical Depth

☒ Number of diameters
☐ Absolute value

Number of pile diameters: 15.8

Material Factors

☐ Enable material factors

☒ Consider N-Gamma in end bearing capacity computation

☒ Limit effective overburden pressure in skin friction computation to the value at critical depth

☐ Account for excess weight of pile over equivalent soil column

Density of pile: 24.00000 [kN/m³]

< Back Finish Cancel Help

For IS 2911 the type of pile, factors of safety, and critical depth may be specified. The other parameters are optional.

As per IS 2911 the N_q values for a drained soil type are computed based on the type of pile selected, and minimum global factors of safety imposed. Partial factors may be chosen in

addition to global factors of safety - but this is not mandatory. When the partial factors are also selected, the program computes the allowable load as the minimum from both the global factor approach and the partial factor approach.

A tension reduction factor for skin friction computation should be specified.


The critical depth can be entered either as an absolute value or in terms of the number of pile diameters.

Material factors may be optionally enabled. The program then uses the factored material parameters in pile capacity calculations. The material factors should be specified on a per material basis for $\tan\phi$ or cohesion, depending on the type of soil material. These values then would need to be entered in the drained/undrained materials table views.

The contribution of the N_γ term in the evaluation of end bearing capacity may be selected or ignored.

The excess weight of pile over the surrounding soil may also be optionally taken into account. This may be relevant for offshore piles or other piles which protrude above the ground. To model piles protruding out of the ground, dummy soil layers with nearly zero unit weights above the actual ground level should be defined. When exercising this option the density of pile material should be entered.

5.5 Settlement Data

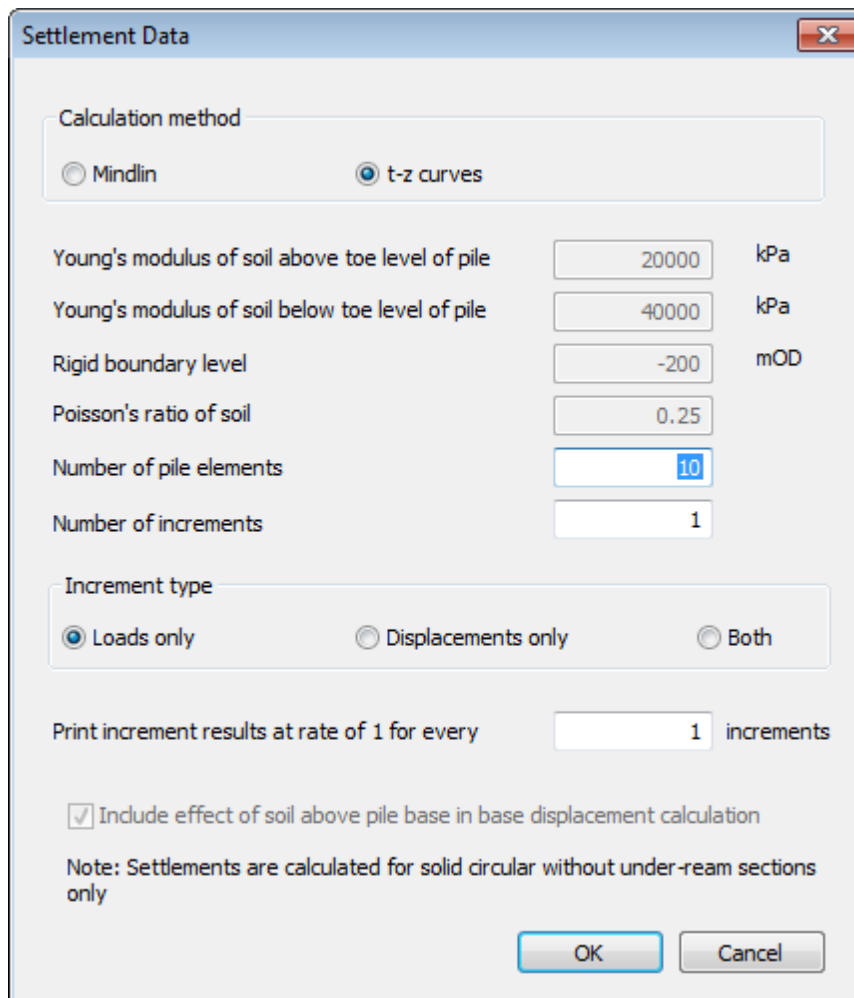

The image shows a 'Settlement Data' dialog box with the following fields and options:

- Calculation method:** Radio buttons for 'Mindlin' and 't-z curves' (selected).
- Young's modulus of soil above toe level of pile:** Text box with '20000' and unit 'kPa'.
- Young's modulus of soil below toe level of pile:** Text box with '40000' and unit 'kPa'.
- Rigid boundary level:** Text box with '-200' and unit 'mOD'.
- Poisson's ratio of soil:** Text box with '0.25'.
- Number of pile elements:** Text box with '10'.
- Number of increments:** Text box with '1'.
- Increment type:** Radio buttons for 'Loads only' (selected), 'Displacements only', and 'Both'.
- Print increment results at rate of 1 for every:** Text box with '1' and unit 'increments'.
- Include effect of soil above pile base in base displacement calculation:** Checked checkbox.
- Note:** Settlements are calculated for solid circular without under-ream sections only.
- Buttons:** 'OK' and 'Cancel'.

Settlement data is enabled when settlement analysis is selected.

Calculation method - the calculation method to be used should be selected. The methods provided are Mindlin and t-z curves.

Young's Modulus of soil above toe level of pile and **Young's Modulus of soil below toe level of pile** are average values representing the soil stiffness above and below the pile toe respectively.

Poisson's ratio is the average value from the different soil layers around the pile.

Include effect of soil above pile base in base displacement calculation - whether the stiffness at the base node is to include the effect of soil above the base.

Depth of rigid boundary - the level at which the soil displacements are zero.

Number of pile elements - the pile is divided into the number of elements and [Pile Stiffness](#) is calculated for each element.

Number of increments - the load is applied in this number of equal increments

Increment type - i.e. whether load alone is incremented, the applied displacement alone is incremented, or both.

Increasing the increments helps to reduce any incompatibilities between relative displacements at the pile-soil interface, and the mobilised skin friction.

The rate at which the results from various increments need to be printed e.g. one in every 10 increments, can be specified. Irrespective of the frequency specified, the program always prints the last increment.

5.6 Pile Geometry

Pile Geometry contains information regarding the type of pile, the length of the pile, cross-section and under-ream dimensions.

5.6.1 Pile Properties

The **Pile Properties** dialog presents the following input data.

Pile Properties

Pile cross-section: Solid Circular

Young's modulus

☐ Use different values for compression and tension

Compression: 2e+007 kPa

Tension: 2e+007 kPa

Linear coefficient of thermal expansion: 0 /°C

Reduction factor for internal skin friction: 0.9

Under-reams (Solid only)

☐ With under-ream ☒ Without under-ream

Pile head

☒ Free ☐ Fixed

Notes:

1) Settlements are calculated for solid circular piles without under-ream only.

2) Linear coefficient of thermal expansion and pile head condition are considered only if thermal load is specified and is active.

< Back Next > Cancel Help

Pile cross-section

The different types of cross-sections available are Solid Circular, Hollow Circular, Solid Square, Hollow Square and H-Pile.

Settlements are calculated for solid circular and solid square sections without under-ream only. If other cross-section types are selected, an error message will appear upon analysis.

Young's modulus

This is used in the settlement calculation. [Different Young's modulus values](#) may be set for segments in compression and tension. If the "Use different values....." option is unchecked, the

user may enter only one Young's modulus value for all segments.

Linear coefficient for thermal expansion - coefficient describing the relative change in length of pile per unit of temperature change. This is relevant only when thermal loading is applied to the Pile.

Under-reams (Solid only)

This option is available only if "Solid" pile type option is selected.

Reduction Factor for Internal Skin Friction

This factor is used in calculating the internal skin friction.

Pile head - fixed or free. By default it is free.

5.6.2 Pile Lengths

The **Pile Lengths** dialog presents the following input data.

Pile Lengths

Diagram illustrating pile length parameters: L_{min} , L_{max} , and $N_{increments}$.

☐ Single pile length
☒ Minimum pile length
☐ Maximum pile length
☒ Number of increments
☐ Increment size
 Depth of pile top below the top of the highest soil layer

10 m
 20 m
 1
 10.000 m
 0 m

< Back Next > Cancel Help

Single pile length - If checked then capacity and settlements are calculated for one pile length only.

Minimum pile length - the minimum pile length for which the pile capacity to be calculated.

Maximum pile length - the maximum pile length for which the pile capacity to be calculated.

Number of increments - the number of increments between the minimum and maximum pile depth for which the pile capacity is to be calculated.

Quantities like skin friction, plugged capacity etc. do not vary linearly with depth. The accuracy of such calculations can be improved by choosing a sufficient number of increments.

Depth of pile top below the top of the highest soil layer - is the difference in height between the highest soil layer and the top of the pile. If this value is positive, it is used to represent basement piles. If this value is negative, it is used to represent general and local scour if the water table is above ground level.

5.6.3 Pile Cross-section Dimensions


The **Pile Cross-section Dimensions** dialog allows the user to define the different pile cross-sections.

Multiple cross-sections can be entered - one per row of the table.

Units of cross-section dimensions - specifies the required units for entering cross-section data in this dialog.

There are 2 types of tables based on the pile cross section:

- **Uniform** - This option is for modeling piles that have a uniform cross section over the whole length of the pile. This applies to hollow piles and H-piles.

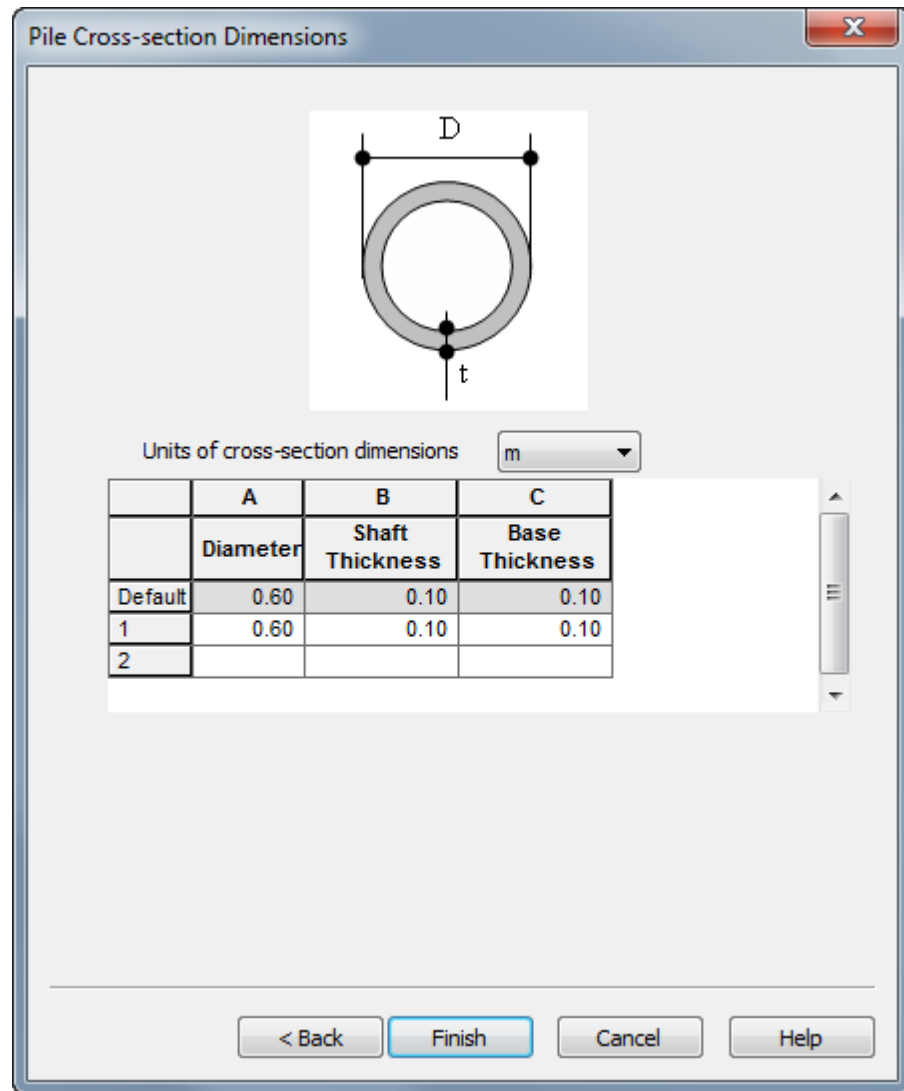

Circular cross-section

- Shaft Diameter outside
- Shaft Wall Thickness (for hollow piles only)
- Wall Thickness at Base (for hollow piles only)

Square cross-section

- External Side Width
- Shaft Wall Thickness (for hollow piles only)
- Wall Thickness at Base (for hollow piles only)

H-Pile

- Depth along Web
 - Width along Flanges
 - Average Web Thickness
 - Average Flange Thickness
-
- **Varying** - This option is available for modeling piles that have step change in cross section at various depths down the pile.


This option is allowed only for solid circular/square piles. The user can enter a maximum of 3 widths down the pile. The fields

"Second width location" and "Third width location" correspond to depths of cross section changes from the top of the pile.

If the user wants to model a solid pile with uniform cross section, then he must enter the "No. of cross sections" as 1, and enter the top diameter or top width depending on the cross section.

The program does NOT, however, include any additional bearing capacity from step changes in cross section dimensions.

Pile Cross-section Dimensions

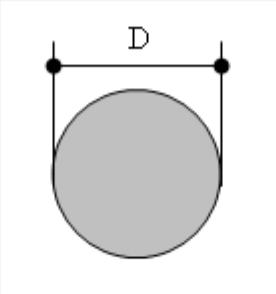

Units of cross-section dimensions: m

	A	B	C	D	E	F
	No. of cross sections	Top dia.	Second dia. depth	Second dia.	Third dia depth	Third dia.
Default	1	1.00	0.00	0.00	0.00	0.00
1	1	0.60				
2						


Notes:

- 1) Depth is measured from the top of the pile.
- 2) To specify a uniform cross-section, set "No. of cross sections" to be 1. For stepped piles set it to be 2 or 3 as required.
- 3) Any additional bearing capacity from changes in cross section dimensi

< Back Finish Cancel Help

5.6.4 Under-ream

The **Under-ream** dialog presents the following input data.

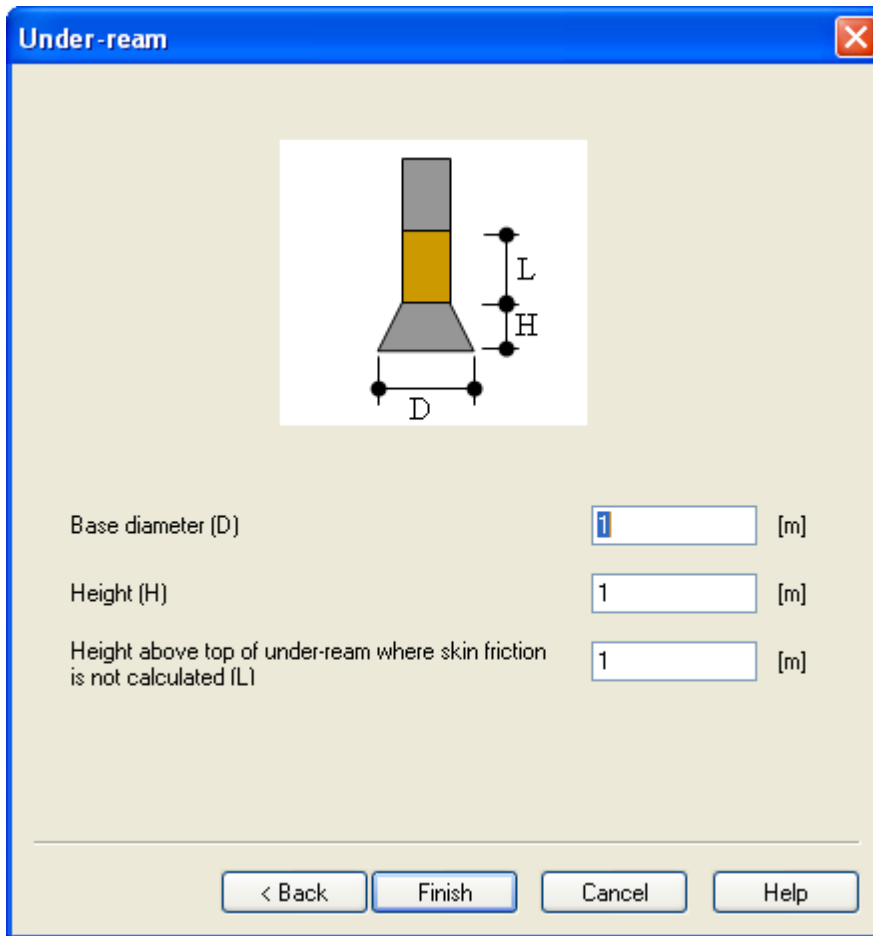

The **Under-ream** dialog box features a schematic diagram of a tapered pile. The pile has a base diameter D , a height H for the under-ream section, and a height L above the under-ream section where skin friction is not calculated. The diagram shows a grey pile with a yellow under-ream section.

Base diameter (D) [m]

Height (H) [m]

Height above top of under-ream where skin friction is not calculated (L) [m]

< Back Finish Cancel Help

- Base diameter
- Height of the under-ream
- Height above top of under-ream where skin friction is neglected

5.7 Material Properties

The **Material Properties** section presents the following input data.

5.7.1 Undrained Materials

Each record in the **Undrained Materials** table view consists of the following items.

The screenshot shows the 'FIXED.pls : Undrained Materials' window. It contains two main tables. The first table, 'Skin friction data', has columns A through K. The second table, 'End bearing data', has columns I through S. Below the tables are tabs for 'All', 'General', 'Friction', and 'Bearing', and a text field for 'Enter material name.'.

	A	B	C	D		E	F	G	H	I	J	K
	Material description	Bulk unit weight [kN/m³]	Material factor for soil strength (C _u)	Soil strength (C _u)		Skin friction computation	α	Skin friction data		Limiting value		
Top				Base	Top [kPa]			Base [kPa]	Specified	Value [kPa]		
Defaults				Undrained #							20.00	1.00
1	Layer 2	20.00		60.00	260.00	Alpha Specified	0.45			Yes	200.00	
2	Layer 3	20.00		260.00	260.00	Alpha Specified	0.45			Yes	200.00	
3												

I	J	K	L	M	N	O	P	Q	R	S
Skin friction data			t-z curve	End bearing computation	N _c	End bearing data				Tip load curve
q _s Base [kPa]	Limiting value					q _b		Limiting value		
	Specified	Value [kPa]				Top [kPa]	Base [kPa]	Specified	Value [kPa]	
	No		None	Nc Specified				No		None
	Yes	200.00	Elas-Plas t-z 2	Nc Specified	9.00			No		Elas-Plas Tip Load 1
	Yes	200.00	Elas-Plas t-z 2	Nc Specified	9.00			No		Elas-Plas Tip Load 1

Material description - brief descriptions for the material types can be entered here.

Bulk unit weight - bulk unit weight of the soil layer.

Material factor for soil strength - this factor that needs to be applied to cohesive strength or friction angle depending on the type of material.

When the "Working load" method is selected in the [Analysis Options](#), the "Material factor for soil strength" field is greyed out completely. It is active only when the "Design resistance" method is chosen.

Soil strength (C_u)

Top - undrained shear strength of the total stress material at the top of the layer.

Bottom - undrained shear strength of the total stress material at the bottom of the layer.

When the bottom-most layer in the model is assigned a "Total stress" material, the cohesion within the layer is assumed to be constant with value of cohesion specified at the top of the layer - "C_u-Top". The cohesion at the bottom of layer, "C_u-Bottom" is ignored in this case.

The following fields relate to **Friction data**

Method - method of calculating Alpha, the adhesion factor. This is one of API method 1, API method 2, or user-specified value of Alpha.

- adhesion factor, if user-specified.

Limiting value

Specified - select 'Yes' to specify the limiting value.

Value - friction value is limited to this value.

t-z curve - the stress-displacement curve to be used for calculations if the settlement calculation method selected is 't-z curves'. This column is active only when the analysis type in [Analysis Options](#) is 'Settlement' and, the calculation method in [Settlement Data](#) is 't-z curves'.

The following fields are related to **End bearing**

Method - method of calculating N_c , the bearing capacity factor. This is one of user-specified or calculated.

N_c - user-specified bearing capacity factor.

Limiting value

Specified - select 'Yes' to specify the limiting value.

Value - bearing value is limited to this value.

Tip load curve - the stress-displacement curve to be used for calculations if the settlement calculation method selected is 't-z curves'. This column is active only when the analysis type in [Analysis Options](#) is 'Settlement', and the calculation method in [Settlement Data](#) is 't-z curves'.

For information about the methods used to evaluate pile capacities using the total stress approach please refer to the topics: [Shaft friction - Total stress approach](#) and [End bearing - Total stress approach](#).

When using code EC7, additional fields pertaining to material factor sets are available.

	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W
	Skin friction data							End bearing data									
	Alpha	qs		Limiting value	qs material factors		End bearing computation	Nc	Nc material factors		qb		Limiting value	qb material factors			
		Top	Base	Specified	Value	M1	M2			M1	M2	Top	Base	Specified	Value	M1	M2
		[kPa]	[kPa]		[kPa]							[kPa]	[kPa]		[kPa]		
Defaults				No		1.00	1.00	Nc Specified		1.00	1.00			No		1.00	1.00
1	0.50			No				Nc Specified	36.00	1.00	1.00			No			
2				No				Calculated		1.00	1.00			No			
3				Yes	200.00			qb Specified				50.00	100.00			1.00	1.00
4																	

The M1 set values are always 1.00. M2 set values are different from 1.00, and are specified in the

code for only some parameters (C_u , Φ etc.). However, skin friction and end bearing computations can be specified that do not explicitly depend on these parameters. For example, q_s , or q_b can be specified directly, or N_c can be used to calculate them. In these situations, the corresponding M2 parameters would need to be specified, as these are not available in the code. The program uses these M2 values in end bearing/skin friction computations.

Note: The M2 parameters are used for certain design approaches e.g. DA1 Combination 2 and DA3.

5.7.2 Drained Materials

Each record in the **Drained Materials** table view consists of the following items

The screenshot shows the 'FIXED.pls : Drained Materials' window. It contains two main tables for defining material properties.

Table 1: Skin friction data

	Material description	Bulk unit weight [kN/m ³]	Material factor for soil strength (tan δ)	Skin friction computation	β	δ [deg]	Coeff. of earth pressure K	Skin friction data		Limiting value		t-z curve
								q_s		Specified	Value	
								Top [kPa]	Base [kPa]		[kPa]	
Defaults	Drained #	20.00	1.00	Beta						No		None
1	Layer 1	20.00		Earth pressure		25.00	0.80			No		Elas-Plas t-z 1
2												

Below the table is a navigation bar with tabs: All, General, Friction, Bearing. Below that is a text field labeled 'Enter material name.'

Table 2: End bearing data

t-z curve	End bearing computation	N_q	ϕ' [deg]	ϕ_D [deg]	ϕ_{cv}' [deg]	I_r	End bearing data		Limiting value		$N_q - \phi$	Tip load curve
							q_b		Specified	Value		
							Top [kPa]	Base [kPa]		[kPa]		
None	Nq specified								No		Berezantzev Ak B	None
Elas-Plas t-z 1	Nq specified	50.00		0.00					Yes	20000.00		Elas-Plas Tip Load 1

Material description - brief descriptions for each of the material types can be entered here.

Bulk unit weight - bulk unit weight of the soil layer.

Material factor for soil strength - the material factor that needs to be applied to cohesive strength or friction angle depending on type of material.

When the "Working load" method is selected in the [Analysis Options](#), the "Material factor for soil strength" field is greyed out completely. This is active only when the "Design resistance" method is chosen.

The following fields relate to **Friction data**.

Skin friction computation method - either Beta Method or Earth Pressure Method.

- value of beta
- friction angle

Coefficient of earth pressure K - is used to calculate horizontal effective stress from vertical effective stress.

This field is enabled when "Effective stresses" are selected in the [Analysis Options](#).

Limiting value

Specified - select 'Yes' to specify a limiting value.

Value - the friction value is limited to this value.

t-z curve - the stress-displacement curve to be used for calculations, if the settlement calculation method selected is 't-z curves'. This column is active only when the analysis type in the [Analysis Options](#) is 'Settlement' and, the calculation method in the [Settlement Data](#) is 't-z curves'.

The following fields relate to **End bearing**.

N_q computation method - any of user-specified, Bolton or Berezantzev.

N_q - value of bearing capacity factor N_q .

ϕ' - value of effective friction angle for the soil profile.

ϕ_D - value of angle of internal friction corresponding to the soil of overburden. Refer to [Berezantzev method](#).

$\phi_{cv'}$ - value of critical state angle of friction.

I_r - value of the corrected relative density (0 to 1).

Limiting value

Specified - select 'Yes' to specify limiting value.

Value - the bearing value is limited to this value.

N_q - ϕ Curve - used for calculating the value of N_q from friction angle, ϕ .

Tip load curve - the stress-displacement curve to be used for calculations if the settlement calculation method selected is 't-z curves'. This column is active only when the analysis type in the [Analysis Options](#) is 'Settlement' and, the calculation method in the [Settlement Data](#) is 't-z curves'.

This option becomes available for Berezantzev and Bolton methods. "Berezantzev Ak Bk Curves" or user-defined N_q - ϕ curves may be selected.

For information about the methods used to evaluate pile capacities using the effective stress

approach refer to the topics: [Shaft friction - Effective stress approach](#) and [End bearing - Effective stress approach](#).

When using code EC7, additional fields pertaining to material factor sets are available.

	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	AA	AB
	value	qs material factors		End bearing computation	Nq	Phi'	PhiD	Phicv	Ir	Nq material factors		qb		Limiting value	Nq-Phi curve		qb material factors	
	Value	M1	M2							M1	M2	Top	Base	Specified	Value		M1	M2
	[kPa]				[Deg]	[Deg]	[Deg]					[kPa]	[kPa]		[kPa]			
Defaults		1.00	1.00	Nq specified						1.00	1.00			No		Berezantsev Ak Bk C	1.00	1.00
1				Nq specified	0.00					1.00	1.00			No				
2				Nq specified	0.00					1.00	1.00			No				
3				Nq specified	0.00					1.00	1.00			No				
4				Nq specified	0.00					1.00	1.00			No				
5				Nq specified	0.00					1.00	1.00			No				
6				Nq specified	0.00					1.00	1.00			No				
7				Nq specified	0.00					1.00	1.00			No				

The M1 set values are always 1.0. M2 set values are different from 1.00, and are specified in the code for only some parameters (C_u , ϕ etc.) However, skin friction and end bearing computations can be specified that do not explicitly depend on these parameters. For example, q_s , or q_b can be specified directly, or N_q can be used to calculate the same. In these situations, the corresponding M2 parameters would need to be specified, as these are not available in the code. The program uses these M2 values in end-bearing/skin friction computations.

Note: The M2 parameters are used for certain design approaches eg. DA1 Combination 2, DA3.

5.8 Soil Profiles

Multiple soil profiles can be selected in the Soil Profiles table view. Each tab corresponds to one soil profile. Existing soil profiles can be edited or deleted and new soil profiles can be added using the context menu obtained by right-clicking on any tab.

Each record in the table view consists of the following items.

	A	B	C
Layer	Depth below ground level [m]	Material	Contribute to negative skin friction
Defaults	0.00	Alluvium	No
1	0.00	Alluvium	No
2	1.00	RTD	No
3	2.00	LMG _ Upper	No
4	10.00	LMG _ Upnor	No
5	11.50	LMG _ Upnor Reduced	No
6	12.50	THS	No
7			

1: Soil Profile 1 2: Soil Profile 2

Enter depth below ground level

Level at Top/Depth below ground level - level of the top of each layer according to the datum chosen.

The levels must be entered in decreasing order if datum information is elevation in [Analysis options](#) dialog.


The depths must be entered in increasing order if datum information is depths in [Analysis options](#) dialog.


Material - the soil material that is present in the layer.

Contribute to Negative Skin Friction - whether the layer contributes to negative skin friction.

This was material specific in earlier versions of Pile, it is now layer specific.

The material properties can be defined when entering new layer data using the new material wizard. This wizard can be invoked by clicking the wizard toolbar button.

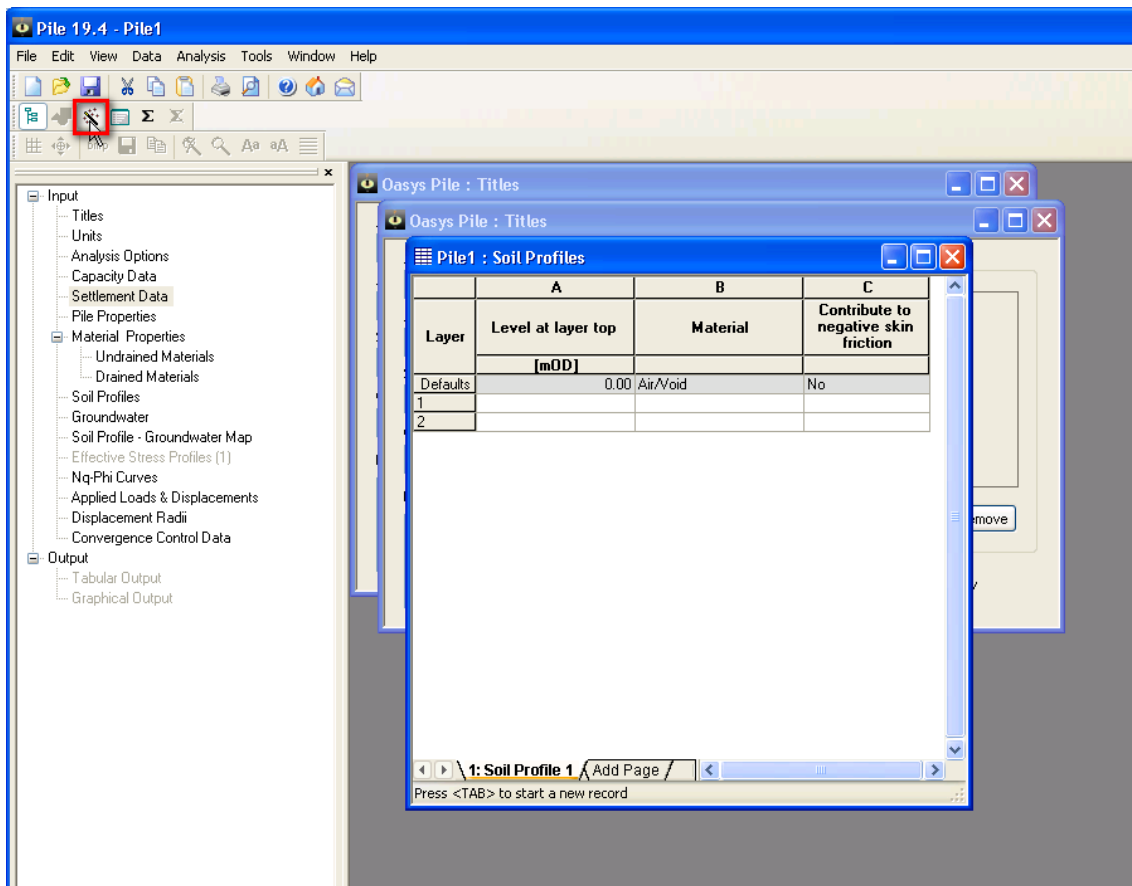

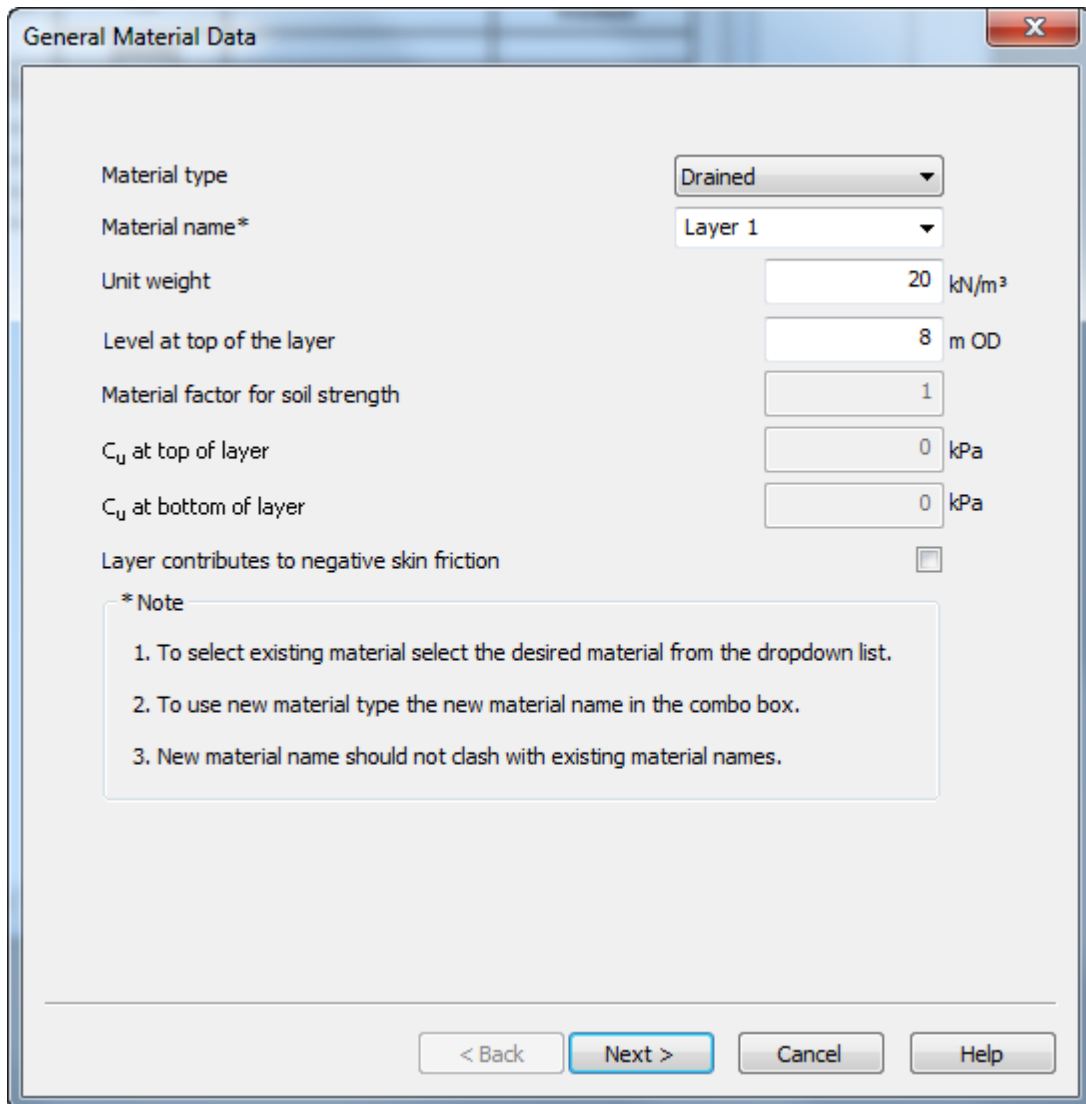

The dialog box titled "General Material Data" contains the following fields and controls:

- Material type:** A dropdown menu currently showing "Drained".
- Material name*:** A dropdown menu currently showing "Layer 1".
- Unit weight:** A text input field containing "20" with the unit "kN/m³".
- Level at top of the layer:** A text input field containing "8" with the unit "m OD".
- Material factor for soil strength:** A text input field containing "1".
- C_u at top of layer:** A text input field containing "0" with the unit "kPa".
- C_u at bottom of layer:** A text input field containing "0" with the unit "kPa".
- Layer contributes to negative skin friction:** A checkbox that is currently unchecked.
- * Note:** A text box containing three instructions:
 1. To select existing material select the desired material from the dropdown list.
 2. To use new material type the new material name in the combo box.
 3. New material name should not clash with existing material names.

At the bottom of the dialog are four buttons: "< Back", "Next >" (highlighted with a blue border), "Cancel", and "Help".

This wizard contains pages to allow definition of layer properties and material properties.

The initial page allows definition of the layer data as well as general material data. The type of material has to be specified in this page. Depending on the type of material selected, relevant pages to define other "Drained" or "Undrained" material properties will be shown.

5.9 Groundwater

Multiple groundwater profiles can be defined in the Groundwater Data table view. Each tab corresponds to one groundwater profile. Existing groundwater profiles can be edited or deleted, and new groundwater profiles can be added using the context menu obtained by right clicking on any tab.

This can be hydrostatic or piezometric.

Each record in the **Groundwater** table view consists of the following items.

The screenshot shows a software window titled "CodeTests.pls : Groundwater". It contains a table with four columns: "Groundwater", "A", "B", and "C". The headers for columns A, B, and C are "Depth below ground level [m]", "Pressure [kPa]", and "Unit weight of water [kN/m³]" respectively. The table has four rows: a "Defaults" row, and three numbered rows (1, 2, 3). The "Defaults" row has values 0.00, 0.00, and 10.00. Row 1 has values 0.00, 0.00, and 10.00. Row 2 is empty. Row 3 is empty. Below the table, there is a status bar with the text "Enter depth of phreatic surface or piezometer". At the bottom, there is a tab bar with two tabs: "1: Groundwater profile 1" (selected) and "2: Groundwater Pro".

Groundwater	A Depth below ground level [m]	B Pressure [kPa]	C Unit weight of water [kN/m³]
Defaults	0.00	0.00	10.00
1	0.00	0.00	10.00
2			
3			

Level/Depth below ground level - level/depth at which the pressure is the specified.

Pressure - pressure at the level/depth when a piezometric profile is entered.

Unit weight of water - the value of unit weight of water. The entry in the first record alone is available for input.

This first line of the table view allows a single value for the unit weight of water to be added. On subsequent lines levels/depths and pressures can be entered to create a piezometric profile. Interpolation between the points is linear and the water profile beneath the lowest point is assumed to be hydrostatic.

If only one data point is entered the program will also assume a hydrostatic groundwater distribution.

For hydrostatic distributions the water pressure (u) is calculated from:

$$u = z_w \gamma_w$$

where:

z_w - depth below water table level


γ_w - specified unit weight of water

Thus a partial hydrostatic condition can be modelled by specifying a value of γ_w less than 10kN/m³.

For piezometric profiles the level/depth and pressure at each known point must be entered. If more than one data point is entered, the program will assume that the points represent piezometers, and the ground water pressure will be interpolated vertically between the specified points. Below the lowest point, groundwater pressure will be assumed to extend hydrostatically.

5.10 Soil Profiles Groundwater Map

The groundwater profile needs to be specified for each soil profile using this table view.

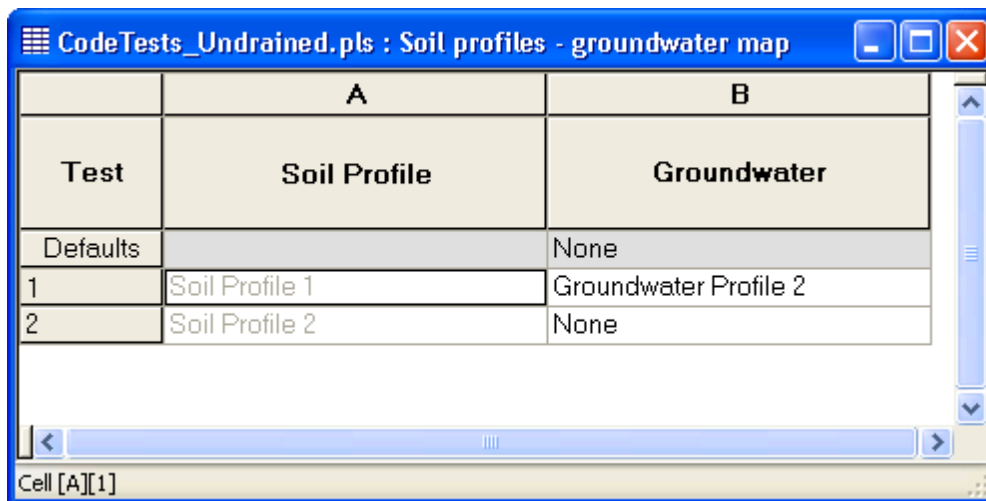


	A	B
Test	Soil Profile	Groundwater
Defaults		None
1	Soil Profile 1	Groundwater Profile 2
2	Soil Profile 2	None

The number of records in this table view is fixed and is the same as the number of soil profiles.

5.11 Effective Stress Profiles

A separate effective stress profile needs to be specified for each soil profile. Each tab corresponds to one soil profile. The tabs in this table view cannot be edited as there is a one-to-one relation between this table view and the Soil Profiles table view.

Each record in the **Effective Stress Profiles** table view consists of the following items.

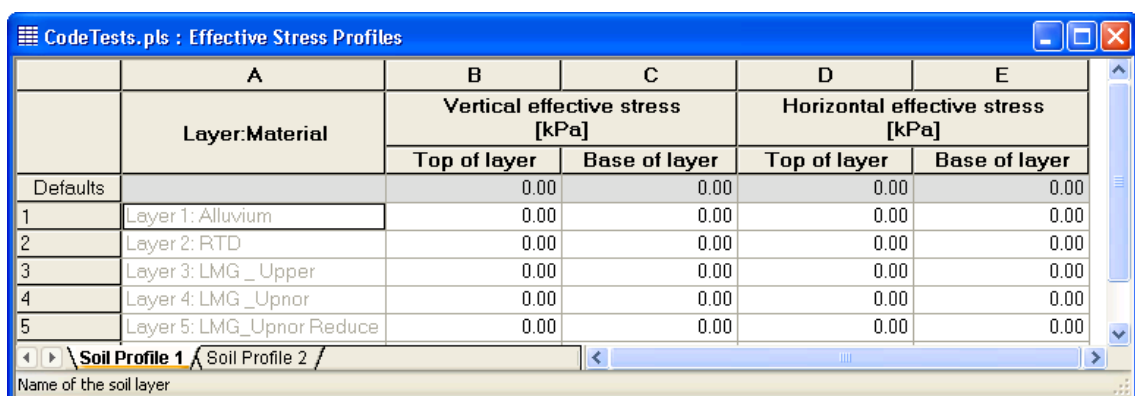

	A	B	C	D	E
	Layer:Material	Vertical effective stress [kPa]		Horizontal effective stress [kPa]	
		Top of layer	Base of layer	Top of layer	Base of layer
Defaults		0.00	0.00	0.00	0.00
1	Layer 1: Alluvium	0.00	0.00	0.00	0.00
2	Layer 2: RTD	0.00	0.00	0.00	0.00
3	Layer 3: LMG_Upper	0.00	0.00	0.00	0.00
4	Layer 4: LMG_Upnor	0.00	0.00	0.00	0.00
5	Layer 5: LMG_Upnor Reduce	0.00	0.00	0.00	0.00

Layer:Material - the soil material that is present in the layer.


Vertical effective stress - user-defined vertical effective stress profile.

Horizontal effective stress - user-defined horizontal effective stress profile.

The vertical and horizontal effective stresses at any intermediate level are linearly interpolated between the top and bottom of layer.

5.12 Nq-Phi Curves

Each record in the **N_q-Phi** table view consists of the following items.

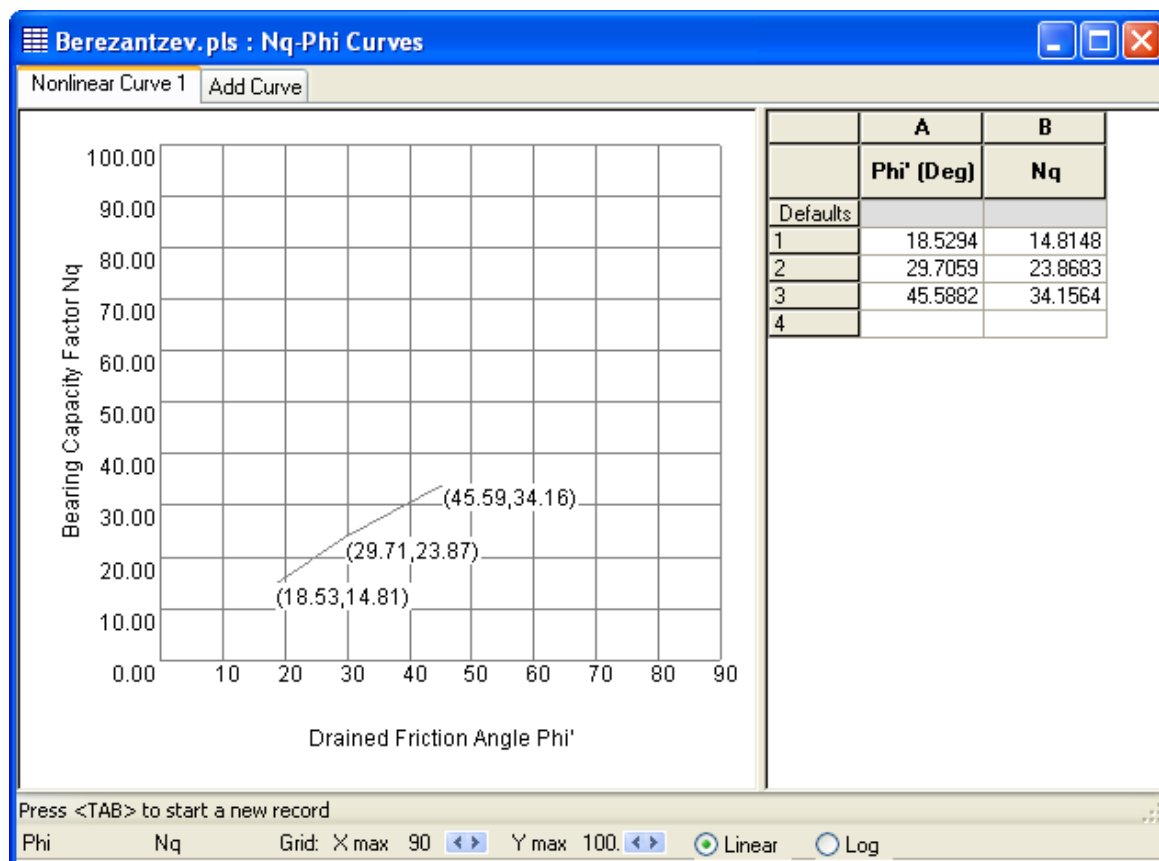

Phi' - the effective friction angle.

N_q - the value of bearing capacity factor at the given friction angle.


This table view is used by the [Berezantzev \(1961\)](#) and [Bolton \(1984\)](#) methods for calculating N_q.

5.13 t-z Curve Data

There are 6 types of t-z curves currently supported by the program. The following sections will cover these options in detail.

5.13.1 Elastic-Plastic

Each record in the **Elastic-Plastic t-z Curves** table view consists of the following items.

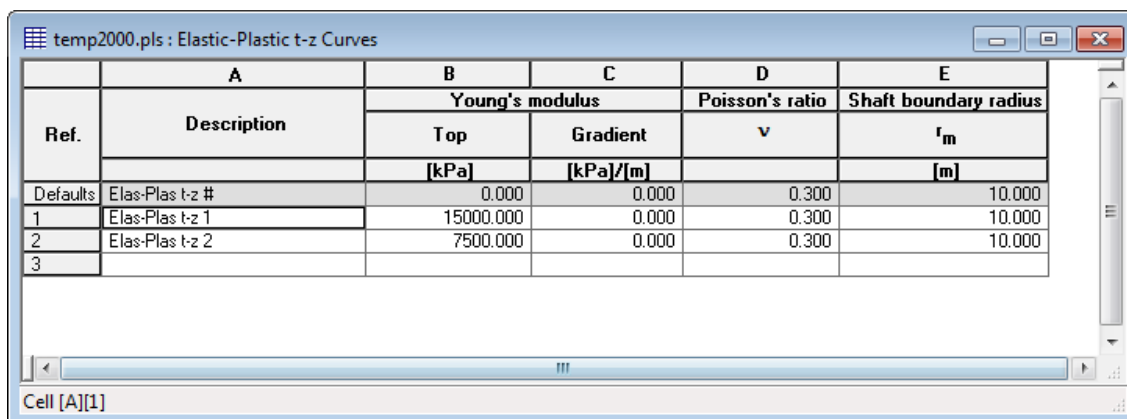

	A	B	C	D	E
		Young's modulus		Poisson's ratio	Shaft boundary radius
Ref.	Description	Top	Gradient	ν	r_m
		[kPa]	[kPa]/[m]		[m]
Defaults	Elas-Plas t-z #	0.000	0.000	0.300	10.000
1	Elas-Plas t-z 1	15000.000	0.000	0.300	10.000
2	Elas-Plas t-z 2	7500.000	0.000	0.300	10.000
3					

Description - the name of the curve.

Young's modulus

Top - the Young's modulus at top of the soil layer.


Gradient - the rate at which the modulus changes down the layer.

Poisson's ratio - the Poisson's ratio of the material.

r_m - the radial distance at which the shear stress in the soil becomes negligible.

5.13.2 Logarithmic

Each record in the **Logarithmic t-z Curves** table view consists of the following items.

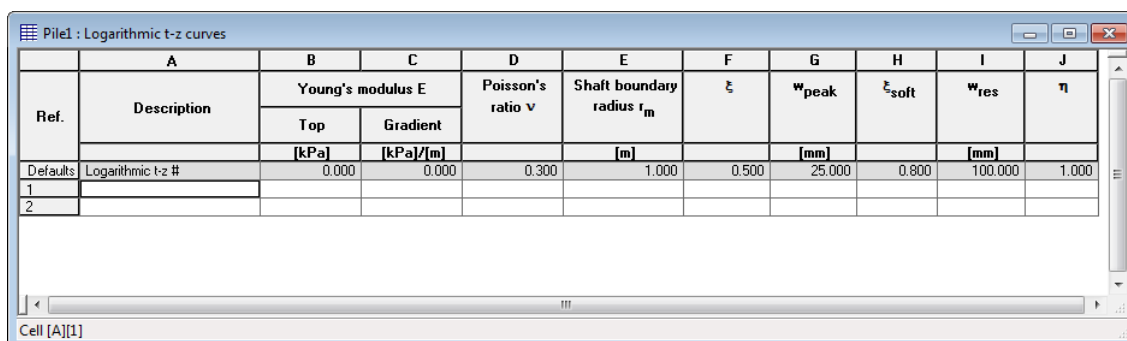

	A	B	C	D	E	F	G	H	I	J
		Young's modulus E		Poisson's ratio ν	Shaft boundary radius r_m	ξ	w_{peak}	ϵ_{soft}	w_{res}	η
Ref.	Description	Top	Gradient							
		[kPa]	[kPa]/[m]		[m]		[mm]		[mm]	
Defaults	Logarithmic t-z #	0.000	0.000	0.300	1.000	0.500	25.000	0.800	100.000	1.000
1										
2										

Description - the name of the curve.

Young's modulus E

Top - the Young's modulus at top of the soil layer.

Gradient - the rate at which the modulus changes down the layer.

Poisson's ratio - the Poisson's ratio value of the material.

r_m - the radial distance at which the shear stress in the soil becomes negligible.

- proportion of peak force which is yield force.

w_{peak} - displacement at peak force.

w_{soft} - fraction of minimum post-peak force.

w_{res} - post-peak displacement to minimum post-peak force.

β - shape parameter controlling the rate of degradation

5.13.3 Chin and Poulos

Each record in the **Chin and Poulos t-z Curves** table view consists of the following items.

Ref.	Description	Young's modulus E		Poisson's ratio ν	Hyperbolic curve fitting constant R_{fs}	Unloading curve fitting constant R_u	Reloading curve fitting constant R_r	Degradation constant s
		Top	Gradient					
		[kPa]	[kPa]/[m]					
Defaults	Chin-Poulos t-z #	0.000	0.000	0.300	1.000			
1	Chin-Poulos t-z 1	10000.000	0.000	0.300	1.000	1.000	1.000	1.000
2								
3								

Description - the name of the curve.

Young's modulus E

Top - the Young's modulus at top of the soil layer.

Gradient - the rate at which the modulus changes down the layer.

Poisson's ratio - the Poisson's ratio of the material.

Hyperbolic curve fitting constant R_{fs} - the hyperbolic constant for pile shaft elements.


Unloading curve fitting constant R_u - the curve fitting constant for the unloading curve.

Reloading curve fitting constant R_r - the curve fitting constant for the reloading curve.

Degradation constant - the secant modulus degradation value due to cyclic loading.

5.13.4 API

Each record in the **Empirical t-z Curves** table consists of the following items.

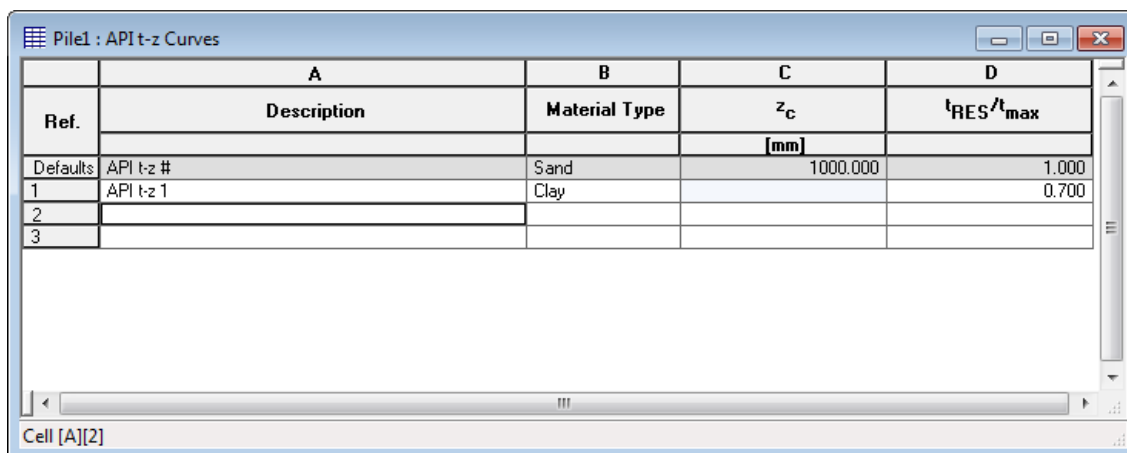

	A	B	C	D
Ref.	Description	Material Type	z_c	t_{RES}/t_{max}
			[mm]	
Defaults	API t-z #	Sand	1000.000	1.000
1	API t-z 1	Clay		0.700
2				
3				

Description - the name of the curve.


Material Type - selection has to be made between two materials: sand and clay.

z_c - the movement required to mobilise maximum stress. This is active only when the material type is sand.

t_{RES}/t_{max} - the ratio of mobilised stress to maximum stress. This is active only when the material type is clay.

5.13.5 Vijayvergiya

Each record in the **Vijayvergiya t-z Curves** table view consists of the following items.

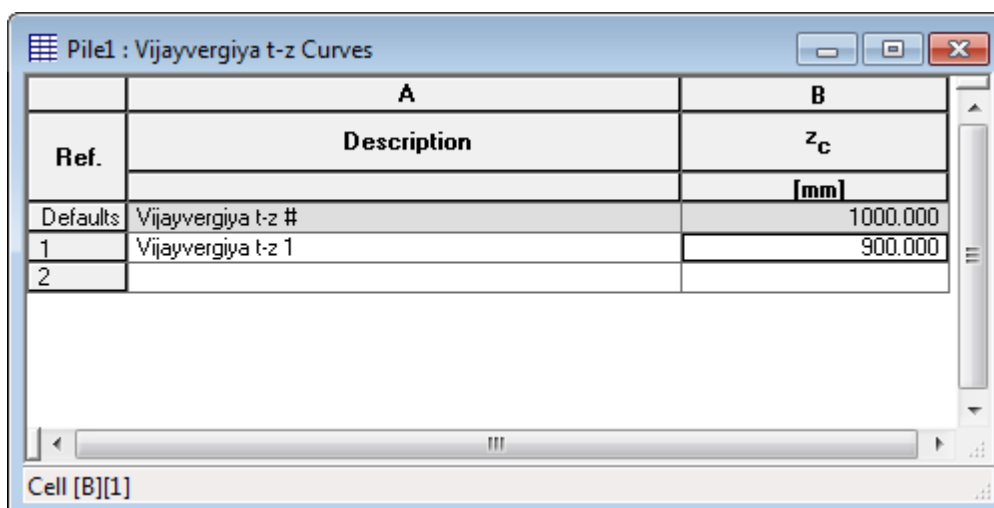


	A	B
Ref.	Description	z_c
		[mm]
Defaults	Vijayvergiya t-z #	1000.000
1	Vijayvergiya t-z 1	900.000
2		

Description - the name of the curve.

z_c - the movement required to mobilise maximum stress. This value is often around 0.3 inches for sands.

5.13.6 User Specified

Each record in the **User Specified t-z Curves** table view consists of the following items.

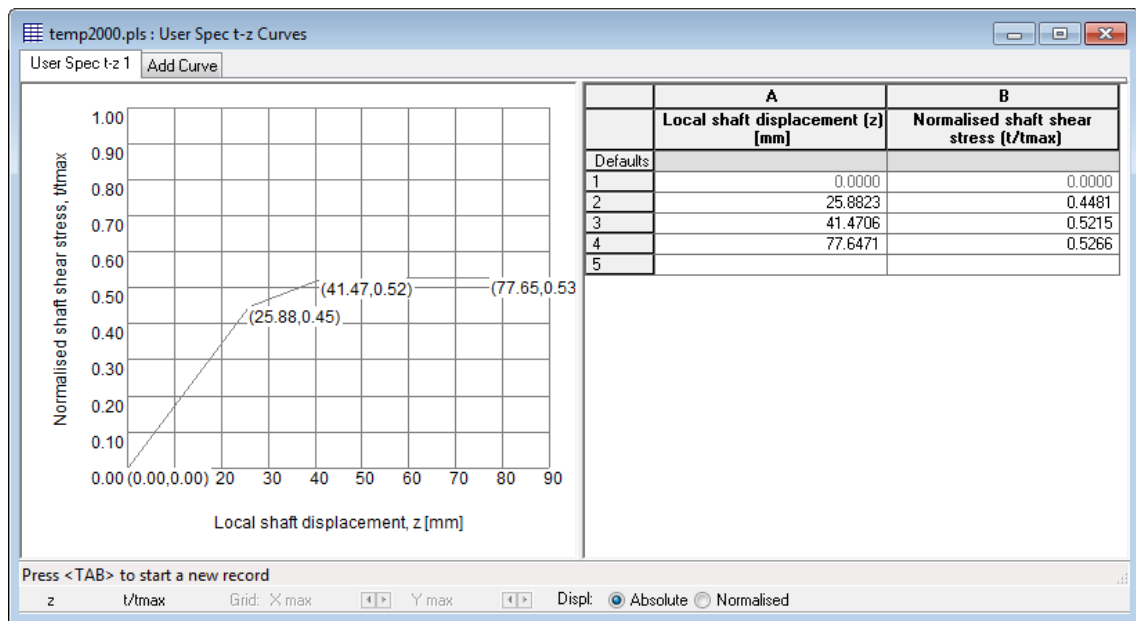

Local shaft displacement z - the shaft displacement. This can also be normalised by selecting the normalised radio button. By default, it is absolute.


Normalised shaft shear stress t/tmax - the ratio of mobilised shear stress to maximum shear stress.

5.14 Tip Load Curve Data

There are 6 types of tip load curves supported by the program. The following sections cover these options in detail.

5.14.1 Elastic-Plastic

Each record in the **Elastic-Plastic Tip Load Curves** table view consists of the following items.

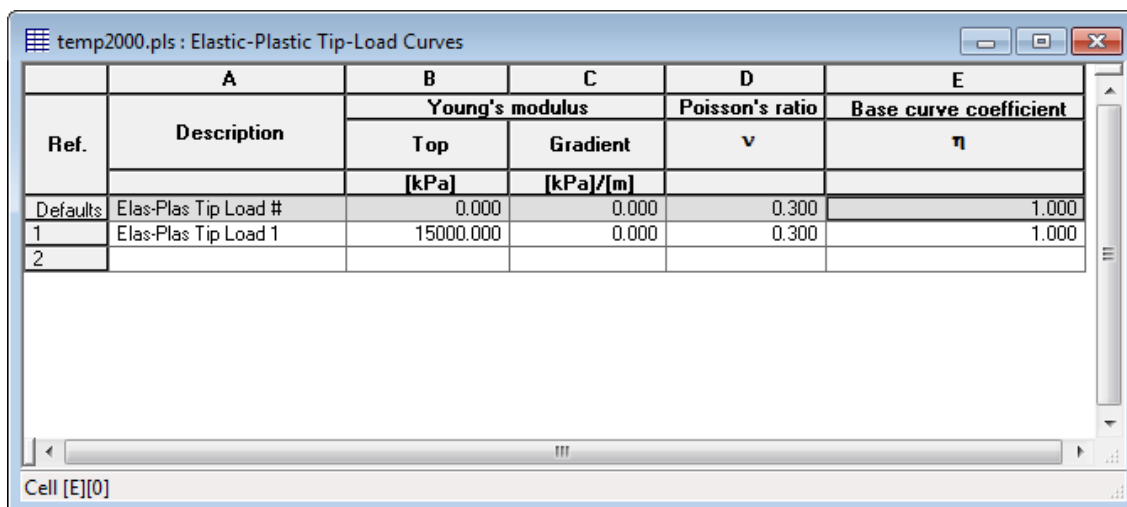

Ref.	Description	Young's modulus		Poisson's ratio	Base curve coefficient
		Top	Gradient	ν	η
		[kPa]	[kPa]/[m]		
Defaults	Elas-Plas Tip Load #	0.000	0.000	0.300	1.000
1	Elas-Plas Tip Load 1	15000.000	0.000	0.300	1.000
2					

Description - the name of the curve.

Young's modulus

Top - the Young's modulus at top of the soil layer.


Gradient - the rate at which the modulus changes down the layer.

Poisson's ratio - the Poisson's ratio value of the material.

- the base curve coefficient which allows for the depth of the pile base below the surface.

5.14.2 Chin and Poulos

Each record in the **Chin and Poulos Tip Load Curves** table view consists of the following items.

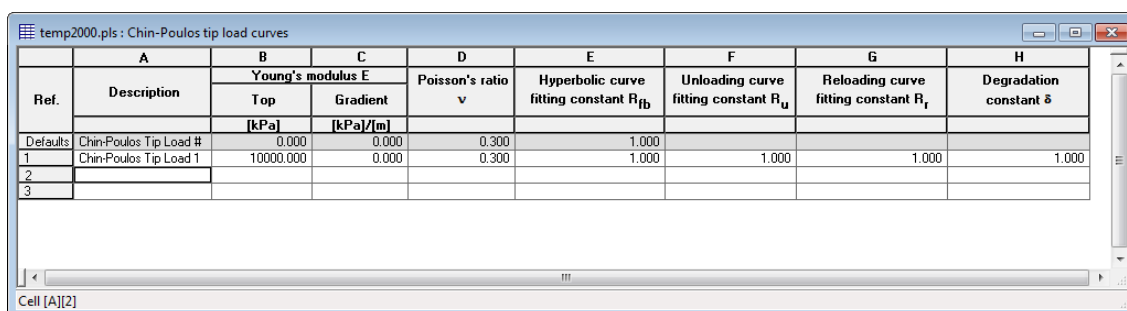

Ref.	Description	Young's modulus E		Poisson's ratio	Hyperbolic curve	Unloading curve	Reloading curve	Degradation
		Top	Gradient	ν	fitting constant R_{fb}	fitting constant R_u	fitting constant R_r	constant δ
		[kPa]	[kPa]/[m]					
Defaults	Chin-Poulos Tip Load #	0.000	0.000	0.300	1.000			
1	Chin-Poulos Tip Load 1	10000.000	0.000	0.300	1.000	1.000	1.000	1.000
2								
3								

Description - the name of the curve.

Young's modulus E

Top - the Young's modulus at the top of the soil layer.

Gradient - the rate at which the modulus changes down the layer.

Poisson's ratio - the Poisson's ratio value of the material.

Hyperbolic curve fitting constant R_{fb} - the hyperbolic constant for pile base element.

Unloading curve fitting constant R_u - the curve fitting constant for the unloading curve.

Reloading curve fitting constant R_r - the curve fitting constant for the reloading curve.

Degradation constant - the secant modulus degradation value due to cyclic loading.

5.14.3 Logarithmic

Each record in the **Logarithmic tip load Curves** table view consists of the following items.

Ref.	Description	Young's modulus E		Poisson's ratio ν	ξ	w_{peak}
		Top	Gradient			
		[kPa]	[kPa]/[m]			[mm]
Defaults	Logarithmic Tip Load #	0.000	0.000	0.300	0.500	25,000
1						
2						

Description - the name of the curve.

Young's modulus E

Top - the Young's modulus at the top of the soil layer.

Gradient - the rate at which the modulus changes down the layer.


Poisson's ratio - the Poisson's ratio value of the material.

- proportion of peak force which is yield force

w_{peak} - displacement at peak force

5.14.4 API

API Tip Load Curve is a standard curve and is non-editable.

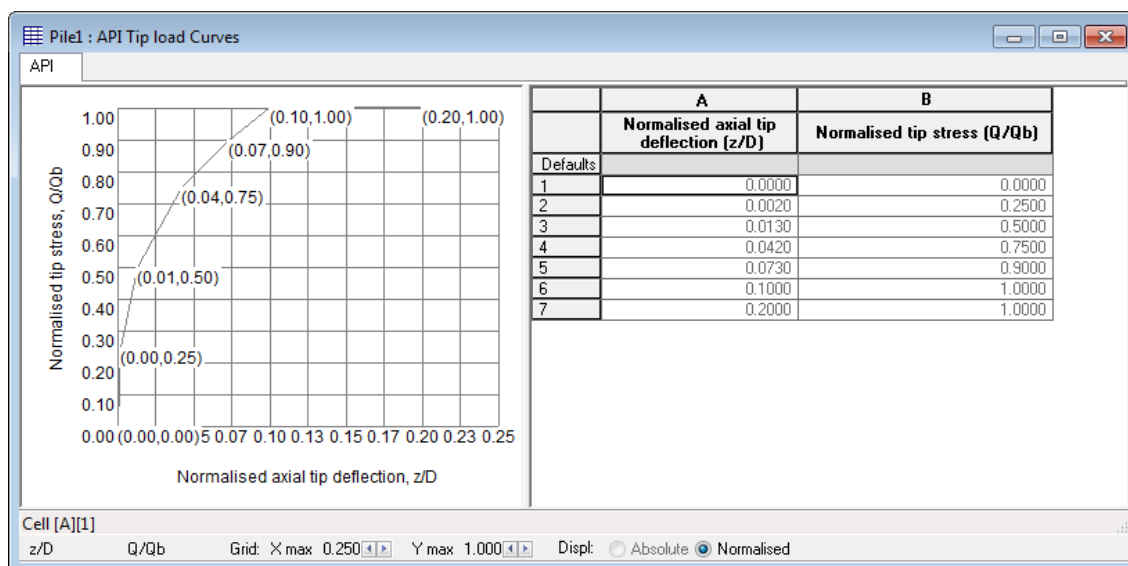

5.14.5 Vijayvergiya

Each record in the **Vijayvergiya t-z Curves'** table view consists of the following items.

	A	B
Ref.	Description	z_c
		[mm]
Defaults	Vijayvergiya Tip Load #	1000.000
1	Vijayvergiya Tip Load 1	900.000
2		

Cell [B][1]


Description - the name of the curve.

z_c - the movement required to mobilise maximum tip resistance. This value is often around 0.25

inches for sands.

5.14.6 User Specified

Each record in the **User Specified t-z Curves** table view consists of the following items.

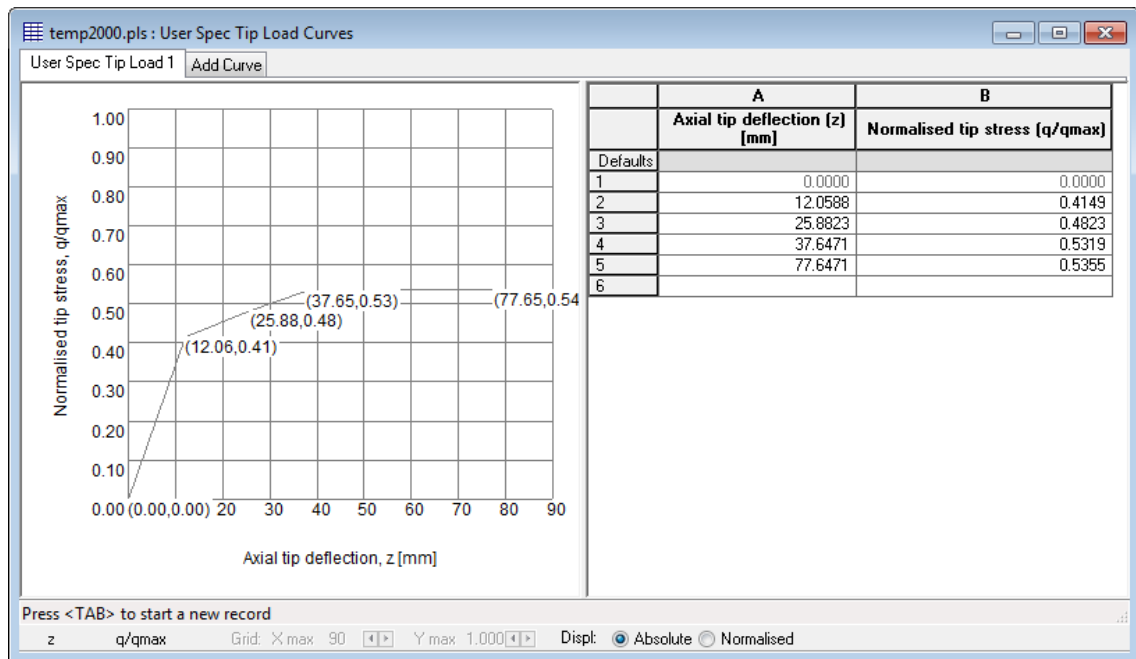

Axial tip deflection z - the deflection at the tip. It can also be normalised by selecting the normalised radio button. By default, it is absolute.

Normalised tip stress q/q_{\max} - the ratio of mobilised tip stress to maximum tip stress.

5.15 Applied Loads & Displacements

Each record in the **Applied Loads & Displacements** table view consists of the following items.

	A	B	C
	Depth below ground level	Applied load	Prescribed soil displacement
	[m]	[kN]	[mm]
Defaults	0.00	0.00	0.000
1	0.00	1500.00	0.000
2	12.00	0.00	0.000
3	20.00	0.00	0.000
4			

Enter depth below ground level

Level/ Depth below ground level - level/depth at which the pressure is the specified.



Applied load - downward positive and upward negative.

Prescribed soil displacement - heave is defined as negative displacement and settlement as positive displacement. i.e soil moving upward negative and downward positive.


Note: Prescribed soil displacement is only available for settlement calculations.

The data are specified at appropriate levels down the pile. The data can be entered in any order, the program internally arranges levels and interpolates between the levels to determine the values of prescribed soil displacement at each node down the pile. It assumes zero displacement at top and bottom of pile if not entered.

Interpolation of prescribed displacement down the pile shown below.

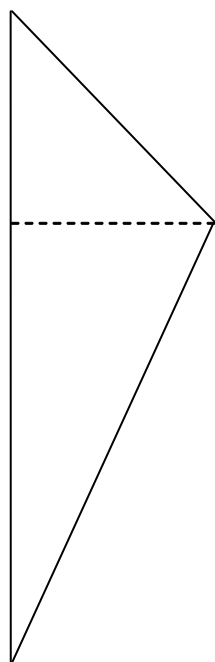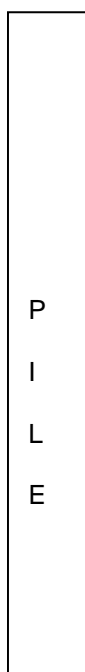

Single data is entered
for prescribed
displacement

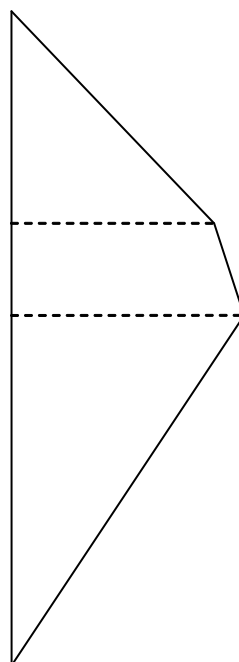

Multiple data is
entered for prescribed
displacement

This table view changes when Code-based capacity calculations are selected, as shown below.

EC7 (No National Annex)

CodeTests.pls : Applied Loads & Displacements					
	A	B	C	D	E
	Description	Depth below ground level	Applied load	Favourable?	Permanent?
		[m]	[kN]		
Defaults		0.00	0.00	Yes	Yes
1	Top Load	0.00	2500.00	Yes	No
2					

Press <TAB> to start a new record

For this case whether a load is permanent, and whether a load is favourable need to be specified.

EC7 (United Kingdom)

CodeTests.pls : Applied Loads & Displacements

	A	B	C	D	E
	Description	Depth below ground level	Applied load	A1	A2
		[m]	[kN]		
Defaults		0.00	0.00		
1	Top Load	0.00	2500.00	1.00	1.00
2					

Press <TAB> to start a new record

In this case the explicit load factors for A1 and A2 load factor sets need to be specified.

5.16 Displacement Radii

Each record in the **Displacement Radii** table view consists of the following items.

Manual.pls : Displace...

	A
	Radius
	[m]
Defaults	0.00
1	0.50
2	1.00
3	1.20
4	1.40
5	1.50
6	1.60
7	1.80
8	2.00
9	2.20
10	2.40
11	2.50
12	2.80
13	2.90
14	3.00
15	3.10
16	3.50
17	


Enter Radius from pile center at which soil displ

Radius - the radius from the pile at which soil displacements are to be calculated.

If the displacement radius entered is less than the shaft/base radius, the displacements are calculated at the interface of pile and soil (i.e. at the radius of shaft/base)

5.17 Convergence Control Data

The **Convergence Control Data** dialog presents the following input data.

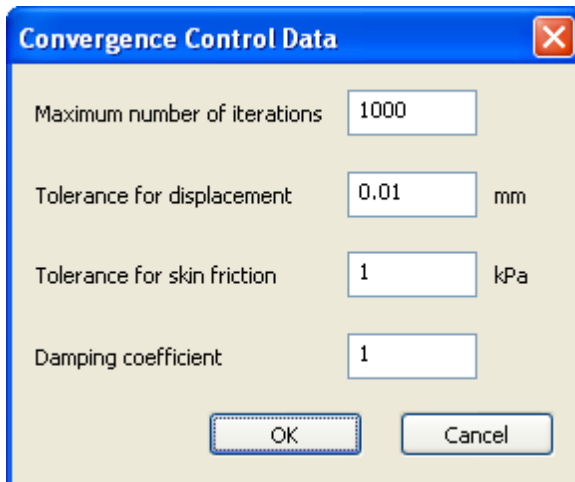

Parameter	Value	Unit
Maximum number of iterations	1000	
Tolerance for displacement	0.01	mm
Tolerance for skin friction	1	kPa
Damping coefficient	1	

Tolerance for displacement - the maximum change of displacement between successive iterations. The absolute error will be considerably larger (typically by a factor of 100).

Tolerance for skin friction - the maximum error in the shaft skin friction (i.e. how much the skin friction exceeds the limiting value). This is an absolute value.

Damping coefficient - can be enhanced if convergence is slow.

If instability is apparent it may possibly be solved by reducing this coefficient.

5.18 Thermal and Cyclic Loading

The **Thermal and Cyclic Loading** dialog presents the following input data.

Thermal and Cyclic Loading

☒ Non-cyclic

Temperature change over ambient °C

☒ Cyclic

Number of cycles

☒ Thermal

Amplitude of temperature °C

☐ Mechanical

Level [mOD]

Amplitude of load cycle kN

OK Cancel

Non-cyclic - if checked, non-cyclic thermal load will be applied

Temperature change over ambient - the change in pile temperature from the ambient temperature.

Cyclic - if checked, cyclic thermal load or cyclic mechanical load will be applied depending on the selection.

Number of cycles - the number of loading cycles to be applied

Thermal - if selected, thermal loading cycles will be applied

Amplitude of temperature change- the change in temperature from the mean temperature

Mechanical - if selected, mechanical loading cycles will be applied

Level - level at which the mechanical load is to be applied

Amplitude of load cycle - the load to be applied


6 Staged Analysis


Oasys Pile program allows the users to analyse different stages which follow one another. This is available **only** when t-z curves option is selected.

The following data can be changed between different stages:

- Applied loads and displacements
- Thermal loads
- Soil profile
- Groundwater data

When a new file is created, the program inserts the default "Initial stage" (Stage 0). The user can set up further stages from the Stage tree view. This can be invoked from the Gateway or menu as shown:

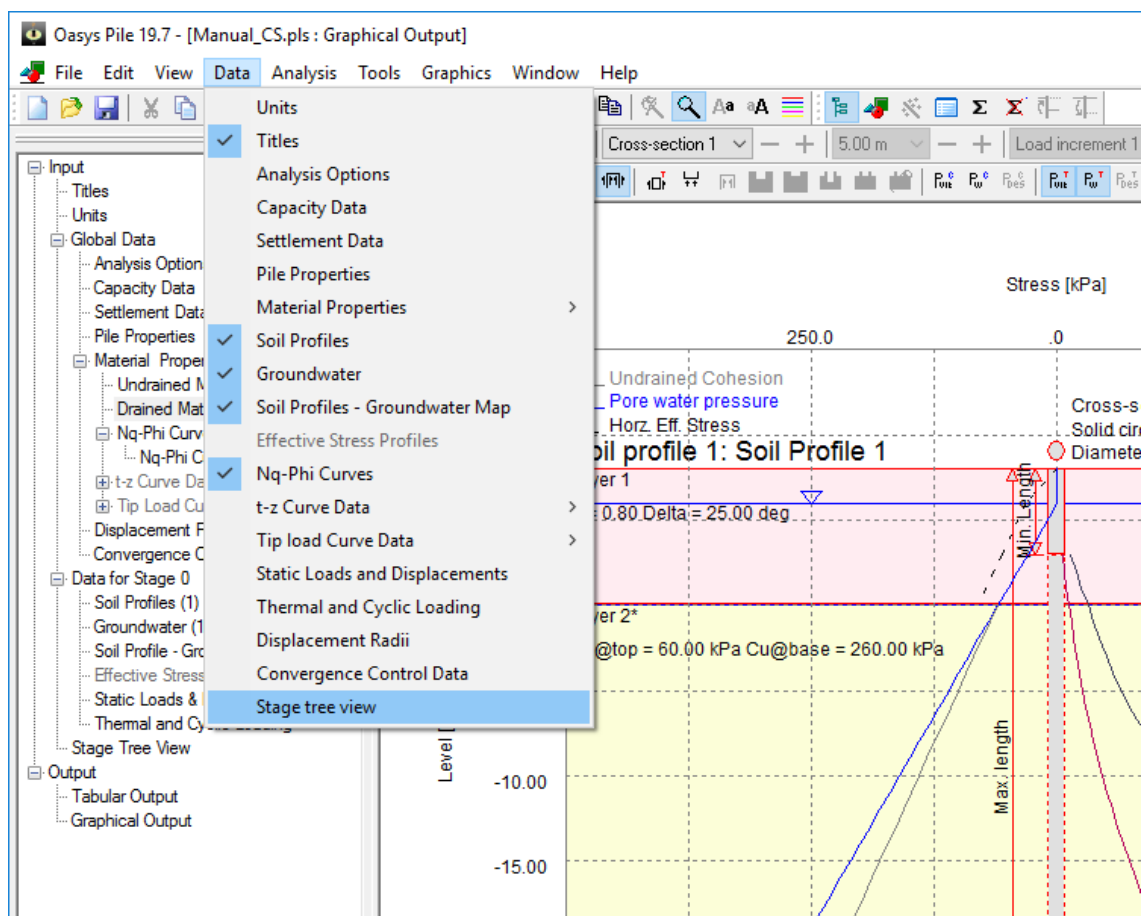

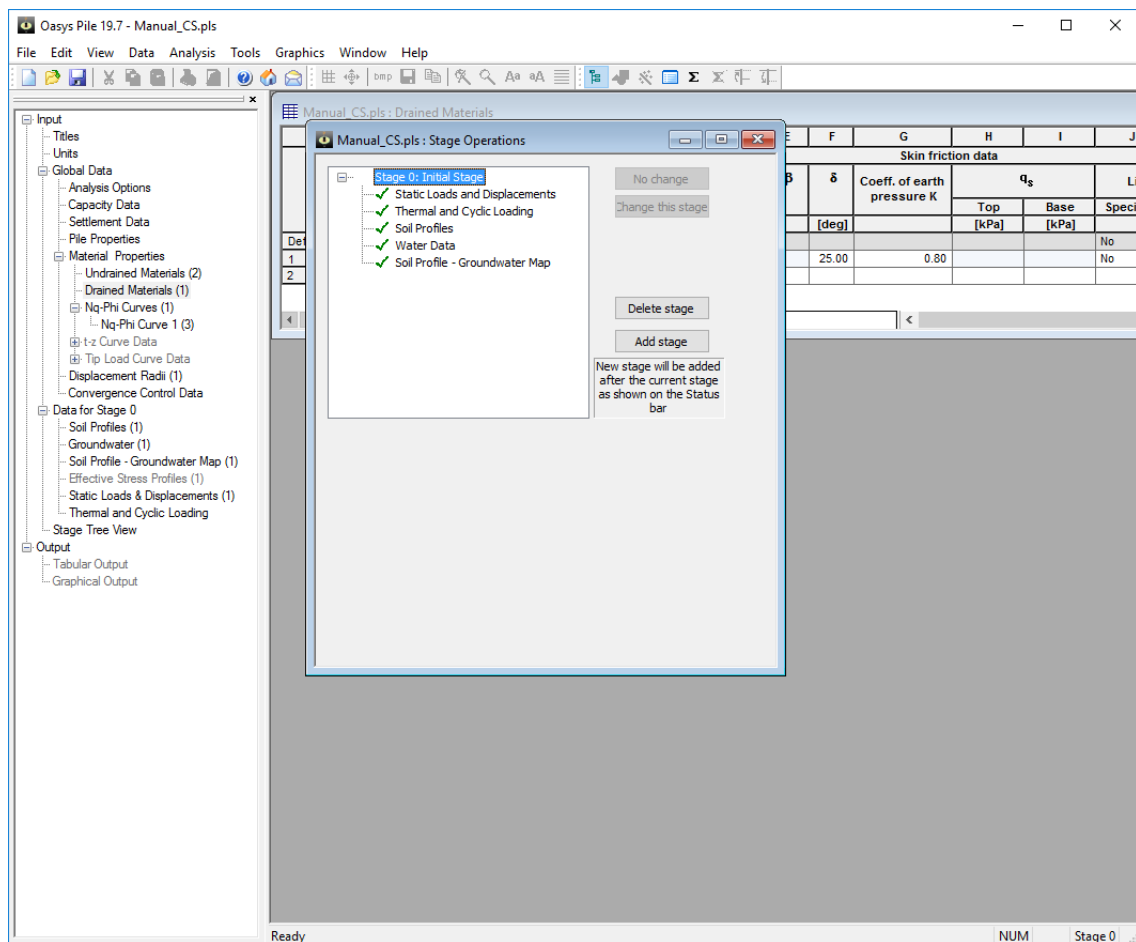

The current stage index is displayed in the "Stage indicator" located at the bottom right corner of the application window.

The Stage data menu allows the data to be modified for individual stages using the Stage Operations window. This opens a tree diagram, which allows access to all available options for each stage. Ticks are placed against those options which have been changed.

This window also allows the creation of new stages and the deletion of those no longer required. When "Add stage" is selected the new stage can be inserted after a highlighted stage.

Parameters can also be set to change in a particular stage.

Note: Left-click on the boxes to open or close the tree diagram for each stage. The dialog or view corresponding to stage specific data i.e. Soil profiles, Applied loads & displacements etc. can be accessed either from this tree view or from the gateway.

 
The program calculates the pile capacity and settlement for each stage, based on whether the user has selected capacity analysis or settlement analysis. For the settlement analysis, the program treats the pile and soil displacements obtained from analysis of a particular stage as the initial displacements for the next stage.


The initial t-z curves are generated and used for the first load increment of the initial stage. The program updates the t-z curves for each node after each load increment. When there is no

material change at a particular node, the t-z curve of the node from the last increment of the last stage is used. However, if the node is in a drained material, and effective stress changes between stages, the program generates the new t-z curve for this revised stress state, and uses the same for the new stage. The same procedure is followed if the material changes at a node between stages.


7 Output

7.1 Analysis and Data Checking

The data can be analysed via Analysis | Analyse from the program menu or the analysis button  on the analysis toolbar.

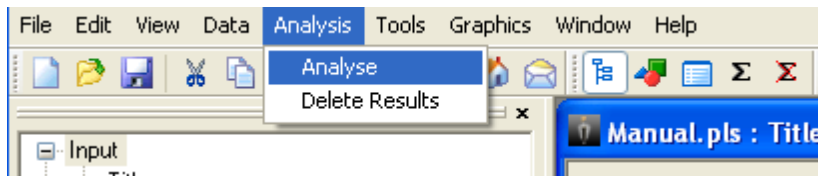



Prior to analysing the data, the program performs various checks and gives warnings/errors if the data is not consistent. Warnings do not prevent an analysis. Errors do and must be corrected before an analysis may proceed.

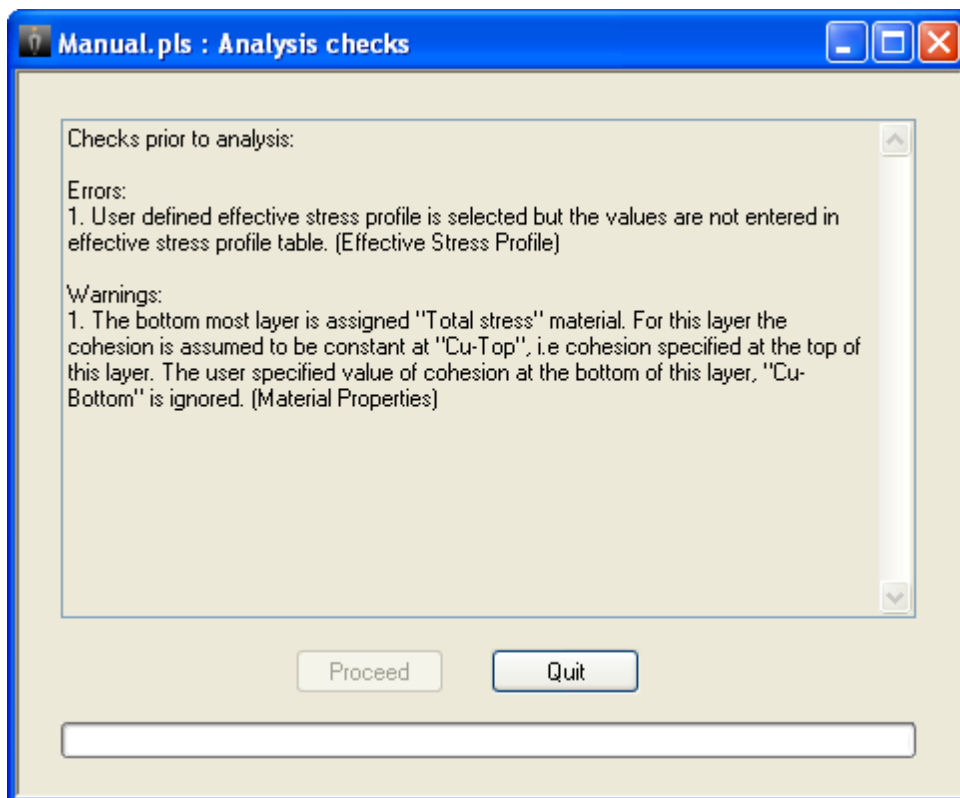

7.2 Tabular Output

Tabulated output is accessible from the View menu, the [Gateway](#) or the [Pile toolbar](#). This output may include input data and results if an analysis has been performed.

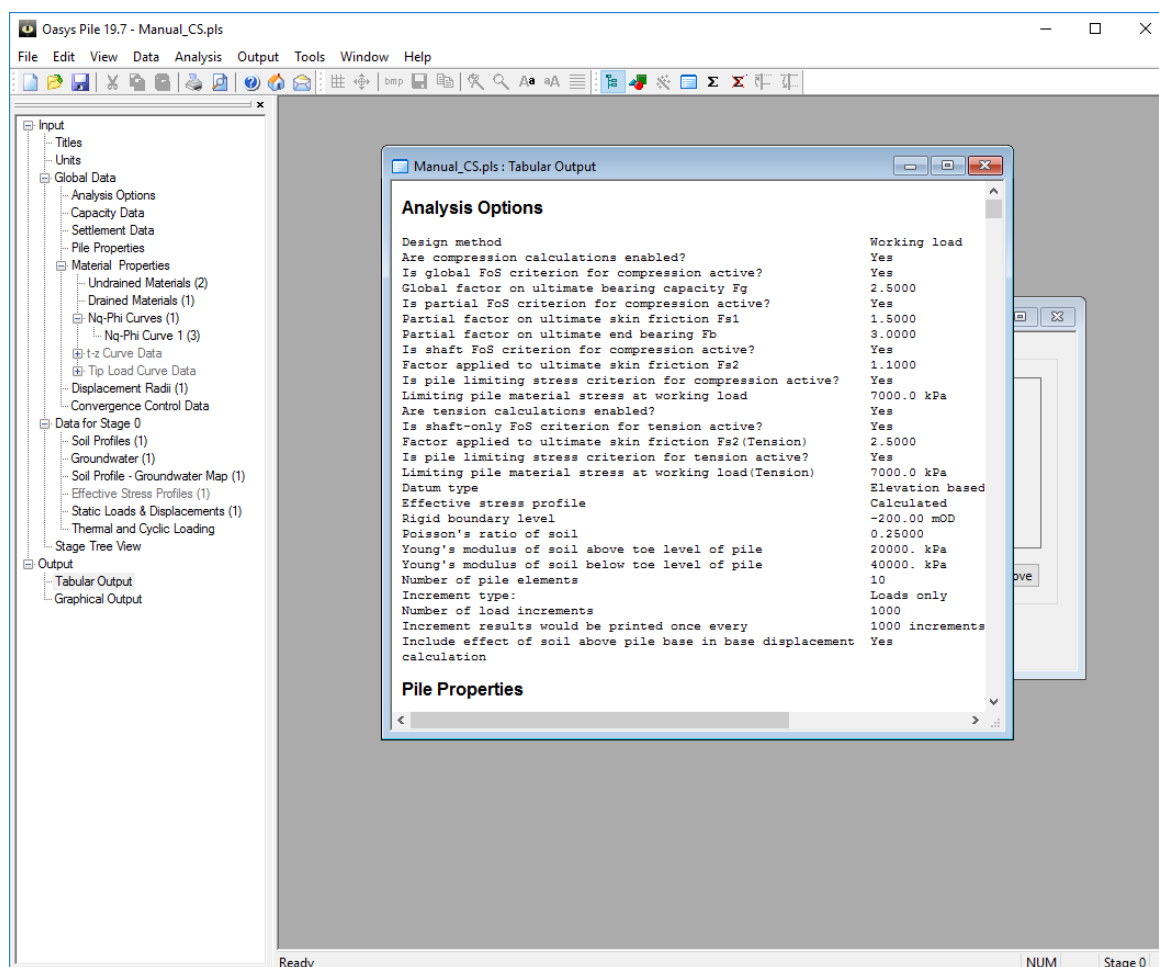

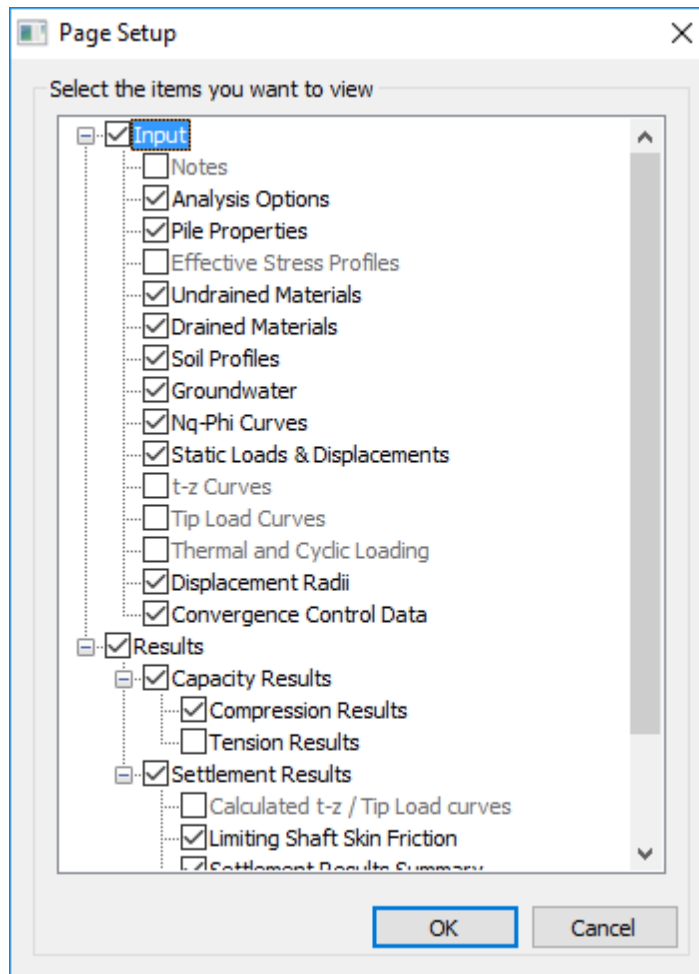

The results are provided in a tabular form, containing the levels corresponding to the depth(s) of the pile and the various load capacities at the given level.

The results are printed for all the soil profiles.

However, for model pile procedure, the design capacity results are printed separately after the ultimate capacity results etc. are printed from all the soil profiles.

The pile limiting shaft skin friction, shaft skin friction, pile stress, pile and soil displacement at the given level are tabulated for each pile length and each cross-section and for each load increment.

The number of outputs of calculated limiting shaft skin friction within a layer can be selected in the Print Selection dialog.

The analysis warnings may also be viewed in the results.

Manual.pls : Tabular Output

Cross-section 1 results:

Results - Compression

Level	Pile length	Ultimate base capacity	Cumulative external Friction	Negative skin friction	Ultimate capacity	Allowable capacity	Limiting criterion
		(Q_b)	(Q_s)	(Q_{nsf})			#
[mOD]	[m]	[kN]	[kN]	[kN]	[kN]	[kN]	
3.0000	5.0000	989.60	144.15	0.0	1133.8	288.30	3
2.0000	6.0000	1131.0	196.89	0.0	1327.9	393.78	3
1.0000	7.0000	1272.3	256.66	0.0	1529.0	513.32	3
0.0	8.0000	1413.7	323.46	0.0	1737.2	646.92	3
0.0	8.0000	152.68	323.46	0.0	476.14	190.46	1
-1.0000	9.0000	173.04	377.75	0.0	550.79	220.31	1
-2.0000	10.000	193.40	438.82	0.0	632.22	252.89	1
-3.0000	11.000	213.75	506.68	0.0	720.43	288.17	1
-4.0000	12.000	234.11	581.32	0.0	815.43	326.17	1
-5.0000	13.000	254.47	662.75	0.0	917.22	366.89	1
-6.0000	14.000	274.83	750.97	0.0	1025.8	410.32	1
-7.0000	15.000	295.18	845.97	0.0	1141.2	456.46	1
-8.0000	16.000	315.54	947.76	0.0	1263.3	505.32	1
-9.0000	17.000	335.90	1056.3	0.0	1392.2	556.89	1
-10.000	18.000	356.26	1171.7	0.0	1527.9	611.18	1
-11.000	19.000	376.61	1293.8	0.0	1670.5	668.18	1
-12.000	20.000	396.97	1422.8	0.0	1819.7	727.90	1
-13.000	21.000	417.33	1558.5	0.0	1975.8	790.33	1
-14.000	22.000	437.69	1701.0	0.0	2138.7	855.47	1
-15.000	23.000	458.04	1850.3	0.0	2308.3	923.33	1
-16.000	24.000	478.40	2006.3	0.0	2484.8	993.90	1
-17.000	25.000	498.76	2169.2	0.0	2668.0	1067.2	1


The lists of tabulated output can be highlighted and then copied to the clipboard and pasted into most Microsoft Windows type applications e.g. Microsoft Word or Excel. The output can also be directly exported to various text or HTML formats by choosing 'File | Export' from the program menu.

Sign conventions are as follows:


- Displacements - negative movement is upwards (e.g. soil heave), and positive is downwards (e.g. pile or soil settlements)
- Applied load - downward positive and upward negative
- Pile stress - compression positive and tension negative
- Base pressure - downwards positive and upward negative

7.3 Graphical Output

Graphical output of data and results is accessed via the View menu, the [Gateway](#) or the [Pile toolbar](#).

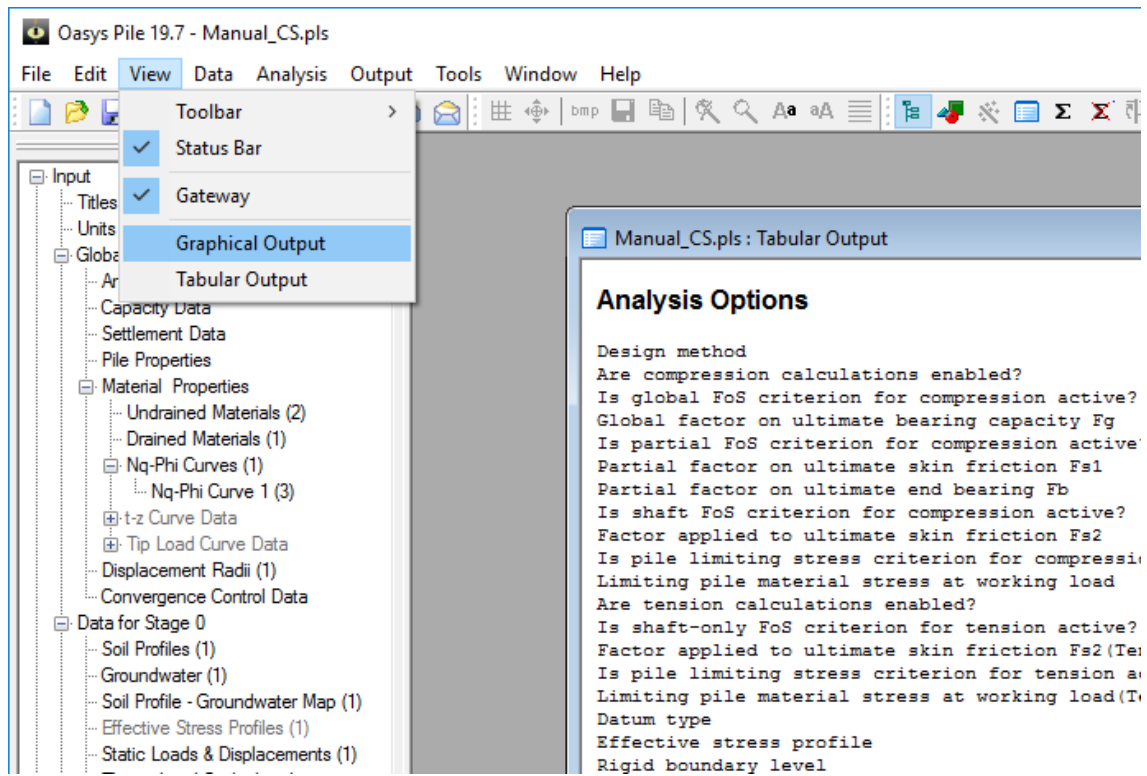


The graphical representation of the soil layers, the pile and the cross-section of the pile is shown.

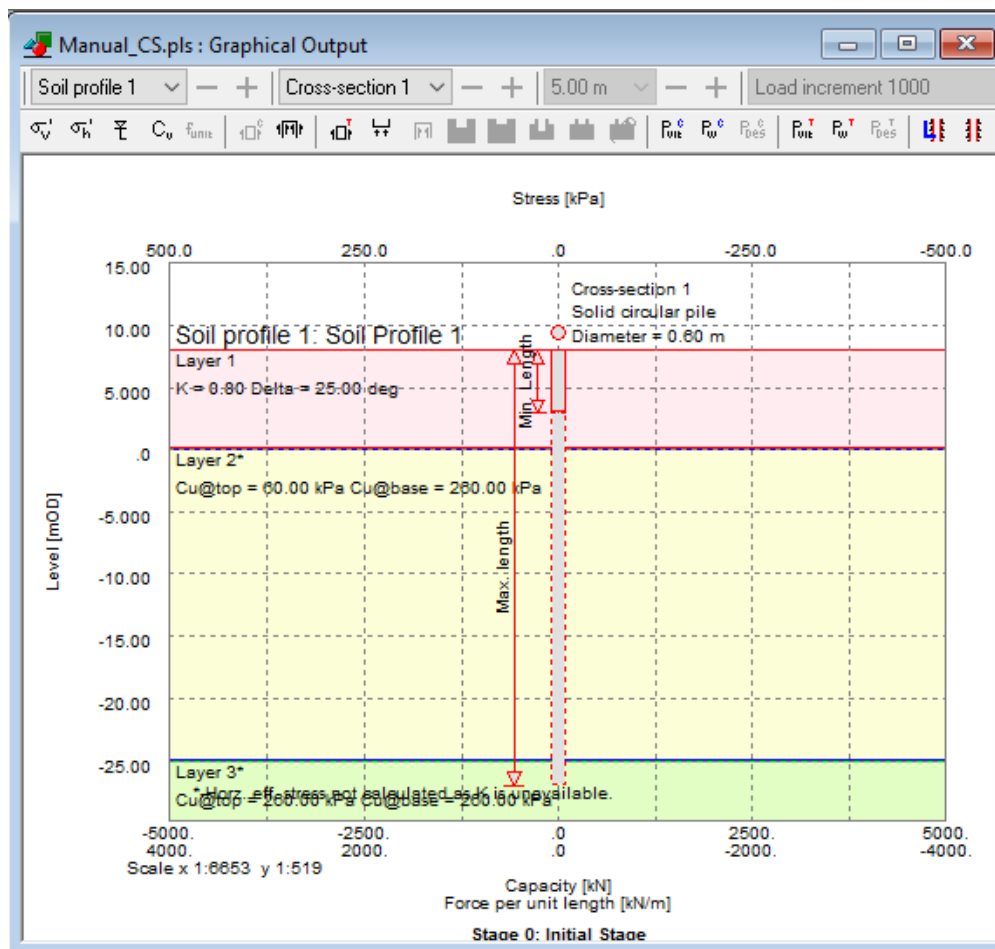




Introduction to Graphics menu

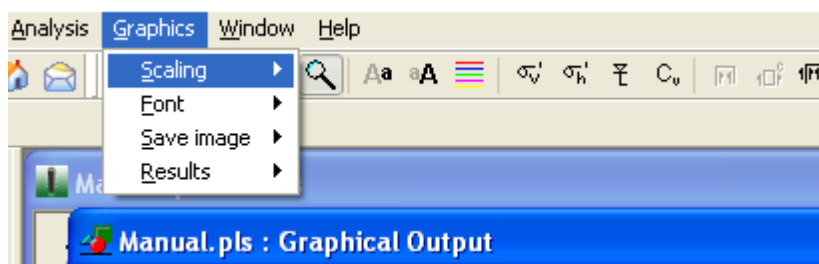When the Graphical Output View is open the graphics menu shows the following options.



Graphical toolbar buttons

-  **Axis** - provides a reference grid behind the drawing.
-  **Set Scale** - this allows switch between the default 'best fit' scale, the closest available engineering scale. e.g. 1:200, 1:250, 1:500, 1:1000, 1:1250, 1:2500, or exact scaling. The same options are available via the View menu's "Set exact scale" command.
-  **Save Metafile** - this save icon allows the image to be saved in the format of a Windows



Axis - provides a reference grid behind the drawing.

metafile. This retains the viewed scale. The metafile can be imported into other programs such as word processors, spreadsheets and drawing packages.



Zoom Facility - select an area to 'zoom in' to by using the mouse to click on a point on the drawing and then dragging the box outwards to select the area to be viewed. The program will automatically scale the new view. The original area can be restored by clicking on the 'restore zoom' icon as shown here.



Smaller/Larger font - adjusts font sizes on the Graphical Output View.



Edit colours - allows line and fill colours to be edited.



Save BMP - saves the file as a bitmap.



Copy - copies the graphical view to the clip board.

Capacity



Vertical effective stress - toggles the vertical effective stress plot.



Horizontal effective stress - toggles the horizontal effective stress plot.



Pore water pressure - toggles the pore water pressure plot.



Undrained cohesion - toggles the undrained cohesion plot.



Unit shaft friction - toggles the unit shaft friction plot.



External skin friction compression - toggles the external skin friction compression plot.



Total skin friction compression - toggles the total skin friction compression plot.



Total skin friction tension - toggles the total skin friction tension plot.



End bearing capacity - toggles the end bearing capacity plot.



Internal skin friction - toggles the internal skin friction plot.



Wall end bearing - toggles the wall end bearing plot.



Plugged end bearing - toggles the plugged end bearing plot.



Plugged capacity - toggles the plugged capacity plot.



Unplugged capacity - toggles the unplugged capacity plot.



Unplugged capacity - auto plugged - toggles the unplugged capacity - auto plugged plot.



Ultimate load compression - toggles the ultimate load compression plot.



Axis - provides a reference grid behind the drawing.



Working load compression - toggles the working load compression plot.



Design load compression - toggles the design load compression plot.



Ultimate load tension - toggles the ultimate load tension plot.



Working load tension - toggles the working load tension plot.



Design load tension - toggles the design load tension plot.

Settlement



Limiting Shaft Skin Friction - toggles the limiting shaft skin friction plot.



Shaft Skin Friction - toggles the shaft skin friction plot.



Pile Stress - toggles the pile stress plot.



Pile/Soil Displacement - toggles the displacements for pile or soil.



Envelope - toggles whether or not envelope of results is plotted for cyclic loading sub stages.


Drop lists above the Graphical Output View allow selection of capacity and settlement results according to selected soil profiles, pile cross-sections, pile lengths, applied load/displacement increments and sub-stages.

The plot can be exported in WMF format via the "Graphics->Save image->Save WMF" menu item.

7.3.1 Length Wizard

The user can also invoke a pile length calculator to find out the required length of a pile for a given applied load. From the available results, the program gives the lowest pile length whose capacity is greater than the applied load.

This can be invoked by clicking the wizard button as shown below:

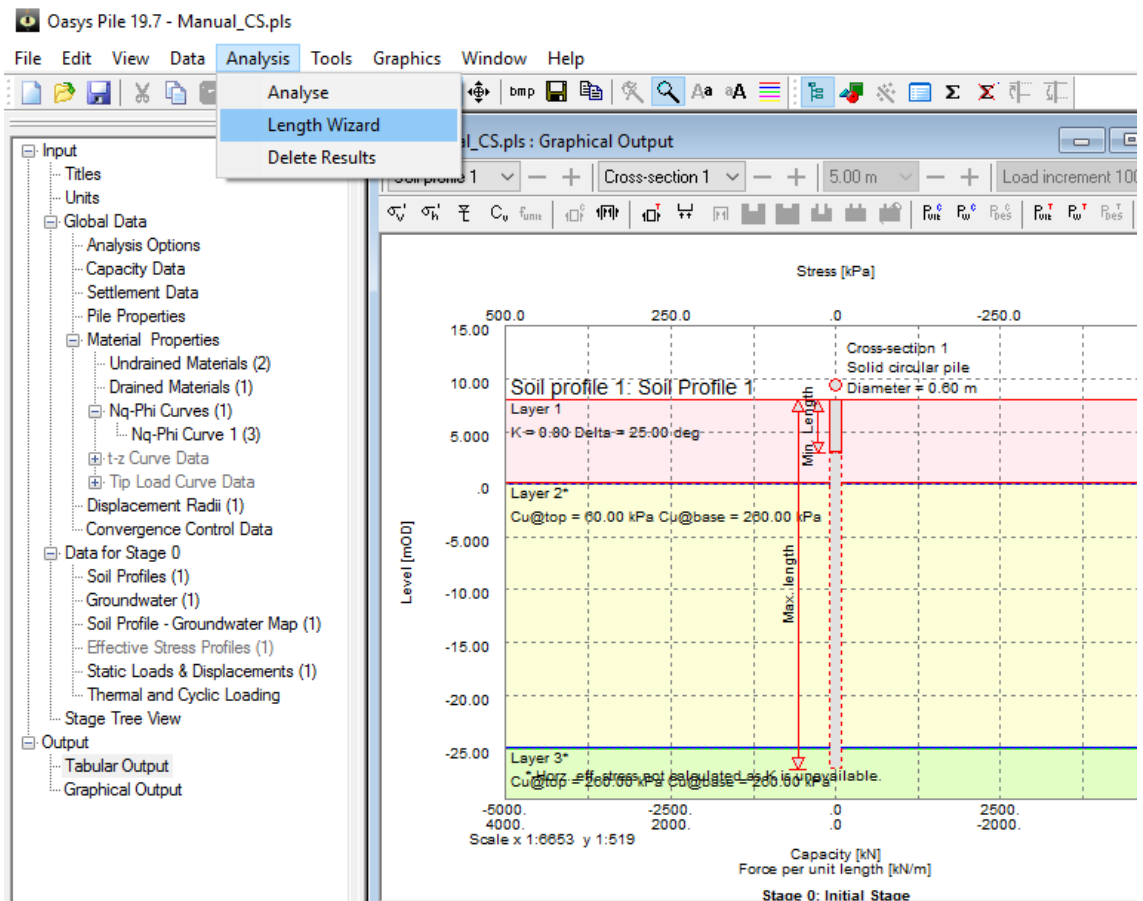

After this dialog is invoked, the user needs to enter the soil profile, and pile cross section of interest, and then press the "Calculate" button to view the result.

Length Wizard

From the capacity results corresponding to various pile lengths, the minimum pile length that gives capacity greater than the applied load is displayed here.

Input

Applied load [kN] (Compression +ve, Tension -ve) 500

Soil profile Soil Profile 1

Cross section 1

Calculate

Output

Length [m] 16.00

Close

8 Programming Interface

Programming interface is provided by [COM Automation](#) in Pile

COM Automation allows commands to be issued from a separate process via a set of VBA, C++, Python or MATLAB instructions. The separate process could be a separate program or, indeed, a VBA script in a spreadsheet or a Python or MATLAB script.

8.1 COM Automation

COM Automation allows other programs to access to Pile 19.7 operations by creating an instance of Pile class "pileauto_19_7.ComAuto" and calling the exported functions of this class. The available COM export functions are listed below.

Note that function names are case sensitive.

More:

[COM Export Functions](#)

[COM VBA Example](#)

[COM C++ Example](#)

[Python Sample](#)

[MATLAB Sample](#)

8.1.1 COM Export Functions

The Pile COM export functions are listed below:

The use of many of these functions is demonstrated in sample Excel (XLS) files that are installed in the Samples folder in the Pile program folder. The return code (short data type) for all these functions is zero on successful execution, and -1 on failure.

CORE FUNCTIONS:**short Open (string filename)**

Open a *.pls file. **filename** – the name of the file to be opened, including path and extension.

short Save ()

Save the data to the default file (i.e. overwriting the file that was opened or last saved).

short SaveAs (string filename)

Save the data to *.pls file. **filename** – the name of the file to be saved, including path and extension.

short Close ()

Close the current file.

short Analyse ()

Analyse the current file.

short DeleteResults ()

Deletes the results in the current file.

short Show ()

Show the running instance of Pile created by the Automation client.

ANALYSIS OPTIONS RELATED FUNCTIONS:**short GetDatumType (short* sNumVal)**

The datum type is retrieved using the variable sNumVal. If "Level" based input is selected , sNumVal is 1, otherwise it is 0 for "Depth" based input.

short SetDatumType(short sNumVal)

The datum type is set using the variable sNumVal. If "Level" based input is selected , sNumVal is 1, otherwise it is 0 for "Depth" based input.

short IsCapacityAnalysis (short* sNumVal)

If capacity analysis is active, sNumVal is set to 1, otherwise to 0.

short IsSettlementAnalysis(short* sNumVal)

If settlement analysis is active, sNumVal is set to 1, otherwise to 0.

short NumStages(short* nStages)

nStages is set to number of stages in the current file.

SOIL PROFILES, MATERIALS AND GROUNDWATER RELATED FUNCTIONS:**short NumSoilProfiles(short iStageIndex, short* sNumVal)**

sNumVal is set to number of soil profiles in the stage with index iStageIndex. NOTE: Stage index is zero based.

short NumDrainedMaterials(short* sNumVal)

sNumVal is set to number of drained materials in the current file.

short NumUndrainedMaterials(short* sNumVal)

sNumVal is set to number of undrained materials in the current file.

short NumGroundwaterProfiles(short iStageIndex, short* sNumVal)

sNumVal is set to number of groundwater profiles in the stage with index iStageIndex. NOTE: Stage index is zero based.

short GetGroundwaterIndexForSoilProfile(short iStageIndex, short* iSoilProfileIndex)

iSoilProfileIndex is set to index of groundwater profile associated with soil profile having index iSoilProfileIndex. NOTE: Stage index is zero based. SoilProfile index and Groundwater index are both 1 based indices.

short SetGroundwaterIndexForSoilProfile(short iStageIndex, short iSoilProfileIndex, short iGroundWaterProfileIndex)

The groundwater profile index for soil profile with index iSoilProfileIndex is set to iGroundWaterProfileIndex. NOTE: Stage index is zero based. SoilProfile index and Groundwater index are both 1 based indices.

short NumLayersinSoilProfile(short iStageIndex, short iSoilProfileIndex, short* sNumVal)

The number of layers in soil profile with index iSoilProfileIndex in stage with index iStageIndex is stored in sNumVal. NOTE: Stage index is zero based. SoilProfile index is 1 based index.

short GetMaterialLayerInfoinSoilProfile(short iStageIndex, short iSoilProfileIndex, short iSoilLayerIndex, short* iMaterialType, short* iMaterialIndex, double* dLayerTopLevel)

The material type (1 for undrained, 2 for drained), the drained/undrained material index (1-based), and the level at of the top of layer in SI units i.e. m, are retrieved for the layer with index iSoilLayerIndex in soil profile with index iSoilProfileIndex in stage with index iStageIndex using the variables iMaterialType, iMaterialIndex and dLayerTopLevel respectively. NOTE: Stage index is zero based. Soil profile index, soil layer index, and material layer index are both 1 based indices. iMaterialType variable is set to 1 for undrained material and 2 for drained material.

short SetMaterialLayerInfoinSoilProfile(short iStageIndex, short iSoilProfileIndex, short iSoilLayerIndex, short iMaterialType, short iMaterialIndex, double dLayerTopLevel)

The material type (1 for undrained, 2 for drained), the drained/undrained material index (1-based), and the level at of the top of layer in SI units i.e. m, are set using the values of the variables iMaterialType, iMaterialIndex and dLayerTopLevel respectively for the layer with index iSoilLayerIndex in soil profile with index iSoilProfileIndex ins stage with index iStageIndex. NOTE: Stage index is zero based. Soil profile index, soil layer index, and material layer index are both 1 based indices. iMaterialType variable is set to 1 for undrained material and 2 for drained material.

PILE GEOMETRY - CROSS SECTION RELATED FUNCTIONS:**short NumPileCrossSections(short* sNumVal, short* retCode)**

The number of cross sections in the file is retrieved from the variable sNumVal.

short GetPileCrossSectionType(short* sNumVal)

The type of cross section is retrieved from the variable sNumVal:

- 1 - solid circular
- 2 - solid square
- 3 - hollow circular
- 4 - hollow square
- 5 - h-pile.

short SetPileCrossSectionType(short iPileCrossSectionType)

The type of cross section is set for the pile using the variable sNumVal:

- 1 - solid circular
- 2 - solid square
- 3 - hollow circular
- 4 - hollow square
- 5 - h-pile.

short IsSteppedPile(short* sNumVal)

If the pile is having stepped cross-section, the retrieved value of sNumVal is 1, otherwise 0.

short GetDiameter(short iPileCrossSectionIndex, double* dRet)

The value of the pile diameter for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for circular sections.

short SetDiameter(short iPileCrossSectionIndex, double* dRet)

The value of the pile diameter for pile cross section with index iPileCrossSectionIndex is set using variable dRet.

short GetShaftThickness(short iPileCrossSectionIndex, double* dRet)

The value of the pile shaft thickness for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet.

short SetShaftThickness(short iPileCrossSectionIndex, double dRet)

The value of the pile shaft thickness for pile cross section with index iPileCrossSectionIndex is set using variable dRet.

short GetBaseThickness(short iPileCrossSectionIndex, double* dRet)

The value of the pile base thickness for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet.

short SetBaseThickness(short iPileCrossSectionIndex, double dRet)

The value of the pile base thickness for pile cross section with index iPileCrossSectionIndex is set in variable dRet.

short GetShaftWidth(short iPileCrossSectionIndex, double* dRet)

The value of the pile shaft width for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for square sections.

short SetShaftWidth(short iPileCrossSectionIndex, double dRet)

The value of the pile shaft width for pile cross section with index iPileCrossSectionIndex is set in variable dRet. NOTE: This is valid only for square sections.

short GetFlangeWidth(short iPileCrossSectionIndex, double* dRet)

The value of the pile flange width for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for H-sections.

short SetFlangeWidth(short iPileCrossSectionIndex, double dRet)

The value of the pile flange width for pile cross section with index iPileCrossSectionIndex is set in the variable dRet. NOTE: This is valid only for H-sections.

short GetWebDepth(short iPileCrossSectionIndex, double* dRet)

The value of the pile web depth for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for H-sections.

short SetWebDepth(short iPileCrossSectionIndex, double dRet)

The value of the pile web depth for pile cross section with index iPileCrossSectionIndex is set in the variable dRet. NOTE: This is valid only for H-sections.

short GetFlangeThickness(short iPileCrossSectionIndex, double* dRet)

The value of the pile flange thickness for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for H-sections.

short SetFlangeThickness(short iPileCrossSectionIndex, double dRet)

The value of the pile flange thickness for pile cross section with index iPileCrossSectionIndex is set in the variable dRet. NOTE: This is valid only for H-sections.

short GetWebThickness(short iPileCrossSectionIndex, double* dRet)

The value of the pile web thickness for pile cross section with index iPileCrossSectionIndex is retrieved from variable dRet. NOTE: This is valid only for H-sections.

short SetWebThickness(short iPileCrossSectionIndex, double dRet)

The value of the pile web thickness for pile cross section with index iPileCrossSectionIndex is set in the variable dRet. NOTE: This is valid only for H-sections.

PILE GEOMETRY - LENGTH RELATED FUNCTIONS:**short IsRangeofPileLengthsAnalysed(short* sNumVal)**

If a range of pile lengths is analysed in the file, then the variable sNumVal is retrieved with value as 1, otherwise, it is 0.

short SetIsRangeofPileLengthsAnalysed(short* sNumVal)

If a range of pile lengths is to be analysed, then the variable sNumVal is set to 1, otherwise, it is set to 0.

short GetPileLength(double* dRet)

The value of the pile length is retrieved from variable dRet. NOTE: This option is valid for when single pile length is analysed in a file.

short SetPileLength(double dRet)

The value of the pile length is set using the variable dRet. NOTE: This option is valid for when single pile length is analysed in a file.

short GetMinimumPileLength(double* dRet)

The value of minimum pile length is retrieved from variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short SetMinimumPileLength(double dRet)

The value of minimum pile length is set using variable dRet. NOTE: This option is valid for when

range of pile lengths is analysed in a file.

short GetMaximumPileLength(double* dRet)

The value of maximum pile length is retrieved using variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short SetMaximumPileLength(double dRet)

The value of maximum pile length is set using variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short GetPileLengthIncrementType(short* dRet)

The value of the pile length increment type is retrieved from variable dRet. It is 0 for single pile length, and 1 for a range of pile lengths. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short SetPileLengthIncrementType(short dRet)

The type of pile length increment is set using variable dRet. It is 0 for single pile length, and 1 for a range of pile lengths. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short GetNumPileLengthIncrements(short* dRet)

The value of the pile length increment is retrieved from variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short SetNumPileLengthIncrements(short dRet)

The number of pile length increments is set using the variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short GetPileLengthIncrementSize(double* dRet)

The value of the pile length increment is retrieved from variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short SetPileLengthIncrementSize(double dRet)

The value of the pile length increment is set using variable dRet. NOTE: This option is valid for when range of pile lengths is analysed in a file.

short GetDepthofPileTopBelowGroundLevel(double* dRet)

The depth of the pile top below ground level is retrieved from variable dRet.

short SetDepthofPileTopBelowGroundLevel(double dRet)

The value of the depth of the pile top below ground level is set using the variable dRet.

PILE MATERIAL PROPERTIES RELATED FUNCTIONS:

short GetPileYoungsModulusComp(double* dRet)

The value of the pile's Youngs modulus in compression is retrieved from variable dRet.

short SetPileYoungsModulusComp(double dRet)

The value of the pile's Youngs modulus in compression is set from variable dRet.

short GetPileYoungsModulusTens(double* dRet)

The value of the pile's Youngs modulus in tension is retrieved from variable dRet.

short SetPileYoungsModulusTens(double dRet)

The value of the pile's Youngs modulus in tension is set from variable dRet.

short IsPileYoungsModulusDifferentCompTens(short* sNumVal)

If the Young's modulus of pile is different in tension and compression, then variable sNumVal is retrieved with value as 1, otherwise, it is 0.

short SetPileYoungsModulusDifferentCompTens(, short* sNumVal)

If the Young's modulus of pile is to be modeled differently in tension and compression, then variable sNumVal is set to 1, otherwise, it is set to 0.

GENERAL SETTLEMENT ANALYSIS INPUT DATA FUNCTIONS:**short GetSettlementCalculationType(short* dRet)**

The settlement calculation type is retrieved from variable dRet. It is 1 for Mindlin and 2 for t-z curves approach.

short SetSettlementCalculationType(short dRet)

The settlement calculation type is set using variable dRet. It is 1 for Mindlin and 2 for t-z curves approach.

short GetSettlementAnalysisIncrementType(short* dRet)

The settlement analysis increment type is retrieved from variable dRet. It is 0 for Loads only, 1 for settlements only, and 2 for both.

short SetSettlementAnalysisIncrementType(short dRet)

The settlement analysis increment type is set using variable dRet. It is 0 for Loads only, 1 for settlements only, and 2 for both.

short GetNumSettlementAnalysisIncrements(short* dRet)

The number of settlement analysis increments is retrieved from variable dRet.

short SetNumSettlementAnalysisIncrements(short dRet)

The number of settlement analysis increments is set using variable dRet.

short GetNumPileElements(short* dRet)

The number of pile elements is retrieved from variable dRet.

short SetNumPileElements(short dRet)

The number of pile elements is set using variable dRet.

MINDLIN SETTLEMENT ANALYSIS RELATED FUNCTIONS:**short GetSoilYoungsModulusBelowPileToeLevel(double* dRet)**

The Young's modulus of soil below pile toe level is retrieved from variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short SetSoilYoungsModulusBelowPileToeLevel(double dRet)

The Young's modulus of soil below pile toe level is set using variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short GetSoilYoungsModulusAbovePileToeLevel(double* dRet)

The Young's modulus of soil above pile toe level is retrieved from variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short SetSoilYoungsModulusAbovePileToeLevel(double dRet)

The Young's modulus of soil above pile toe level is set using variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short GetRigidBoundaryLevel(double* dRet)

The location of rigid boundary level is retrieved from variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short SetRigidBoundaryLevel(double dRet)

The location of rigid boundary level is set using variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short GetPoissonsRatio(double* dRet)

The Poisson's ratio of the soil is retrieved from variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short SetPoissonsRatio(double dRet)

The Poisson's ratio of the soil is set using variable dRet. NOTE: This is relevant only for Mindlin analysis method.

short IsEffectofSoilAboveBaseIncludedForBaseDispalcement(short* sNumVal)

If the effect of soil above the base of pile is considered in settlement of the base, the variable dRet is returned as 1, otherwise it is returned as 0. NOTE: This is relevant only for Mindlin analysis method.

short SetIsEffectofSoilAboveBaseIncludedForBaseDispalcement(short sNumVal)

If the effect of soil above the base of pile is considered in settlement of the base, the variable dRet is set to 1, otherwise it is set to 0. NOTE: This is relevant only for Mindlin analysis method.

CAPACITY ANALYSIS TYPE FUNCTIONS:**short GetCapacityAnalysisType(short* sNumVal)**

The capacity analysis type is retrieved from variable sNumVal:

- 0 for working stress approach
- 1 for design resistance approach
- 2 for code based approach

short SetCapacityAnalysisType(short iType)

The capacity analysis type is set using this variable sNumVal:

- 0 for working stress approach
- 1 for design resistance approach
- 2 for code based approach

short GetDesignCode(short* sNumVal)

The code type is retrieved from variable sNumVal:

- 0 for EC7 (Generic)

1 for EC7 (U.K. National Annex)
2 for IS 2911

short SetDesignCode(short iCode)

The code type is set using the variable sNumVal:

0 for EC7 (Generic)
1 for EC7 (U.K. National Annex)
2 for IS 2911

LOAD FUNCTIONS:

short NumLoads(short iStageIndex, short* sNumVal)

The number of loads applied on the pile in stage with index iStageIndex is retrieved using the variable sNumVal.

short AddLoad(short iStageIndex, double dLoad, double dLevel)

This function is used to add new load in stage having index iStageIndex, with value "dLoad" (SI units) on the pile at level "dLevel" (SI units). NOTE: The appropriate datum "Depth" or "Level" as selected for the current file is used. Also, iStageIndex is zero based.

short DeleteLoad(short iStageIndex, short iLoadIndex)

This function is used to delete the load in stage having index iStageIndex, with index iLoadIndex (1-based index). NOTE: iStageIndex is 0 based index.

short SetLoad(short iStageIndex, short iLoadIndex, double dLoad, double dLevel)

This function is used to modify the existing load in stage having index iStageIndex, with index iLoadIndex (1-based index) - with updated load "dLoad" in SI units, and location "dLevel" in SI units.

NOTE: The appropriate datum "Depth" or "Level" as selected for the current file is used. Also, iStageIndex is zero based.

CAPACITY RESULTS RELATED FUNCTIONS:

short GetUltimateBaseCapacity(short iStageIndex, short iSoilProfileIndex, short iPileCrossSectionIndex, short iPileLengthIndex, double* dRet)

The ultimate base capacity of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetCumulativeExternalSkinFriction(short iStageIndex, short iSoilProfileIndex, short iPileCrossSectionIndex, short iPileLengthIndex, double* dRet)

The cumulative external skin friction of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetCumulativeInternalSkinFriction(short iStageIndex, short iSoilProfileIndex, short iPileCrossSectionIndex, short iPileLengthIndex, double* dRet)

The cumulative internal skin friction of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using

the variable dRet in SI units.

short GetCumulativeExternalNegativeSkinFriction(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The cumulative external negative skin friction of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetCumulativeInternalNegativeSkinFriction(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The cumulative internal skin friction of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetUltimateCapacity(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex,short iPileLengthIndex,double* dRet)

The ultimate capacity of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetAllowableCapacity(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The allowable capacity of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetDesignCapacity(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The design capacity of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetLimitingCriterion(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,short* iCriterion)

The limiting criterion of the pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetUltimateCapacityTension(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex,short iPileLengthIndex,double* dRet)

The ultimate capacity of the pile (tension) in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetAllowableCapacityTension(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The allowable capacity of the pile (tension) in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetDesignCapacityTension(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,double* dRet)

The design capacity of the pile (tension) in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetLimitingCriterionTension(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex, short iPileLengthIndex,short* iCriterion)

The limiting criterion of the pile (tension) in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

SETTLEMENT RESULTS RELATED FUNCTIONS:

short NumNodes(short* sNumVal)

The number of pile nodes in the model is retrieved using the variable dRet in SI units. NOTE: All pile models with different lengths have the same number of nodes and elements in a file.

short GetLevelAtNode(short iPileLengthIndex,short iNodeIndex,double* dRet)

The level of node with index iNodeIndex(1-based) with pile length index "iPileLengthIndex" (1-based) is retrieved using the variable dRet in SI units.

short GetShaftStress(short iStageIndex, short iSoilProfileIndex, short iPileCrossSectionIndex, short iPileLengthIndex, short iNodeIndex, double* dRet)

The pile shaft skin friction stress in stage having index iStageIndex, at node with index iNodeIndex (1-based) with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetPileStress(short iStageIndex, short iSoilProfileIndex, short iPileCrossSectionIndex, short iPileLengthIndex, short iNodeIndex, double* dRet)

The pile shaft axial stress in stage having index iStageIndex, at node with index iNodeIndex (1-based) with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetPileDisp(short iStageIndex,short iSoilProfileIndex,short iPileCrossSectionIndex,short iPileLengthIndex, short iNodeIndex,short iPileLengthIndex,double* dRet)

The pile vertical displacement in stage having index iStageIndex, at node with index iNodeIndex (1-based) with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

short GetHeadDisp(short iStageIndex,short iNodeIndex,short iSoilProfileIndex,short iPileCrossSectionIndex,short iPileLengthIndex,double* dRet)

The pile head displacement in pile in stage having index iStageIndex,with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

NOTE: This works only for t-z method of settlement calculations.

short GetBaseDisp(short iStageIndex,short iNodeIndex,short iSoilProfileIndex,short iPileCrossSectionIndex,short iPileLengthIndex,double* dRet)

The pile base displacement in pile in stage having index iStageIndex, with pile length index "iPileLengthIndex" (1-based) and pile cross-section index "iPileCrossSectionIndex" (1-based) in stage with index iStageIndex (0-based) is retrieved using the variable dRet in SI units.

NOTE: This works only for t-z method of settlement calculations.

short GetIncrementResultsOutputFrequency(short* sNumVal)

The frequency at which the settlement results are presented is retrieved in the variable sNumVal. For example, if the settlements are printed for every 6 increments, then the output frequency is 6.

short SetIncrementResultsOutputFrequency(short dRet)

The frequency at which the settlement results are presented is set using the variable sNumVal. For example, if the settlements are printed for every 6 increments, then the output frequency is 6.

8.1.2 COM VBA Example

The following is an example VBA script to run Pile remotely. This script can be found in the Excel file in the Samples folder shipped with the program.

The user can access the VBA scripting environment in the program by clicking on the "Developer" tab in Microsoft Excel and then clicking on "Visual Basic" button.

This sample script illustrates basic operations like:

- File opening,
- Deleting results,
- Analysing, and
- File saving.

```
Sub TestPileCOM()
Dim PileObj
Set PileObj = CreateObject("pileauto_19_7.ComAuto")

Dim PileFilePath As String
Dim ExportFilePath As String

Dim sResult As Integer

Dim rFileName As Range
Dim sFileName As Range
With Worksheets("Pile Auto")
Set rFileName = .Cells(3, 3)
Set sFileName = .Cells(4, 3)
End With

PileFilePath = rFileName.Text
NewFilePath = sFileName.Text

sResult = PileObj.Open(PileFilePath)
```



```

'Delete existing results
sResult = PileObj.DeleteResults()

'Perform Analysis
sResult = PileObj.Analyse()

'Save file
sResult = PileObj.SaveAs(NewFilePath)

Set PileObj = Nothing

End Sub

```

8.1.3 COM C++ Example

The following is an example C++ code to run Pile remotely. The complete example can be found in the Samples folder. The zipped file "PileCOM_CPPSample.zip" needs to be extracted to a suitable folder in the local machine. This is a Visual C++ project built on VS2012. The file "PileCOMSample1.cpp" contains the functions listed below. It illustrates basic operations like

- o File opening,
- o Analysing, and
- o File saving.

```

bool RunOneFunction(
    COleDispatchDriver*    pDispDriver,
    CString                csFuncName,
    BYTE*                  pArgType,
    CString                csArgument,
    SHORT* pShort)
{
    DISPID        dispid;
    OLECHAR*      pcsFunc;
    CString       csMsg;
    int           iReturn(0);
    pcsFunc = csFuncName.AllocSysString();

    //Find the function ID
    if(pDispDriver->m_lpDispatch->GetIDsOfNames(
        IID_NULL,
        &pcsFunc,
        1,
        NULL,
        &dispid) != S_OK)
    {
        csMsg.Format(_T("Function (%s) cannot be found"),csFuncName);
        AfxMessageBox(csMsg);
        return false;
    }

    //Run the function
    if(csArgument.IsEmpty())
    {

```

```

        pDispDriver->InvokeHelper(
            dispid,
            DISPATCH_METHOD,
            VT_I2,
            &iReturn,
            pArgType,
            pShort);
    }
    else
    {
        pDispDriver->InvokeHelper(
            dispid,
            DISPATCH_METHOD,
            VT_I2,
            &iReturn,
            pArgType,
            csArgument,
            pShort);
    }

    if(iReturn != 0)
    {
        return false;
    }
    else
    {
        return true;
    }
}

void RunPile()
{
    CoInitialize(NULL);

    COleDispatchDriver cPileDispDriver;

    BYTE                pArgType[] = VTS_WBSTR;
    CString              csPath1(_T("C:\\Program Files (x86)\\Oasys\\Pile 19.6\\Samples\\Capacity_calc.pls")); //Replace this with the correct path and file location
    CString              csPath2(_T("C:\\Temp\\Capacity_calc_Reanalysed_Cpp_COM.pls")); //Replace this with the correct path and file location

    // Create an instance of the Pile class "pileauto_19_7.ComAuto"
    if(!cPileDispDriver.CreateDispatch(_T("pileauto_19_7.ComAuto")))
    {
        AfxMessageBox(
            _T("Pile not found or not registered"));
        return;
    }

    bool bStat(true);
    SHORT sRet;

```

```

// Function Open
if(bStat)
    bStat = RunOneFunction(&cPileDispDriver,
        _T("Open"),
        pArgType,
        csPath1, &sRet);
// Function Save
if(bStat)
    bStat = RunOneFunction(&cPileDispDriver,
        _T("Analyse"),
        VTS_NONE,
        _T(""),
        &sRet);

// Function SaveAs
if(bStat)
    bStat = RunOneFunction(&cPileDispDriver,
        _T("SaveAs"),
        pArgType,
        csPath2,
        &sRet);

// Function Close
if(bStat)
    bStat = RunOneFunction(&cPileDispDriver,
        _T("Close"),
        VTS_NONE,
        _T(""),
        &sRet);

cPileDispDriver.ReleaseDispatch();

CoUninitialize();
}

```

8.1.4 Python Sample

The following is an example Python script to run Pile remotely. To run this script, the user should have Python installed on the computer, along with "pywin32", "numpy" and "matplotlib" modules.

This script can be found in the Samples folder. It illustrates basic operations like

- File opening,
- Analysing,
- File saving,
- Updating loads, and
- Querying nodal settlements.

The Python script below generates Load vs Displacement curve for pile in a given data file:

```

import win32com.client

o = win32com.client.Dispatch("pileauto_19_7.ComAuto");

```

```

sResult = o.Open("C:\Temp\Com_Sample1.pls"); # file location
o.Analyse();
o.Save();

iStageIndex = 0;
iSoilProfileIndex = 1;
iSoilLayerIndex = 1;
iGroundWaterProfileIndex = -1;
o.GetGroundwaterIndexForSoilProfile(iStageIndex,iSoilProfileIndex,iGroundWaterProfileIndex)[1];
iPileCrossSectionIndex = 1;
iPileLengthIncrementIndex = 1;

sCapacity = o.GetUltimateCapacity(iStageIndex, iSoilProfileIndex, iPileCrossSectionIndex,
iPileLengthIncrementIndex)[1];

# Generated 10 loads going from 0.1*Ultimate load to 0.9
# Obtain corresponding pile head displacement in each case
o.DeleteResults();

import numpy as np
load = np.arange(0*sCapacity,0.9*sCapacity,0.1*sCapacity);
disp = np.zeros(shape=(9,1));

o.NumLoads(iStageIndex)[1];
dLoad = 0.0;
dLevel = 8.0;
iLoadIndex = 1;
o.GetLoad(iStageIndex,iLoadIndex,dLoad,dLevel)[1];

iPileLengthIndex = 1;
iNodeIndex = 1;

for x in range(0, 9):
    o.SetLoad(iStageIndex,iLoadIndex,load[x],dLevel)
    o.Analyse();
    disp[x] = 1000*o.GetPileDisp(iStageIndex, iSoilProfileIndex, iPileCrossSectionIndex,
iPileLengthIndex, iNodeIndex)[1];
    #converted displacements from SI to mm
    o.DeleteResults();

loadkN = load*0.001 # converting from SI to kN

import matplotlib.pyplot as plt
plt.plot(disp, loadkN, linewidth=2.0)
plt.title('Load vs Displacement Plot')
plt.ylabel('Load (kN)')
plt.xlabel('Displacement (mm)')
plt.show()

o = None

```

8.1.5 MATLAB Sample

The following is an example MATLAB code to run Pile remotely. It illustrates basic operations like

- o File opening,
- o Analysing,
- o File saving,
- o Updating loads, and
- o Querying nodal settlements.

The MATLAB script below generates Load vs Displacement curve for pile in a given data file:

```
o = actxserver('pileauto_19_7.ComAuto');
sResult = o.Open("C:\Temp\Com_Sample1.pls"); % opening file from
specified location
o.Analyse();
o.Save();

iStageIndex = int16(0);
iSoilProfileIndex = int16(1);
iSoilLayerIndex = int16(1);
[sResult, iGroundWaterProfileIndex] =
o.GetGroundwaterIndexForSoilProfile(iStageIndex,iSoilProfileIndex);
iPileCrossSectionIndex = int16(1);
iPileLengthIncrementIndex = int16(1);

[sResult, sCapacity] = o.GetUltimateCapacity(iStageIndex,
iSoilProfileIndex, iPileCrossSectionIndex, iPileLengthIncrementIndex);

% Generated 10 loads going from 0.1*Ultimate load to 0.9
% Obtain corresponding pile head displacement in each case
o.DeleteResults();

load = zeros(10,1); % to initialize array
disp = zeros(10,1);

load = 0:0.1*sCapacity:0.9*sCapacity;

dLoad = 0.0;
dLevel = 8.0;
iLoadIndex = int16(1);
o.GetLoad(iStageIndex,iLoadIndex,dLoad);

iPileLengthIndex = int16(1);
iNodeIndex = int16(1);

for i=1:10
    o.SetLoad(iStageIndex,iLoadIndex,load(i),dLevel);
    o.Analyse();
    [sResult, disp(i)] = o.GetPileDisp(iStageIndex, iSoilProfileIndex,
iPileCrossSectionIndex, iPileLengthIndex,iNodeIndex);
```

```

disp(i) = disp(i)*1000; %Convert SI to mm
o.DeleteResults();
end

loadkN = load*0.001; %convert SI to kN

figure(1);
plot(disp, loadkN, 'LineWidth',2)
title('Load vs Displacement Plot')
ylabel('Load (kN)')
xlabel('Displacement (mm)')

release(o);

```

9 List of References

9.1 References

API (1993). Recommended Practice for Planning, Designing and Constructing Fixed Offshore Platforms - LRFD, API Recommended practice 2A-LRFD, 1st Edition.

Bailie, P. (2013). An investigation into the cyclic response of piles. MSc thesis, Imperial College London.

Berezantzev V G, Khristoforov V S and Golubkov V N (1961). Load bearing capacity and deformation of piled foundations. Proceedings of the 5th International Conference on Soil Mechanics and Foundation Engineering, pp. 11-15.

Bolton M D (1986). The Strength and Dilatancy of Sands. Geotechnique 36, No.1, 65-78.

BS EN 1997-1:2004 Eurocode 7: Geotechnical design - Part 1: General rules

Chin J T and Poulos H G (1991). A "T-Z" Approach for Cyclic Axial Loading Analysis of Single Piles. Computers and Geotechnics 12 (1991), pp. 289-320.

D'Appolonia, E. and Romualdi, J.P. (1963). Load Transfer in End Bearing Steel HPiles, Journal of the Geotechnical Engineering Division, ASCE, Vol. 89.

IS 2911 Part1 Section 1 - Section 4 (2010). Design and Construction of Pile Foundations - Code of Practice.

Ken Fleming, Austin Weltman, Mark Randolph, Keith Elson (2009). Piling Engineering, Third edition.

Mattes N S and Poulos H G (1969). Settlement of Single Compressible Pile. Journal of the Soil Mechanics and Foundation Division, Proceedings of ASCE, Volume 95, No. SM1, January 1969, pp. 189-206.

NA to BS EN 1997-1:2004 UK National Annex to Eurocode 7: Geotechnical design - Part 1: General rules

- Poulos H G and Mattes N S (1968).** The Settlement Behaviour of Single Axially Loaded Incompressible Piles and Piers. *Geotechnique*, Volume 18, pp. 351-371.
- Poulos H G and Mattes N S (1969).** The Behaviour of Axially Loaded End-bearing Piles. *Geotechnique*, Volume 19, No. 2, pp. 285-300.
- Poulos H G and Davis E H (1980).** Pile Foundation Analysis and Design Chapter 5. Series in Geotechnical Engineering, T. W. Lambe and R. V. Whitman (eds), John Wiley and Sons.
- Puzrin A M and Burland J B (1996).** "A logarithmic stress-strain function for rocks and soils", *Geotechnique*, Vol. 46, No.1, pp.157-164.
- Puzrin A M and Shiran A. (2000).** "Effect of a Constitutive Relationship on Seismic Response of Soils. Part I: Constitutive Modeling of Cyclic Behaviour of Soils", *Soil Dynamics and Earthquake Engineering*, Vol. 19, pp. 305-318.
- Randolph M F and Wroth C P (1978).** Analysis of Deformation of Vertically Loaded Piles, *Journal of the Geotechnical Engineering Division, ASCE*, 104 No.12 (1978), pp. 1465 - 1488.
- Randolph M and Gournevec M (2011).** "Offshore Geotechnical Engineering", Taylor & Francis. ISBN: 978-0-415-47744-4.
- Seidel M and Coronel M (2011).** A new approach for assessing offshore piles subjected to cyclic axial loading, *geotechnik* 34 (2011).
- Timoshenko S and Goodier J (1970).** "Theory of Elasticity", 3rd Edition, McGraw Hill.
- Vijayvergiya V N (1977).** Load-movement characteristics of Piles, *Proceedings, Ports 77, ASCE*, Vol. II, pp. 269-286.

10 Manual Example

10.1 General

The data input and results for the **Pile** manual examples are available in the 'Samples' sub-folder of the program installation folder. The examples have been created to show the data input for all aspects of the program and do not seek to provide any indication of engineering advice.

These examples can be used by new users to practise data entry and get used to the details of the program.

11 Brief Technical Description

11.1 Pile

Pile is a program which calculates the vertical load carrying capacities and vertical settlements of a range of individual piles in a layered soil deposit. The theory is based on both conventional and new methods for drained (frictional) and undrained (cohesive) soils. Currently the settlements are calculated for solid circular sections without under-ream.

The main features of **Pile** are summarised below.

Either capacity analysis, settlement analysis, or both can be performed for a range of pile lengths and cross-sections.

Settlements are calculated for only solid circular cross-sections without under-ream.

The soil is specified in layers. Each layer is set to be drained (frictional) or undrained (cohesive) and appropriate strength parameters are specified. Maximum values can be set for ultimate soil/shaft friction stress and end bearing stress within each layer.

Levels may be specified as depth below ground level or elevation above ordnance datum (OD).

Porewater pressures within the soil deposit can be set to hydrostatic or piezometric.

Pile capacities may be calculated for a range of pile lengths and a range of cross-section types such as circular, square and H-section. The circular and square cross-sections may be hollow or solid, whereas the H-section is only solid. Under-reams or enlarged bases may be specified.

Pile settlements may be calculated for a range of pile lengths and a range of solid circular cross-sections without under-ream.

There are two approaches available to calculate the capacity of the pile - working load approach and limit-state approach.

The graphical output depicts the variation of different pile capacities such as shaft resistance, end bearing, total bearing with pile depth and settlements of pile or soil. This may be exported in WMF format.

The text output contains the tabular representation of the input data and results. They may be exported to CSV format.

Legacy Pile and Pilset files may be read. Limiting shaft skin friction is calculated from the material properties, so the reading of limiting shaft skin friction from legacy Pilset files is ignored. results in CSV format.

Index

A

Adhesion 8
 Allowable Working Load 18
 Alpha 100
 Analysis 126
 Analysis and Data Checking 126
 Analysis Options 79
 API 8, 20
 Assembling Data 75
 Average External Skin Friction 7
 Average Flange Thickness 95
 Average Internal Skin Friction 7
 Average Perimeter 7
 Average Web Thickness 95

B

Base Diameter 99
 Bearing Capacity 12
 Bearing Pressure 21
 Bearing Resistance 18
 Berezantzev 10, 21, 102, 110
 Berezantzev Method 22
 Beta 9, 102
 Beta Method 9, 102
 Bitmap 78
 Bolton 10, 21, 102, 110
 Bolton Method 25

C

Calculation Options 79
 Calculation Procedure 20
 Cays 8
 Characteristic Base Resistance 18
 Characteristic Shaft Resistance 18
 Checking 126
 Circular 92
 Cohesive 1, 153
 COM interface

C++ example 147
 COM automation 135
 COM functions 135
 VBA example 146

Company Info 78
 Components of the User Interface 2
 Critical State Angle of Friction 10
 Cross-section 1, 92
 Cross-section Dimensions 95
 CSV 1, 127, 153
 Cumulative Capacity 10

D

Data Input Screens 72
 Deep Strip Footing 10
 Delta 102
 Depth 1
 Design Action 18
 Design Base Resistance 18
 Design Options 79
 Design Shaft Resistance 18
 Dilatancy 10
 Drained 1, 153
 Drained Friction Angle 10, 22
 Drained/Undrained 75

E

Earth Pressure 9, 20, 102
 Earth Pressure Method 9
 EC7 18
 Effective Stress 99, 102, 109
 Effective Stress Approach 9, 10
 Effective Stress Profiles 109
 Elevation 1
 Email 74
 Embedment 10
 End Bearing 10, 12, 16, 20
 End Bearing Capacity 21
 End Bearing Computation 21
 Examine 126
 Example 153
 Export 127
 External 20
 External Side Width 95

F

Factored Load 16
 Factors of Safety 16
 Frew Toolbar 2
 Friction Angle 102
 Frictional 1, 153

G

Gateway 2
 General 7
 General Program Description 1
 Geometry 75
 Graphical Output 2, 130
 Graphics Toolbar 2
 Ground Level 1
 Groundwater 107
 Groundwater Data 75
 Groundwater Pressure 107

H

Height of the Under-ream 99
 Hollow 92
 Hollow Piles 12
 Hollow Sections 10
 Horizontal 109
 H-Pile 92, 95
 H-piles 10
 H-section 1
 Hydrostatic 1, 107

I

Image 78
 Incremental External Skin Friction 7
 Internal 20
 Intranet Link and Emails 74
 Ir 102

L

Layers 104
 Level 104, 107

Limit State Approach 18
 Limiting End Bearing 12
 Limiting Shaft Friction 9
 Limiting Value 102
 Limit-state 1, 153
 Load 1, 153
 Load Cases 18

M

Manual 153
 Mass Data 91
 Mass-Ground Connections 99
 Material 104, 107
 Material Description 100, 102
 Material Layer 109
 Material Layers 20
 Material Properties 99
 Mean Effective Stress 10
 Mud-line 1

N

Nc 10
 Negative Skin Friction 10, 14
 Non-Linear Curves 102, 110
 notes 77
 Nq 22, 102, 110

O

Ordinance Datum 1

P

Partial 107
 PDF 153
 Piezometric 1
 Perimeter 20
 Phi' 102, 110
 Phicv' 102
 Phreatic 75
 Picture 78
 Piezometric 75, 107
 Pile 1, 7, 72, 92, 153
 Pile Capacity 1

Pile Depths 1
 Pile Geometry 91
 Pile Wall 12
 Plot 130
 Plugged 92
 Plugged Capacity 14
 Porewater 1
 Program Features 1
 programming interface
 programming interface 135
 Properties 92

R

Reduction Factor 92
 Relative Density 10
 Results 127
 RGB 78

S

Settlement 16
 Shaft 18
 Shaft Diameter outside 95
 Shaft Friction 8
 Shaft Resistance 1, 153
 Shaft Wall Thickness 95
 Shear 8
 SI 78
 Skin Friction 99, 102
 Skin Friction Computation 20
 Soil Plug 12
 Soil Strength 100
 Solid 92
 Solution Algorithm 20
 Square 92
 Standard Toolbar 2
 Stress 1
 Support 74

T

Table View 2
 Tabular Output 2
 Tabulated Output 127
 Tension 12

Titles 77
 Titles Window - Bitmaps 78
 Toolbar 2, 130
 Total Bearing Capacity 1, 12
 Total Stress 8, 20, 100
 Total Stress Approach 8, 10
 Type 92

U

ULS 18
 Ultimate Bearing Capacity 13, 16
 Ultimate Capacity 13, 18
 Ultimate Limit State 18
 Under-ream 91, 92, 99
 Underream Data 99
 Undrained 1, 8, 153
 Unit Wt 107
 Units 78
 Units and Preferences 78
 Unplugged 92
 Unplugged Capacity 14
 User Interface 2
 User-specified 21
 User-specified Datum 1

V

VBA interface
 C++ example 147
 COM automation 135
 COM functions 135
 VBA example 146
 Vertical Effective Stress 10
 Vertical Stress Profile 20
 visual basic interface
 C++ example 147
 COM automation 135
 COM functions 135
 VBA example 146

W

Wall Thickness at Base 95
 Warnings/Errors 126
 Web 95

Width along Flanges 95

WMF 1, 130, 153

Working Load 153

Working Load Approach 16

Endnotes 2... (after index)

