

PDisp

Version 20.0

Oasys

Oasys Ltd

13 Fitzroy Street
London
W1T 4BQ

Central Square
Forth Street
Newcastle Upon Tyne
NE1 3PL

Telephone: +44 (0) 191 238 7559

Facsimile: +44 (0) 191 238 7555

e-mail: oasys@arup.com

Website: <http://www.oasys-software.com/>

PDisp Oasys Geo Suite for Windows

© Oasys Ltd. 2019

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

This document has been created to provide a guide for the use of the software. It does not provide engineering advice, nor is it a substitute for the use of standard references. The user is deemed to be conversant with standard engineering terms and codes of practice. It is the users responsibility to validate the program for the proposed design use and to select suitable input data.

Printed: June 2019

Table of Contents

1	About PDisp	1
1.1	General Program Description	1
1.2	Components of the User Interface	1
1.3	Program Features	2
1.4	Sample Files	3
2	Methods of Analysis	3
2.1	General	3
2.2	Boussinesq Analysis Method	4
2.2.1	Determination of Stresses	4
2.2.2	Strains and Displacements	5
2.2.2.1	Global Poisson's Ratio	5
2.2.2.2	Calculation Details	6
2.2.3	Accuracy of the Boussinesq Solution	7
2.3	Mindlin Analysis Method	7
2.3.1	Mindlin and the Legacy Mindlin Method	7
2.3.2	Settlement above the Load	9
2.3.3	Settlement below the Load	11
2.3.4	Calculation Details	12
2.3.4.1	Vertical Displacements	12
2.3.4.2	Horizontal Displacements	13
2.3.5	Accuracy of the Mindlin Solution	14
2.4	1D Compression	15
2.5	Consolidation	16
2.5.1	Pore Pressures	16
2.5.1.1	Boundary Conditions	18
2.5.2	Layered System	21
2.5.3	Degree of Consolidation	23
2.5.4	Settlement	23
2.5.4.1	Primary Consolidation	23
2.5.4.1.1	mv method	24
2.5.4.1.2	Cc method	25
2.5.4.2	Secondary Compression	27
3	Input Data	28
3.1	General	28
3.2	Preferences	28
3.3	Data Input	29
3.3.1	Titles	30
3.3.1.1	Titles window - Bitmaps	30
3.3.2	Units	30
3.3.3	Analysis Options	31
3.3.3.1	General	31

3.3.3.2	Elastic	31
3.3.3.3	Consolidation	33
3.3.4	Soil Profiles	33
3.3.4.1	Displacement Levels.....	34
3.3.4.2	Number of Displacement Levels.....	34
3.3.4.3	Location of Displacement Levels.....	35
3.3.4.4	Young's Modulus (E)	36
3.3.5	Load Data	37
3.3.5.1	Rectangular	37
3.3.5.2	Circular	39
3.3.5.3	Polygonal.....	41
3.3.6	Polygon Wizard	42
3.3.7	Soil Zones	43
3.3.8	Polylines	44
3.3.9	Displacement Data	44
3.3.9.1	Points	45
3.3.9.2	Lines	45
3.3.9.3	Polylines	45
3.3.9.4	Grids	46
3.3.10	Imported Displacements	47
3.3.11	DXF Import of Background Data	50
3.3.12	Non-linear Materials	50
3.3.13	Pile-Soil Interaction Using GsRaft	52
3.3.14	Pile-Soil Interaction Curves (PSICs) C(..)	52
3.3.15	Allocation of PSICs to Soil Strata	53
3.3.16	Graphical Input	53
3.3.16.1	Inserting Bitmaps.....	54
3.3.16.2	Soil Zones - Graphical input.....	54
3.3.16.3	Displacement Grids - Graphical input.....	54
3.3.16.4	Load Data - Graphical input.....	55

4 Programming Interface 55

4.1	COM Automation	55
4.1.1	COM Export Functions	56
4.1.2	COM VBA Example	70
4.1.3	COM C++ Example	70
4.1.4	Enums and Structs	73

5 Output 76

5.1	Analysis and Data Checking	76
5.2	Text Output	77
5.2.1	Full Text Output	77
5.2.2	Condensed Text Output	78
5.3	Graphical Output	79
5.3.1	Templates	79
5.3.2	Plan View	79
5.3.2.1	Set Contour Interval.....	79
5.3.2.2	Set Exact Scale.....	79
5.3.2.3	Line Displacements.....	79
5.3.2.4	Soil Column Displacements.....	80
5.3.3	Cross Section Plot	80
5.3.3.1	Label objects	80

5.3.4	3D Graphical Output	80
5.3.4.1	Graphic Settings.....	81
5.4	Chart Output	85
5.4.1	Displacement vs Time	86
5.4.2	Displacement Lines	86
5.4.2.1	Displacements	86
5.4.2.2	Stress	87
5.4.2.3	Strain	88
5.4.3	Displacement Polylines	88
5.4.3.1	Displacements	88
5.4.3.2	Stress	89
5.4.3.3	Strain	90
5.4.4	Soil Column Displacements	90
5.5	CSV Results File	90
5.6	Old Data File Version	92
6	Miscellaneous	92
6.1	Keyboard Accelerators	92
6.2	File Backups	93
7	Toolbars	94
7.1	Standard Toolbar	94
7.2	PDisp Toolbar	94
7.3	Plan Toolbar	95
7.4	3D Graphics Toolbar	96
8	References	98
8.1	References - General	98
8.2	References - Pile-Soil Interaction Coefficients	99
9	Brief Technical Description	101
9.1	PDisp	101
10	Manual Example	102
10.1	General	102
Index		103

1 About PDisp

1.1 General Program Description

PDisp Pressure Induced **Dis**placement Analysis

PDisp calculates the displacements (and stresses if required) within a linear elastic or non-linear soil mass, arising from uniform normal or tangential pressure, applied to rectangular, polygonal and circular loaded planes.


PDisp also calculates time-rate 1D consolidation for linear problems using the finite difference approach.

The program is ideal for predicting the displacements that may arise due to the action of several loads in a soil mass.

PDisp is a development of (and replacement for) **Vdisp**. **Vdisp** predicted displacements induced by vertical loads on horizontal loaded areas only. **PDisp** is capable of predicting displacements due to both vertical and horizontal loads.

1.2 Components of the User Interface

The principal components of **PDisp**'s user interface are the Gateway, Table Views, Graphical Input, Plan View, Cross Sectional View, 3D Graphical Output, Text Output, toolbars, menus and input dialogs. Some of these are illustrated below.

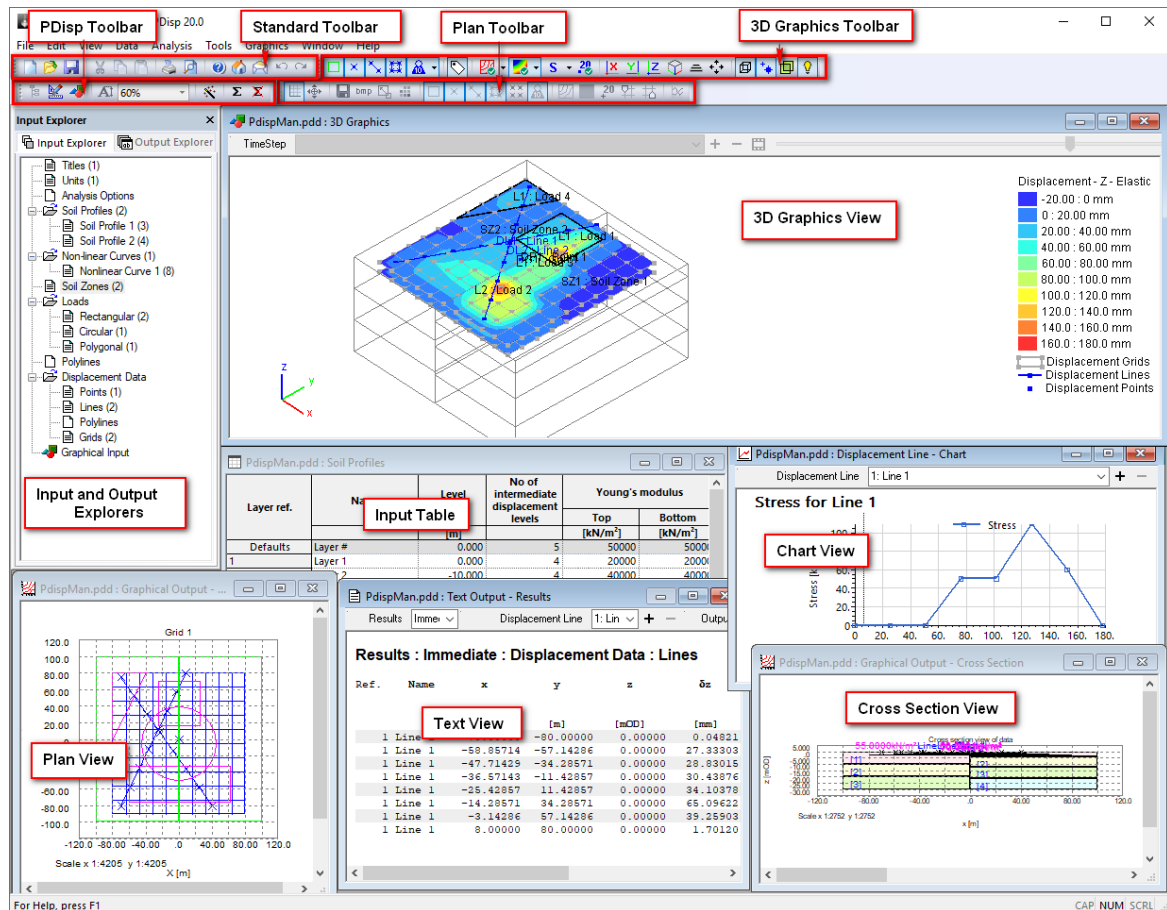


1.3 Program Features

The main features of **PDisp** are summarised below.

- **displacements** are calculated using a profile of Young's modulus with depth. The modulus can be constant or vary linearly with depth for each soil layer. Non-linear stress/strain curves may also be specified.
- **Displacements and stresses, and Time-rate 1D consolidation** can be calculated at several levels and at any location in plan. The location of the displacement/stress points is defined by means of two-dimensional orthogonal grids, by lines or by points. The results from the grids can be displayed graphically as **contours**.
- **Loaded areas** can be defined as rectangles, circles or polygons. Pressures are applied as vertically and/or horizontally and uniformly distributed loads to rectangular and/or circular loaded areas. Areas can be superimposed and placed at any level. All loads are completely flexible i.e. no allowance is made for stiffness of the structures.
- The base of the model is defined by the specification of an equivalent **rigid boundary**.
- The **ground** is modelled using a series of vertical **soil profiles** each consisting of a number of horizontal soil layers. The plan distribution of the soil profiles is specified in rectangular areas known as **soil zones**. These can be superimposed allowing the development of complicated ground models.

No allowance is made for the effect of soil zoning on stress distribution.

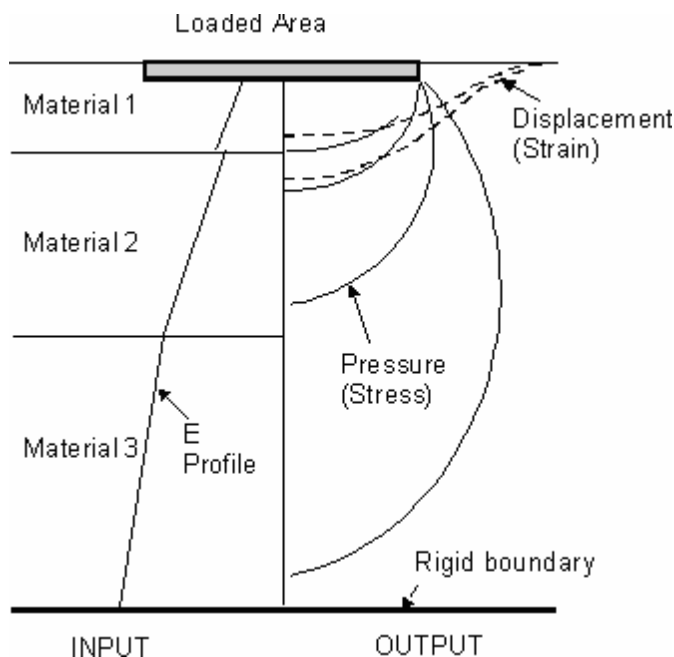

1.4 Sample Files

Sample files are provided during the installation process. These demonstrate **PDisp**'s features. By default they are installed in the folder 'C:\Program Files\Oasys\PDisp n\Samples', where *n* indicates the version of the program. These files may be opened and inspected in **PDisp** in order to become familiar with the typical input data that is required to create a **PDisp** model.

The sample files are named to indicate the features of the program that they demonstrate.

DXF files are also provided to demonstrate DXF import.

2 Methods of Analysis

2.1 General

Two methods of analysis for displacements due to loads are available in **PDisp**:

- Boussinesq
- Mindlin

The Boussinesq method has the advantage that it gives a report of stresses in the ground in addition to displacement. In addition, it allows PDisp to perform Time-Rate consolidation. It has the disadvantage, however, that the results are sensitive to the spacing of the number of intermediate displacement levels specified. The accuracy of the result can therefore be improved by introducing more displacement levels. This is particularly true just beneath small loaded areas which are carrying a significant load. If the distribution of settlement close to the load is important then the vertical spacing of the displacement levels should be set so that they do not exceed 25% of the size of the loaded area.

The Mindlin method only provides details of vertical and horizontal displacements and not stresses.

Consolidation calculations cannot be performed if this method is selected. It predicts:

- vertical displacements resulting from vertical loads;
- horizontal displacements resulting from vertical loads; and
- vertical displacements resulting from horizontal loads.

The Mindlin method considers the effect of all the soil, above and below the load, acting elastically when calculating vertical displacements. It is not sensitive to the spacing of intermediate displacement levels, unless there is a sharp gradient of stiffness, see Displacement Levels.

2.2 Boussinesq Analysis Method


The **Boussinesq** analysis method calculates the stresses in the strata due to the applied loads. The method uses integrated forms of the well known equations derived by Boussinesq (1885). Strains are calculated within the strata. Displacements are then defined by integrating vertical strains.

Stresses are calculated at points vertically beneath each intersection within a displacement grid (see Displacement Data) and at the centre of each sub-layer, see Displacement Levels.

Vertical displacements resulting from normal loads applied on horizontal planes only are calculated in this method. The Mindlin method may be used to calculate horizontal displacements.

2.2.1 Determination of Stresses

The vertical stress σ_z and the sum of principal stresses σ_p are calculated using the integrated Boussinesq equations, with respect to x and y , over the area of a uniformly loaded rectangle.

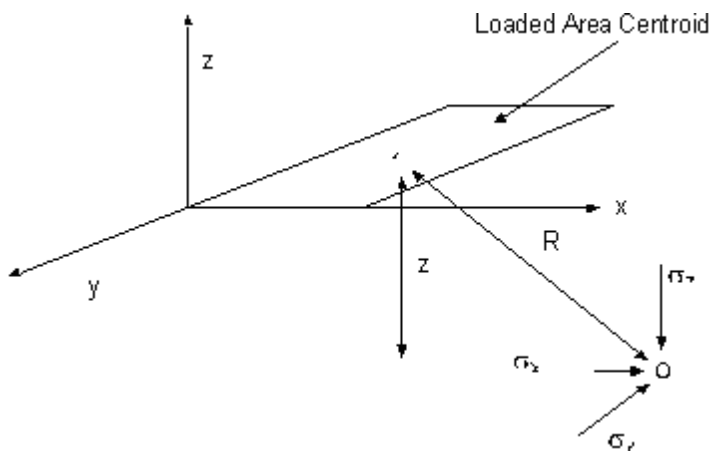

where:

$$\sigma_p = \sigma_x + \sigma_y + \sigma_z$$

The general equations are:

$$\sigma_z = \iint_{xy} \frac{3pz^3}{2\pi R^5} dy dx$$

and

$$\sigma_p = \iint_{x,y} \frac{(1 + \nu_g) p z}{\pi R^3} dy dx$$

R = distance between the centre of the loaded area and the stress evaluation point.

z = vertical distance from the loaded area to the stress evaluation point.

p = applied pressure on loaded area

ν_g = GLOBAL Poisson's ratio.

For this calculation it is assumed that Young's modulus and Poisson's ratio are constant throughout the soil. This assumption is generally considered to give a satisfactory distribution of stress, but its validity can be doubtful where stiff strata overlie softer ones.

The pressure loads can be specified as acting at different levels. If a stress evaluation point is above an applied load, then no account of that load is made when determining the stresses at that point. In other words the displacement at a point above a loaded area is equal to the displacement at the level of the load.

2.2.2 Strains and Displacements

The vertical strains, and thereby displacements, are calculated for each sub-layer at every stress evaluation point. For this calculation local values of Young's modulus and Poisson's ratio are used.

The vertical displacement, at each grid location, is calculated by summing the displacement of each of the sub-layers from the rigid boundary up to the grid level. For information on the location of sub-layers, see Displacement Levels.

If a non-linear curve is specified for this stratum the program calculates the stiffness factor appropriate to the final resulting value of strain (see Non-linear Materials). This stiffness factor is multiplied by the appropriate Young's modulus to obtain the final stiffness value.

2.2.2.1 Global Poisson's Ratio

The use of the Boussinesq method of solution requires the user to specify a value of global Poisson's ratio (ν_g) to enable the stress calculations to be made. In general the choice of an average value of ν_g will not result in a significant error in the calculated displacements. The maximum expected error in the calculated displacements, by a poor choice of ν_g , is only about 5 to 10%.

In certain circumstances, however, the selection of ν_g is important. This is because although ν_g has no effect on the calculated value of vertical stress (σ_z), it does affect the calculated mean stress σ_p , which is used to derive vertical strain (ε_v):

$$\varepsilon_v = \frac{1}{E} [(1 + \nu) \sigma_z - \nu \sigma_p]$$

An example of this is a short term analysis with interbedded granular and cohesive materials. The cohesive layer(s) will have an undrained Poisson's ratio, ν_g , whilst the granular layer will have a drained Poisson's ratio, ν' . In this case the highest relevant value of Poisson's ratio (the undrained value) should be entered as ν_g . Errors due to calculation of σ_p , will be less in the layers of drained granular material, than in the layers of undrained cohesive material if the drained value had been substituted for ν_g .

In cases such as these it is advisable to use the **Mindlin** method of solution, or at least to carry out a separate run to provide a check. This method does not generate these kind of errors.

2.2.2.2 Calculation Details

The determination of displacement for stress evaluation point 'i', at the centre of each sub-layer proceeds as follows.

Young's modulus at 'i' is:

$$E_i = E_t \frac{(E_b - E_t)}{(z_t - z_b)} (z_t - z_i)$$

Where

E_t = Young's modulus at top of layer

E_b = Young's modulus at base of layer

z = Level

The vertical strain of the sub-layer is

$$\varepsilon_v = \frac{1}{E} [(1 + \nu)\sigma_z - \nu\sigma_p]$$

ν = Poisson's ratio of sub-layer

Where

σ_z = vertical stress at the stress evaluation point

σ_p = sum of the principal stresses at the stress evaluation point

For non-linear soil curves **PDisp** calculates the corresponding stress change at 'i' where

$$\sigma_i = \varepsilon_{zi} E_i$$

The appropriate stiffness, modified for this stress level, is then determined by linear interpolation of the stress values corresponding to the strain values input by the user.

Vertical displacement within the sub-layer is then:

$$\delta_{zi} = \int_{z_{bi}}^{z_{ti}} \varepsilon_{zi} dz$$

When $E_{ti} = E_{bi}$, this is approximated as:

$$\delta_{zi} = \varepsilon_{zi} [z_{ti} - z_{bi}]$$

When $E_{ti} \neq E_{bi}$:

$$\delta_{zi} = \varepsilon_{zi} [z_{ti} - z_{bi}] \frac{E_i}{[E_{bi} - E_{ti}]} \ln \left(\frac{E_{bi}}{E_{ti}} \right)$$

2.2.3 Accuracy of the Boussinesq Solution

The accuracy of the predicted settlement is influenced by the spacing of the stress evaluation points. Decreasing the vertical distance between the points increases accuracy.

Large changes of stress or stiffness between adjacent points will lead to a reduction of accuracy. Stress evaluation points should therefore also be closely spaced beneath and around localised loads and where the variation of stiffness with depth is large.

For soils in which the Young's modulus (E) varies linearly with depth, additional sub-layers can be generated automatically by specifying the maximum allowable ratio of E between adjacent stress evaluation points. This ratio controls the maximum variation of E within each sub-layer.

The default ratio value is 1.5. It must be emphasised, however, that even with constant E the accuracy of the Boussinesq solution is still a function of the number of sub-layers.

For further information see Young's modulus (E) and Displacement Levels.

2.3 Mindlin Analysis Method

The **Mindlin** method calculates relative displacements across a stratum directly from the applied loads. It calculates the displacements due to a vertical or horizontal load applied as a uniform stress on a rectangular or circular area on or beneath the surface of a semi-infinite homogeneous, isotropic and elastic half-space material. The method uses equations derived by Vaziri et al (1982) from the work of Mindlin (1936) and does not calculate stresses.

A value for global Poisson's ratio is not required for the Mindlin calculation.

2.3.1 Mindlin and the Legacy Mindlin Method

The Legacy Mindlin method represents the Mindlin method of Pdisp versions 18.2 and earlier. It has the following characteristics.

- Only vertical loads on horizontal planes are considered. Other load orientations are ignored.
- No consideration is given to the influence of ground above a vertical load when calculating settlements at points below the load. That is, all loads are treated as though they are at the

ground surface, so that soil above the load does not contribute to resisting the settlement of the load.

- The influence of ground above a vertical load, when calculating settlements in ground that is above the load, is considered if the "Elastic analysis above loads" check-box is checked in the Analysis Options dialog. If that option is unchecked then Pdisp will assume that all points above the load settle by the same amount as those at the level of the load.
- Horizontal displacements resulting from vertical loads on horizontal planes are not calculated.

If the Mindlin method is chosen without the Legacy Mindlin option, then the most recently implemented Mindlin method of Pdisp versions 19.0 and later will be invoked. This has the following characteristics that supplement those of the Legacy Mindlin method.

- Both vertical and horizontal displacements are calculated resulting from normal and tangential loads on vertical and horizontal planes.
- Consideration is given to the influence of ground above a load acting on horizontal plane when calculating settlements at points below the load, so soil above the load contributes to resisting the settlement of the load. However, this can be changed by the user.
- Displacements "behind" horizontal loads are calculated assuming elastic soil behind the load.

Table 1
Summary of Mindlin Methods

	Legacy Mindlin	New Mindlin without correction factor (in Pdisp 19.0)	New Mindlin
Soil above load considered to dampen displacements below it	X	✓	✓
Original correction factor for heave in soft soils above the load	✓	X	✓
New correction factor for heave in soft soils above the load	X	X	✓
Vertical (normal) loads on horizontal planes	✓	✓	✓
Vertical (tangential) loads on vertical planes	X	✓	✓
Horizontal (normal) loads on vertical planes	X	✓	✓
Horizontal (tangential) loads on horizontal planes	X	✓	✓

2.3.2 Settlement above the Load

Pdisp allows computation of settlement by several different methods. In particular, for the Mindlin methods, alternative assumptions can be made about the effect of the ground above a subsurface load.

These methods are believed to be reasonably good for computation of elastic settlements beneath a load, provided that the stiffness of the ground is wither constant or generally increasing with depth.

NOTE: These methods are not technically “correct”, but are proposed to find a formulation that gives reasonable results.

Settlement above the load


In Figure 1 the blue solid curve represents settlements computed for a subsurface load in a uniform material. Settlements above the load are derived in Pdisp in one of 2 ways:

- A) Assume the settlement is the same as at the level of the load – line AB in Figure 1.
- B) Assume the Mindlin distribution above the level of the load – line AC in Figure 1.


If the load is deep in the ground, method A may seriously overestimate the settlements at higher levels above the load. Method B might be reasonably OK in uniform material.

The red curve in Figure 1 represents a situation in which the soil below the load is about 5 times stiffer than it was for the blue line, but the soil above the load is unchanged. For this situation, a “correct” solution for settlement above the load would probably look something like curve A'D'. At present GSPR uses method B above in Pdisp, so adopts curve A'C'. It can be seen that this can give the unreasonable result that points above the load actually heave.

The problem is that A'C' relates to the settlement that would occur at level A if the material below A were the same as that above (ie point A). This curve needs to be corrected to relate to the settlement actually computed at level A (ie point A').

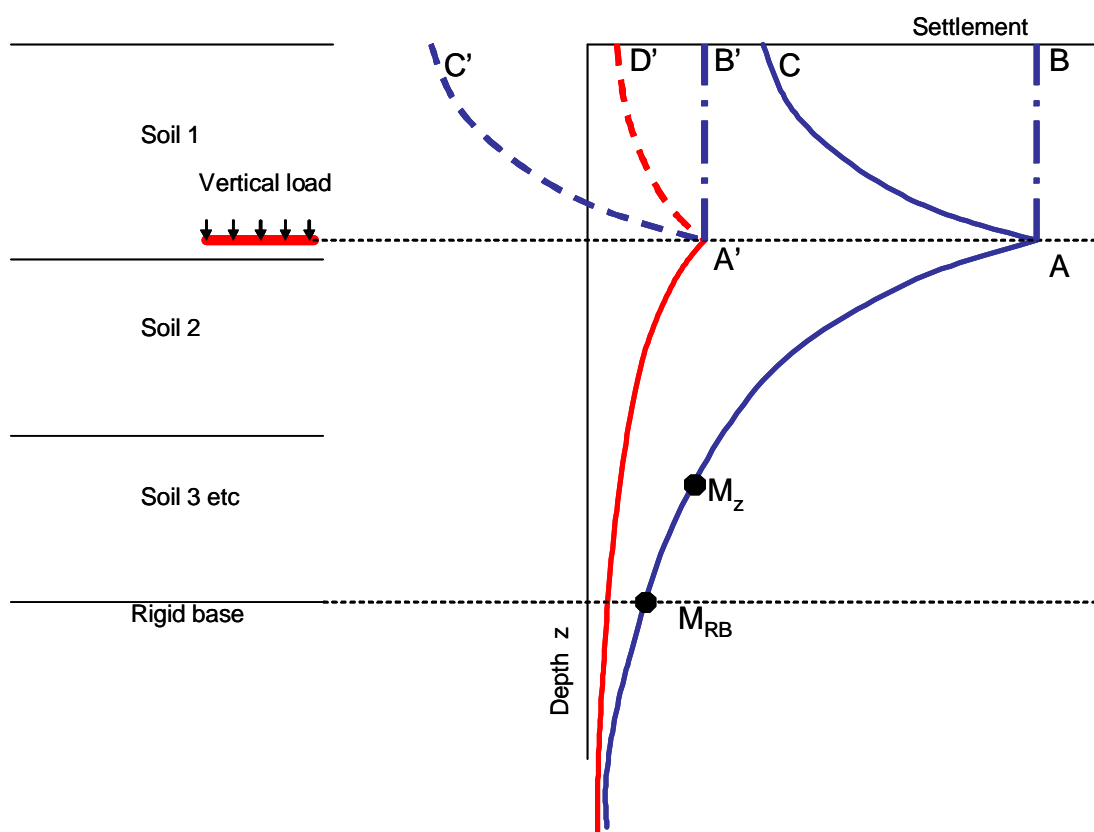

To correct the settlements above the load, either of the following two correction factors are applied:

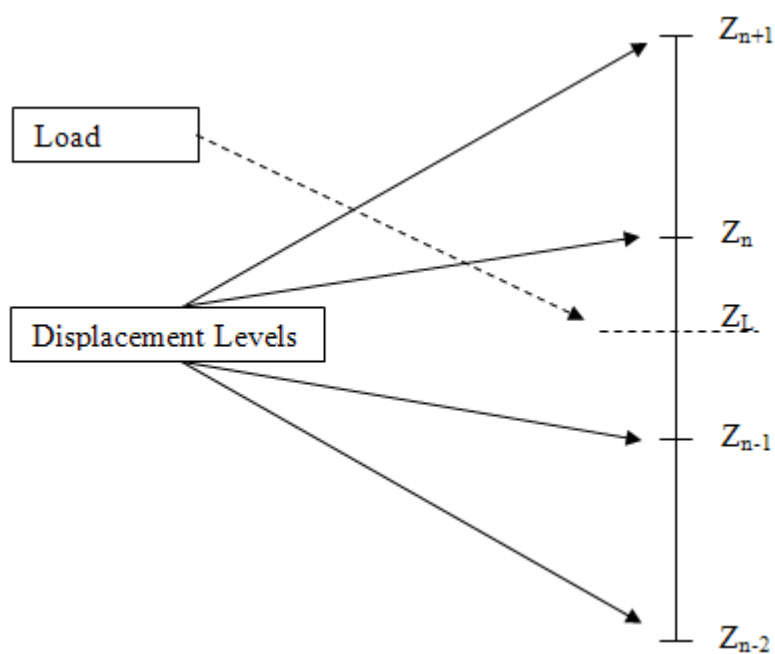

Notation: $w(Z_i)$ – vertical displacement at level Z_i ,
 $M(Z_i)$ – Mindlin integral at level Z_i

Z_n – level of first displacement point immediately above the load

$M(Z_n)$ – Reference Mindlin integral for use in equation (2) below. This is actually, the Mindlin integral at level Z_n

Legacy Correction Factor	New Correction Factor
<p>For $Z_i > Z_n (> Z_L)$, $w(Z_i) = w(Z_{i-1}) * M(Z_i) / M(Z_{i-1})$ ---(1)</p> <p>For location Z_n (displacement level immediately above load), $w(Z_n) = w(Z_L) * M(Z_n) / M(Z_L) = w(Z_L)$</p> <p>For the other points above the load, $w(Z_{n+1}) = w(Z_n) * M(Z_{n+1}) / M(Z_n) = w(Z_L) * M(Z_{n+1}) / M(Z_n)$</p> <p>$w(Z_{n+2}) = w(Z_{n+1}) * M(Z_{n+2}) / M(Z_{n+1}) = w(Z_L) * M(Z_{n+2}) / M(Z_n)$</p> <p>Thus, it can be seen that, equation (1) simplifies to, $w(Z_i) = w(Z_L) * M(Z_i) / M(Z_n)$, where $Z_i > Z_n$ ---(2)</p> <p>It should be noted that the Reference Mindlin integral is evaluated at the location of the displacement level immediately above the load(i.e. Z_n), but NOT at the load(i.e. Z_L). As a result, $w(Z_n)$ is NOT the actual displacement at the level Z_n, but the displacement at the load level, Z_L. Thus, the heave in the zone between the levels Z_n and Z_L is not taken into account. Also, these Mindlin integrals take into account the soil above the load, unlike those used in the evaluation of settlements up to the level of the load.</p>	<p>With correction factor applied, the settlement is calculated up to the level of load in the same way as the Legacy Mindlin method, BUT here the Mindlin integrals take into account the soil above the load.</p> <p>For $Z_i > Z_n (> Z_L)$, $w(Z_i) = w(Z_{i-1}) + \{M(Z_i) - M(Z_{i-1})\} / E_i * w(Z_L)$ $\{M(Z_i) - M(Z_{RBL})\} / E_i]$</p> <p>where E_i is the Young's modulus in the sub-layer immediately below Z_i.</p> <p>For location Z_n, $w(Z_n) = w(Z_L) + \{M(Z_n) - M(Z_L)\} / E_n * w(Z_L)$ $\{M(Z_n) - M(Z_{RBL})\} / E_n]$</p> <p>Note: For points away from the load, the correction factor i.e.</p> <p>$\{M(Z_i) - M(Z_{RBL})\} / E_i * w(Z_L)$</p> <p>is evaluated by considering the load to act at the same plan location of the point under consideration.</p>

2.3.3 Settlement below the Load

The following discussion applies to only the new Mindlin method.

The settlement below the level of the load is also affected by the presence of soil above the load. In Pdisp, this effect may be

- (1) included as if the soil above were of the same stiffness as that below or
- (2) disregarded (i.e. the computation is as though the load were at a soil surface).

This is applicable only for loads acting on horizontal planes. The user may choose either of these options in Pdisp.

In GSPR, option (1) is currently used for horizontal loads on horizontal planes, and option (2) is used for vertical loads on horizontal planes. These cannot be changed by the user.

These are also the default options for the new Mindlin method, when the user creates a new file in the current version of Pdisp.

Note: When files created by version Pdisp 19.0 are read by this current version of Pdisp, option (1) is used for vertical loads on horizontal planes.

2.3.4 Calculation Details

The **Mindlin** method does not calculate stresses, but implicitly assumes that the stresses in a given layer are the same as they would be if the whole of the ground had the same elastic properties as that layer.

The solution is therefore exact for a soil of constant elastic properties irrespective of layer thickness.

If the value of Young's modulus or Poisson's ratio varies with depth, then the materials should be divided into sub-layers.

Displacements are calculated at the strata boundaries and at intermediate displacement levels when these are specified, see Displacement Levels.

Mindlin (1936) derived equations for the displacement due to a vertical or horizontal point load applied within a semi-infinite homogeneous, isotropic elastic half space. Vaziri et al (1982) provided integrated forms of these equations to give horizontal and vertical displacements due to uniform stresses applied to horizontal or vertical rectangular areas.

2.3.4.1 Vertical Displacements

The basic equation can be expressed as:

$$\delta_z = \frac{M}{E}$$

where:

M = Function of the relative distance between the load and the displacement point and Poisson's ratio.

E = Young's modulus of the half space.

To analyse the sub-layer, the function M is first calculated at the top (M_{ti}) and base (M_{bi}) of the layer.

For a layer with constant E, the relative settlement across the layer is:

$$\delta_{zi} = \frac{(M_{ti} - M_{bi})}{E_{ti}}$$

Where E is assumed to vary linearly with depth, the approximation that M also varies linearly is made:

$$\delta_{zi} = \int_{z_{ti}}^{z_{bi}} \frac{(M_{ti} - M_{bi})}{(E_{bi} - E_{ti})} \ln \left(\frac{E_{bi}}{E_{ti}} \right) dz$$

where:

E_t = Young's modulus at top of layer

E_b = Young's modulus at base of layer

z = Level

2.3.4.2 Horizontal Displacements

There are three options available to calculate the stiffness of soil for calculating horizontal displacements

- use weighted average
- use greatest stiffness
- use stiffness at displacement point

Displacements "behind" horizontal loads are calculated assuming elastic soil behind the load.

Use Weighted Average

In this method, the average stiffness is calculated between the centroid of load and the displacement point at which the horizontal displacement is required.

A line connecting the load and the displacement point is considered for the calculation of horizontal displacements. This line can pass through different layers of different soil profiles associated with different zones. Each layer has its own Young's modulus and Poisson's ratio. The average Young's modulus and shear modulus are calculated by considering a weighting based on the length of the line passing through each of the layers. The Poisson's ratio to be used is then derived from the ratio of average Young's modulus to average shear modulus.

Let the required Young's modulus and Poisson's ratio be E^* and ν^* .

The "average" $E = E^* = \Sigma \{E_i L_i\} / \Sigma L_i$

The "average" $G = G^* = \Sigma \{G_i L_i\} / \Sigma L_i$

and $G^* = E^* / (2(1 + \nu^*))$. So $\nu^* = E^* / (2G^*) - 1$.

Where E varies with depth within a stratum, the average within the stratum is calculated by

integration.

Use Greatest Stiffness


In this method, Pdisp takes the maximum Young's modulus that occurs along the line connecting the load and the displacement point. The Poisson's ratio is set to that of the stratum where the greatest E is found.

Use Stiffness at Displacement Point

This method should be used with caution.

In this method the stiffness at the displacement point is used for calculating horizontal displacements. The soil properties between the load and the displacement points are disregarded.

The horizontal displacements are calculated through soil zones. The properties of soil material for calculating horizontal displacements are taken by its Z co-ordinate. If a point lies in a soil strata with different top and bottom Young's modulus, the value at the point is linearly interpolated. Intermediate points within the zone for calculating the horizontal displacement are taken in the direction of the load.

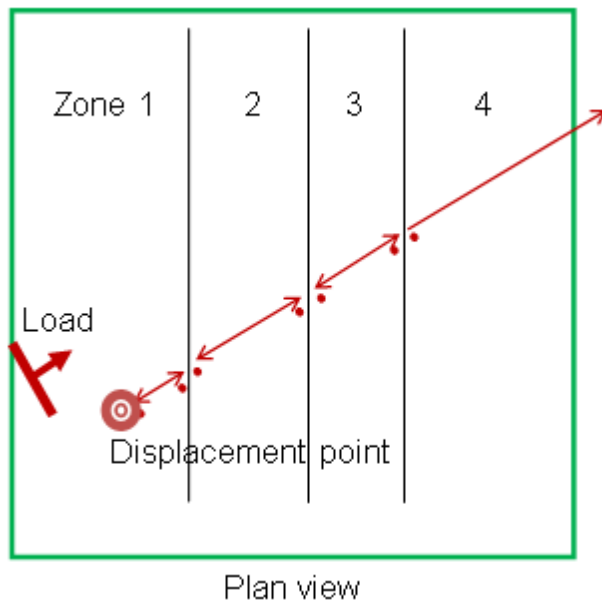

2.3.5 Accuracy of the Mindlin Solution

The Mindlin solution is exact if the elastic properties are constant with depth. The solution for an individual layer with constant elastic properties is also exact. The solution for vertical loading is a good approximation provided stiffness does not decrease significantly with depth. For horizontal loading the accuracy of each of the methods offered by the program is problem-dependent and should be considered by the user.

Sub-layers are therefore only required if the value of stiffness varies within a layer.


The default ratio for the maximum variation of Young's modulus within the sub-layer is 1.5. This provides sufficient accuracy for most purposes.

2.4 1D Compression

Pdisp assumes the Boussinesq stress distributions.

For the purpose of this note uniform pressure loading of a circular area is considered, concentrating on a point at the ground surface and at the centre of the load. Also, Poulos and Davies Eq 3.13a and 3.13b are used.

In 1D compression, the ratio of the horizontal to vertical stress change is $\nu/(1-\nu)$. In Boussinesq it is $(1+2\nu)/2$, which is larger than in the 1D case. The reason for this larger horizontal stress increase is that the load is not transferred vertically, but spreads into the ground:

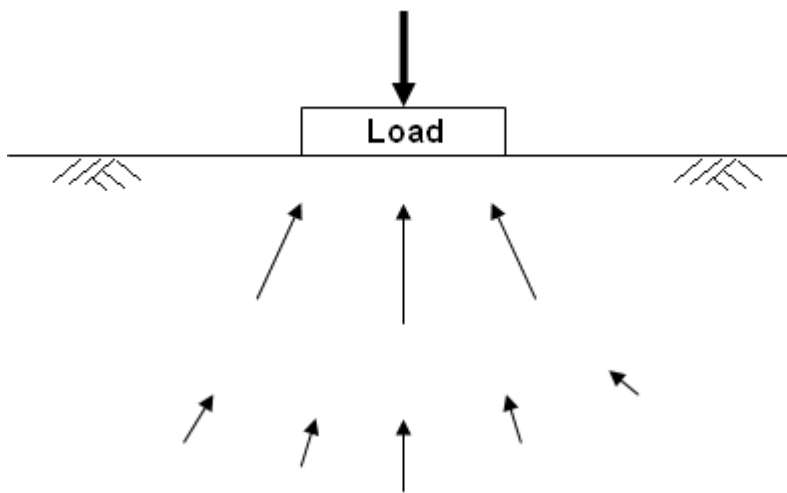


The process of spreading implies a horizontal component of stress which converges on the loaded area, increasing the horizontal stress by more than $\nu/(1-\nu)$. The larger increase of horizontal stress leads to a smaller vertical strain. The ratio of vertical strains (1D – Boussinesq) / 1D is equal to ν .

The Boussinesq stress distribution is strictly only correct for loading on the surface of a homogeneous isotropic infinite half-space. It may be thought that by loading a very large area, 1D compression would apply at the ground surface and at the centre of the load. But no matter how large the loaded area, it is small compared with the “infinite” half space of the theory, so the effect on horizontal stress still applies.

In reality, the stress distribution is changed by the non-homogeneity of the ground, a generally increasing stiffness with depth. This has proportionately more effect on horizontal than on vertical stress, although the horizontal stresses have proportionately less effect on vertical strain and settlement.

The fundamental assumption and approximation of **Pdisp** is that it uses the Boussinesq stress distribution irrespective of non-homogeneity, and even of the rigid boundary at the base. (In this respect, the Mindlin approach is no different.) This approximation is reasonably good in most cases, but its inaccuracy may vary from case to case.

The graph below shows the settlement computed for a 4.1m thick layer with Young's modulus 2500kPa, located beneath the centre of a large area loaded to 100kPa. The computed settlements are shown for various values of Poisson's ratio.

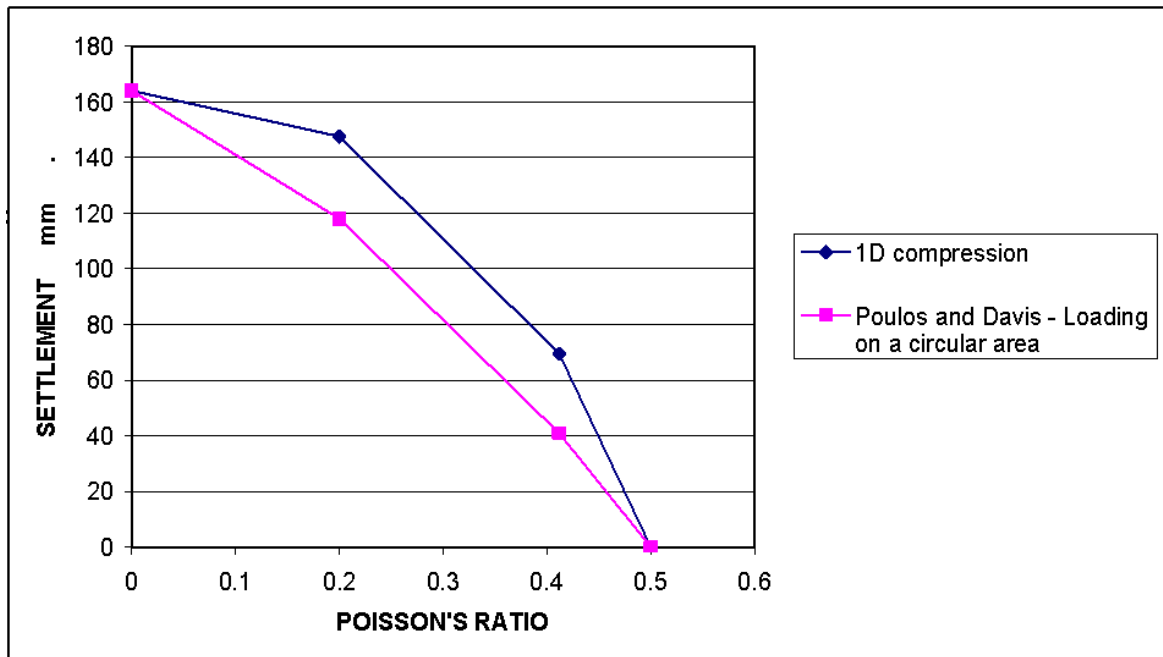

Users should be aware of this feature so that they can decide whether the error involved is of concern. Finite element analysis by programs such as Oasys Safe may provide a better general solution in cases where inaccuracy is high. Analytical solutions for special cases might be found, for example in Poulos & Davis.

2.5 Consolidation

Pdisp performs 1D consolidation calculations using the numerical approach. The Crank-Nicholson finite difference method, which is implicit in time, is used to calculate the pore pressures.

2.5.1 Pore Pressures

The differential equation of consolidation is given by

$$\frac{\partial u}{\partial t} = c_v \frac{\partial^2 u}{\partial z^2}$$


where,

c_v - is the coefficient of consolidation

u - is the excess pore water pressure

t - is the time
 z - is the depth

The finite difference approach used to solve this equation is based on a depth-time grid, where the y-axis represents the depth and the x-axis represents the time step. Each point on the grid is a representative of the excess pore water pressure at a particular depth and at a particular time step.

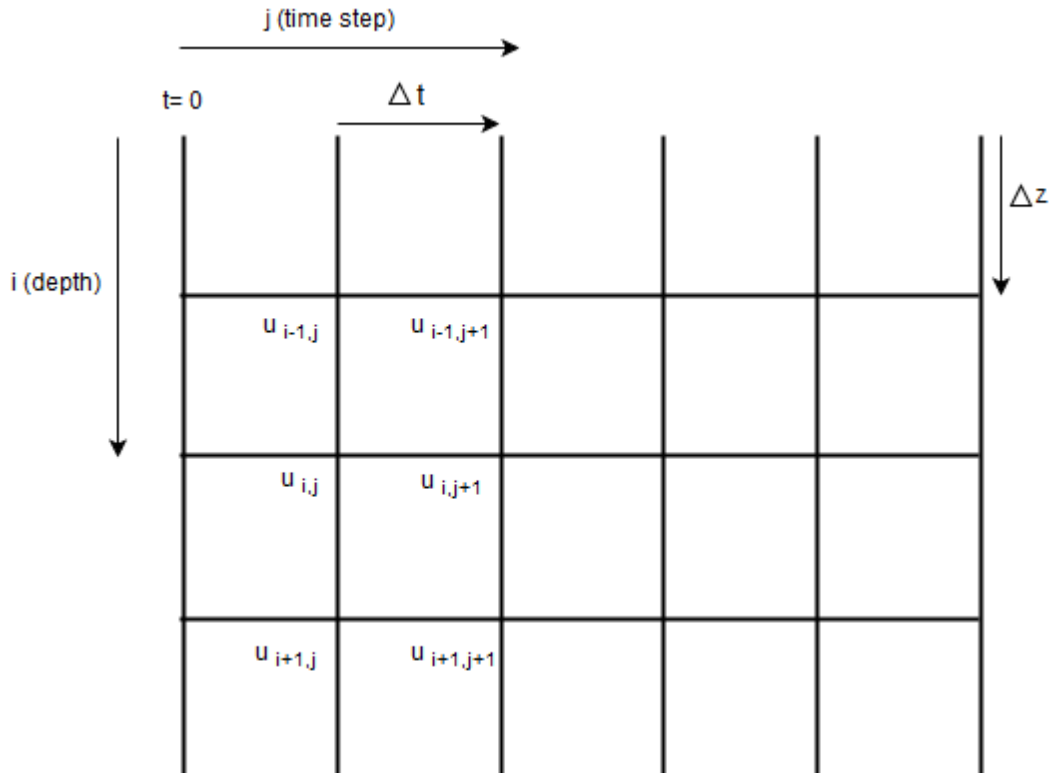

where,

$u_{i,j}$ - is the excess pore water pressure at i^{th} depth position and j^{th} time step

Crank-Nicholson Method

In this method, the differential equation for consolidation is solved by substituting the forward difference at time 't' for $\partial u / \partial t$ and the second central difference for $\partial^2 u / \partial z^2$. However, the second central difference is taken as the average value of the central differences at the $(i,j)^{\text{th}}$ and $(i,j+1)^{\text{th}}$ levels.

After re-arranging the terms in the resulting equation, the generic equation for the Crank-Nicholson method at any grid point is given by

$$-u_{i-1,j+1} + \frac{2(1+r)}{r} u_{i,j+1} - u_{i+1,j+1} = u_{i-1,j} + \frac{2(1-r)}{r} u_{i,j} + u_{i+1,j}$$

where,

$$r = \frac{C_v \Delta t}{\Delta z^2}$$

where,

z - is the distance between i^{th} and $(i+1)^{\text{th}}$ level

t - is the time step

Note: It is recommended that the condition $1/3 < r < 2$ is satisfied (Abid and Pyrah) for each stratum of a profile either by altering the number of intermediate displacement levels of a stratum or the time step. Otherwise it may lead to discretisation errors and numerical disturbances.

The above equation is applied at all grid points to get a system of linear equations, which takes the form

$$[A][u] = [C]$$

where,

A - is the coefficient matrix, which is tridiagonal in nature

u - is the excess pore pressure matrix

C - is the constant matrix


In the equation above, the coefficient and constant matrices are known, so the 'u' matrix is calculated as

$$[u] = [A]^{-1}[C]$$

This procedure is repeated at every time step to get the values of 'u' at all grid points.


2.5.1.1 Boundary Conditions

1) The phreatic surface in an undrained material is assumed to be freely draining and hence the excess pore pressure there is assumed to be zero.

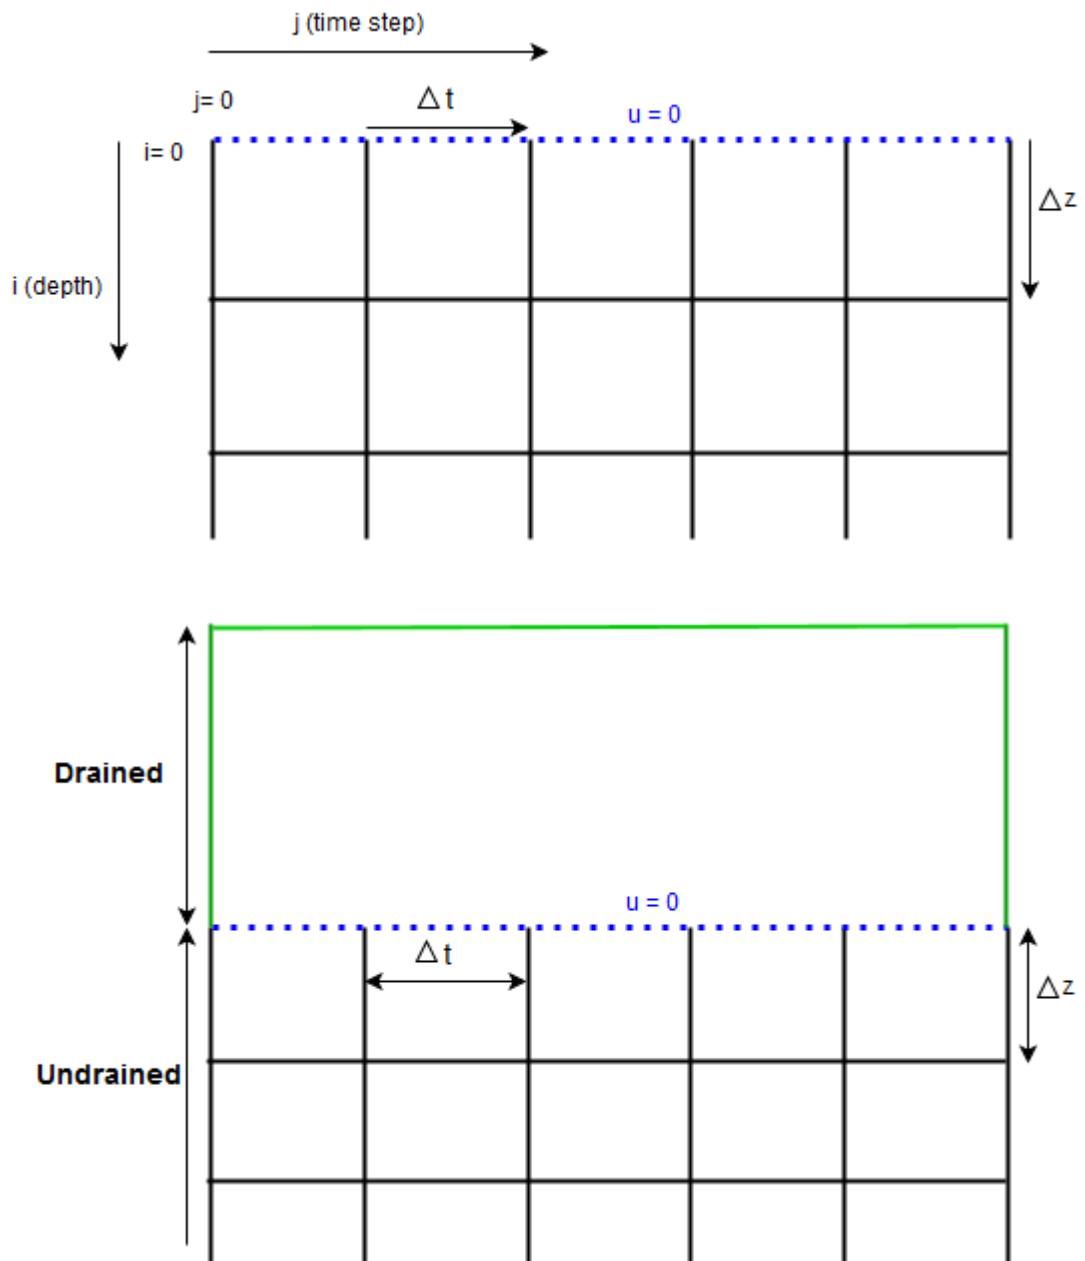


2) The initial excess pore pressure at a point for time step $t = 0$ is equal to the vertical effective stress at the point obtained through elastic calculations.


$$u_0 = \sigma_v$$

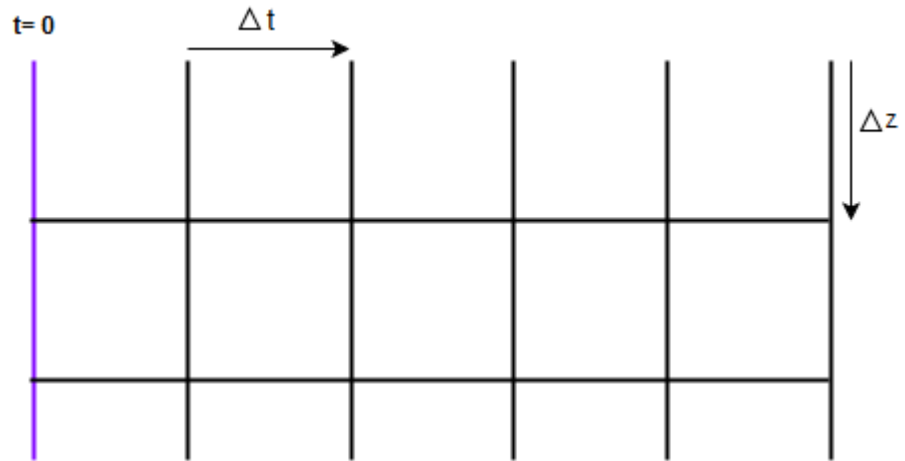


3) If the Rigid Boundary Level is permeable, then the pore pressure values for it are assumed to be zero.

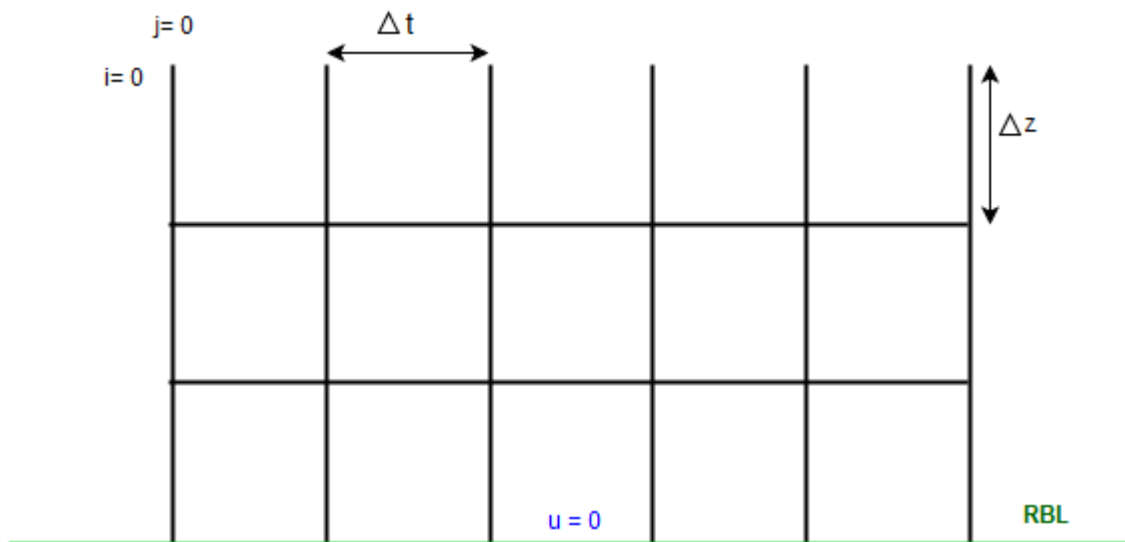

4) If the Rigid Boundary Level is impermeable, then imaginary nodes are assumed on the other side of the boundary, which are reflections of the immediate nodes on the top of the boundary. Thus, $u_{i-1,j} = u_{i+1,j}$ and $u_{i-1,j+1} = u_{i+1,j+1}$. These values are substituted in the generic equation for the boundary.

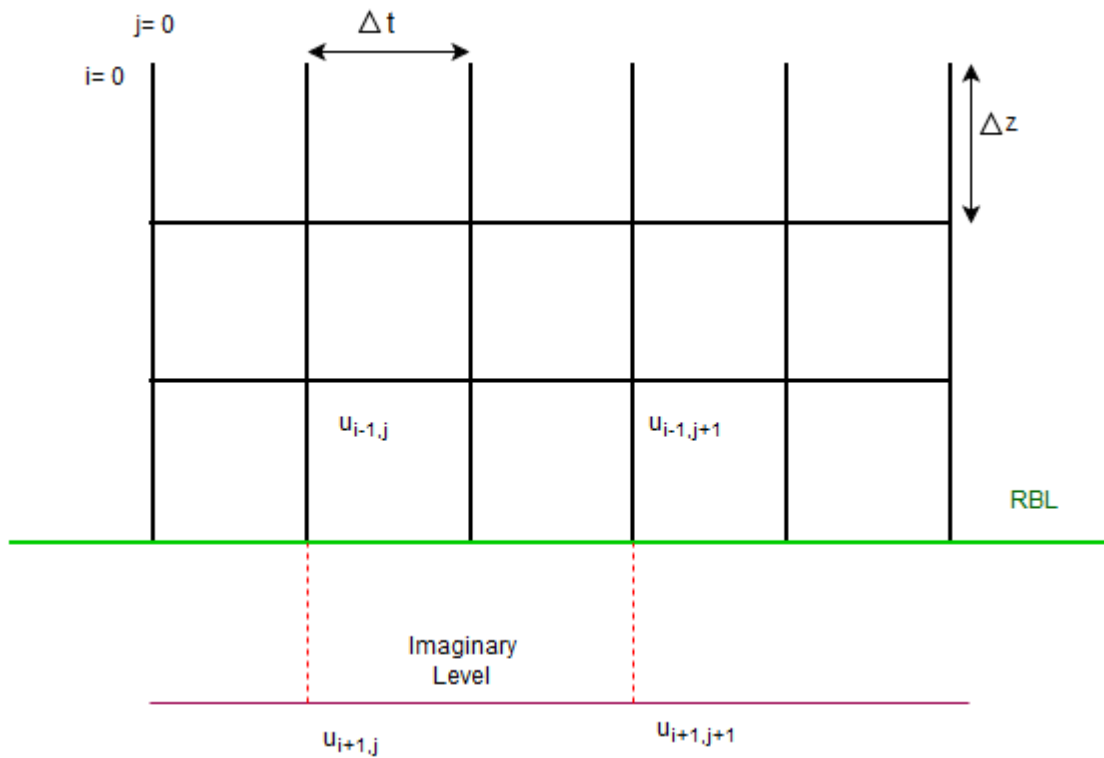

2.5.2 Layered System

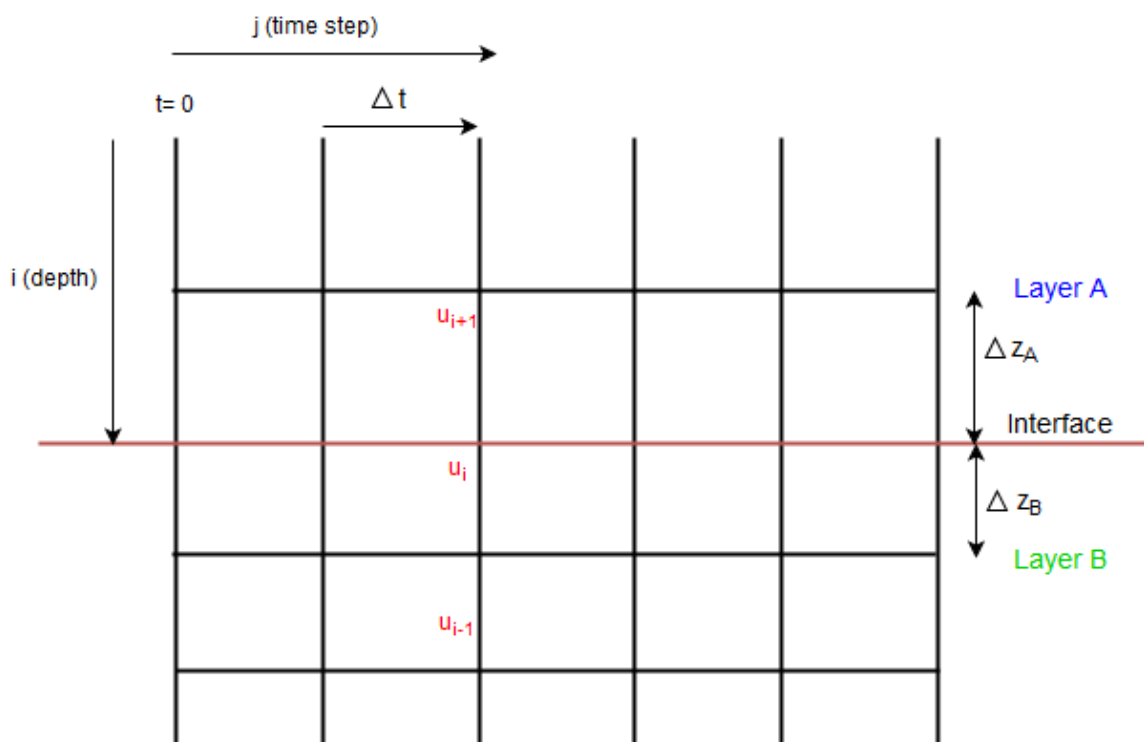

For a layered system, the pore pressure for an interface node is obtained by applying the continuity

equation for flow across the interface. The final equation is shown below.

$$-u_{i-1,j+1} + \lambda_1 u_{i,j+1} - \beta u_{i+1,j+1} = u_{i-1,j} + \lambda_2 u_{i,j} + \beta u_{i+1,j}$$

where,

$$\lambda_1 = \frac{1}{2}(\varphi_{LA} + \beta\varphi_{LB})$$

$$\lambda_2 = \frac{1}{2}(\varphi_{RA} + \beta\varphi_{RB})$$

where,

$$\varphi_{LA} = \frac{2(1+r_A)}{r_A}$$

$$\varphi_{LB} = \frac{2(1+r_B)}{r_B}$$

$$\varphi_{RA} = \frac{2(1-r_A)}{r_A}$$

$$\varphi_{RB} = \frac{2(1-r_B)}{r_B}$$

$$r_A = \frac{C_{VA} * \Delta t}{\Delta z_A^2}$$

$$r_B = \frac{C_{VB} * \Delta t}{\Delta z_B^2}$$

$$\beta = \frac{k_B \Delta z_A}{k_A \Delta z_B}$$

The user can input either k or C_v for a layer. Based on the value input and the consolidation method selected. The following relations are used to get C_v from k or vice versa.

m_v method:

$$k = m_v \gamma_w C_v$$

C_c method:

$$k = \frac{C_c * 0.434 * \gamma_w * C_v}{(1 + e_0) * \sigma'}$$

Where,

γ_w - is the unit weight of water

σ' - is the effective stress

C_c - is the compression index of the soil

2.5.3 Degree of Consolidation

Degree of Consolidation

The pore pressures that are obtained are used to calculate the degree of consolidation (U) for each time step.

$$U = 1 - \frac{\int u \, dz}{\int u_i \, dz}$$

where,

u_i - is the initial excess pore pressure

u - is the excess pore pressure at the time step under consolidation

2.5.4 Settlement

Two components of consolidation are calculated.

- Primary
- Secondary

2.5.4.1 Primary Consolidation

Two methods are used for the calculation of primary consolidation

1) m_v method

2) C_c method

2.5.4.1.1 mv method

This is a linear approach.

The primary consolidation at any node in an undrained layer is given by:

$$\text{primary consolidation} = m_v * '_{v\text{-avg}} * H$$

where,


m_v - is the coefficient of compressibility of the layer

H - is the distance between the i^{th} and $(i+1)^{\text{th}}$ levels

$'_{v\text{-avg}}$ - is the average of vertical effective stress at the i^{th} and $(i+1)^{\text{th}}$ levels

Example

Let 't' be the time step at which settlement is to be calculated at node '3' shown in the image below

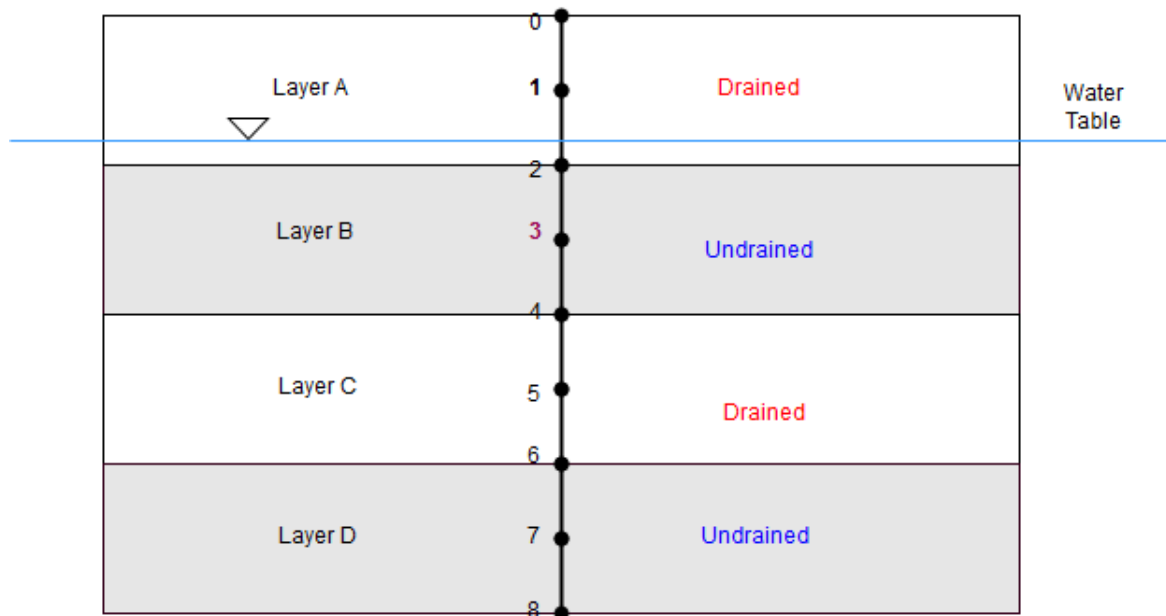

The primary consolidation at node 3 at a time step 't' is given by the sum of following

1. Primary Consolidation of 7-8
2. Primary Consolidation of 6-7
3. Primary Consolidation of 3-4

If the element is in a layer that is undrained and submerged, then primary consolidation at time step 't' is given by

$$\text{settlement} = U_t * (m_v * \sigma'_{v\text{-avg}} * H)$$

where,

U_t - is the degree of consolidation at that time step of that undrained submerged layer

m_v - is the coefficient of compressibility of the layer

H - is the distance between the i^{th} and $(i+1)^{\text{th}}$ levels

$\sigma'_{v\text{-avg}}$ - is the average of vertical effective stress at the i^{th} and $(i+1)^{\text{th}}$ levels

Applying this to the example under consideration,

- Primary Consolidation of 7-8 = $U_{t\text{-layerD}} * (m_{v\text{-layerD}} * \sigma'_{v\text{-avg7-8}} * H)$
- Primary Consolidation of 6-7 = $U_{t\text{-layerD}} * (m_{v\text{-layerD}} * \sigma'_{v\text{-avg6-7}} * H)$
- Primary Consolidation of 3-4 = $U_{t\text{-layerB}} * (m_{v\text{-layerB}} * \sigma'_{v\text{-avg3-4}} * H)$

Hence, total primary consolidation at 3 at a time step 't'

$$= U_{t\text{-layerD}} * (m_{v\text{-layerD}} * \sigma'_{v\text{-avg7-8}} * H) + U_{t\text{-layerD}} * (m_{v\text{-layerD}} * \sigma'_{v\text{-avg6-7}} * H) + U_{t\text{-layerB}} * (m_{v\text{-layerB}} * \sigma'_{v\text{-avg3-4}} * H)$$

Total settlement at 3 at a time step 't' is given by

Total Settlement = Immediate settlement at '3' calculated using the elastic method (Mindlin/Boussinesq) selected for the model + Total primary consolidation at '3' (explained above)

2.5.4.1.2 Cc method

This is a non-linear approach.

The relationship between vertical strain and void ratio is given as:

$$\frac{\Delta H}{H_0} = \frac{\Delta e}{1 + e_0}$$

where ΔH is the change in height of the layer and is the primary settlement s_c . Hence the primary consolidation is given as:

$$s_c = H_0 \frac{\Delta e}{1 + e_0}$$

where,

H - is the change in height of the layer


H_0 - is the original thickness of soil layer

e - is the change in the void ratio between time 't' and initial condition

e_0 - is the Initial or in situ void ratio

Overconsolidated Soils

If the vertical effective stress at an instance is less than the preconsolidated stress (σ'_p), then the soil is said to be overconsolidated.

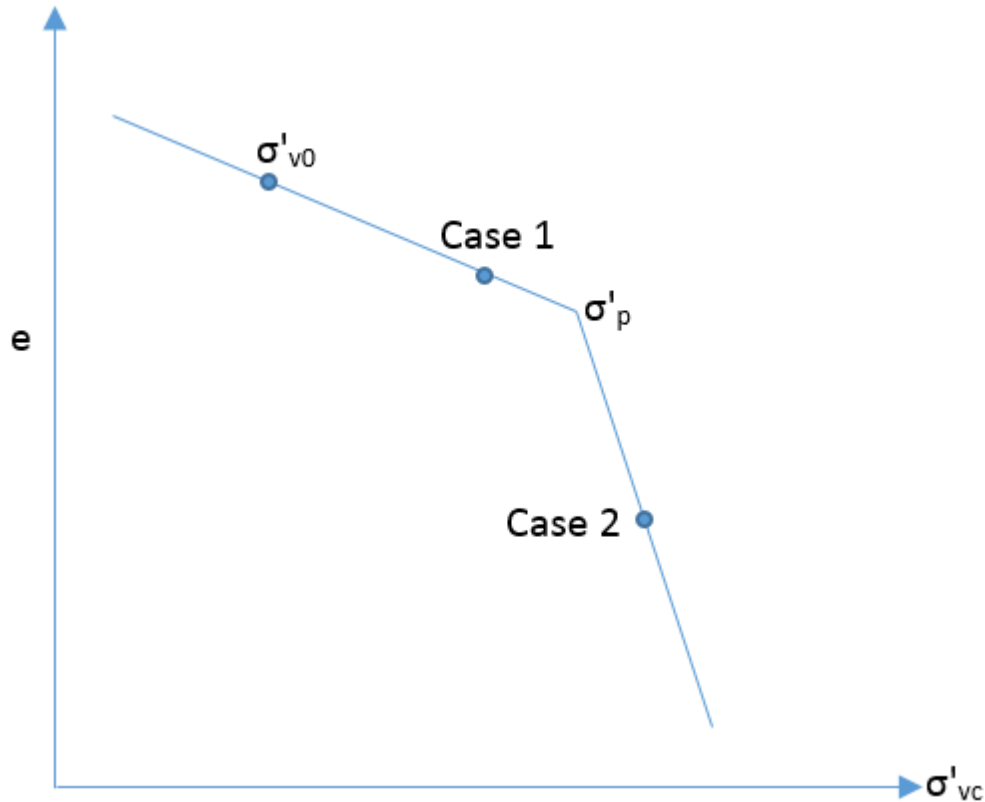

Consider the void ratio vs vertical effective stress plot above. Two cases arise:-

Case 1:

If the vertical effective stress after the application of load is less than the preconsolidated stress, then the change in void ratio is given by:

$$\Delta e = C_r \log \frac{\sigma'v_0 + \Delta\sigma_v}{\sigma'v_0}$$

Case 2:

If the vertical effective stress after the application of load is greater than the preconsolidated stress then the change in void ratio is given by:

$$\Delta e = C_r \log \frac{\sigma'_p}{\sigma'_v} + C_c \log \frac{\sigma'_p + \Delta \sigma_v}{\sigma'_p}$$

where,

C_c - is the compression index of the soil

C_r - is the recompression index of the soil

σ'_p - is the preconsolidation stress or maximum past vertical effective stress

σ'_v - is the vertical (effective) overburden stress

σ_v - is the applied stress

Normally Consolidated Soils:

The change in void ratio for normally consolidated soils is given by:

$$\Delta e = C_c \log \frac{\sigma'_v + \Delta \sigma_v}{\sigma'_v}$$

In PDisp, normally consolidated soils can be modelled by entering Pre-consolidation margin as 0 or OCR as 1.

As for m_v method primary consolidation is calculated only for layers that are undrained and submerged.

Total settlement (at time step t) = Immediate settlement calculated using the elastic method (Mindlin/Boussinesq) selected for the model + Total primary consolidation (at time step t)

2.5.4.2 Secondary Compression

PDisp assumes that secondary compression happens after 95% of consolidation. Hence, it is calculated for time steps at which the degree of consolidation is more than 95%. i.e. $t > t_p$.

Secondary compression is calculated as

$$s_s = \frac{C_\alpha}{1 + e_0} H_0 \log \frac{t}{t_p}$$

where,

C_α - is the secondary compression index of the soil

e_0 - is the initial or in situ void ratio

H_0 - is the original thickness of soil layer

t_p - is the time taken to achieve 95% consolidation.

t - is the time at the current time step.

If the m_v method is chosen, then input of C_e is required instead of C and e_0 .

$$C_{\alpha s} = \frac{C_{\alpha}}{1 + e_0}$$

The secondary settlement is then calculated as:

$$s_s = C_{\alpha s} H_0 \log \frac{t}{t_p}$$

where,

C_e - is the modified secondary compression index of the soil

When the degree of primary consolidation reaches 95%, secondary compression is calculated and added to the total settlement.

3 Input Data

3.1 General

The following provides details of all the information required to run the **Pdisp** program.

On selection of the **Pdisp** program the main screen will open.

The "Welcome to Pdisp screen" will pop up next, if it is enabled by the user in the Preferences dialog. This allows the user to either create a new data file, to open an existing file, or to select a file from a list of recently used files.

If the startup dialog on the program menu is disabled, the user can create a new project file via:

- File | New menu button or
- the new file icon in the Standard Toolbar.

This will open a new "Titles" window and allows the user to proceed.

The **About** button allows the user to view the program details, whereas the **Home Page** button opens the Pdisp home page in a browser.

3.2 Preferences

This dialog can be accessed by clicking Tools | Preferences. Preferences can be set whether a file is opened or not.

The Preferences dialog is accessible by choosing Tools | Preferences from the program's menu. It allows user to modify settings such as numeric format for output, show welcome screen, option for new model wizard, print parameters and company information. These choices are stored in the computer's registry and are therefore associated with the program rather than the data file. All data files will adopt the same choices.

Numeric Format controls the output of numerical data in the Text Output. The Text Output presents input data and results in a variety of numeric formats, the format being selected to suit the data. Engineering, Decimal, and Scientific formats are supported. The numbers of significant figures or decimal places, and the smallest value distinguished from zero, may be set by the user.

Restore Defaults resets the Numeric Format specifications to program defaults.

A time interval may be set to save data files automatically. Automatic saving can be disabled if required by clearing the "**Save file..**" check box.

Show Welcome Screen enables or disables the display of the Welcome Screen. The Welcome Screen will appear on program start-up, and give the option for the user to create a new file, to open an existing file by browsing, or to open a recently used file.

Company Info allows the user to change the company name and logo on the top of each page of print out. To add a bitmap enter the full path of the file. The bitmap will appear fitted into a space approximately 4cm by 1cm. The aspect ratio will be maintained. For internal Arup versions of the program the bitmap option is not available.

Page Setup Opens the Page Setup dialog allowing the style of output for printed text and graphics to be selected.

If 'Calculation Sheet Layout' is selected the page is formatted as a calculation sheet with details inserted in the page header.

If 'Logo' is selected the company logo is inserted in the top left corner of the page.

If 'Border' is selected this gives a border but no header information.

If 'Clipped' is selected the output is clipped leaving a space for the logo. This has no effect on text output.

3.3 Data Input

All data is input via options on the program's Data menu, or via the Gateway.

The information can be entered in any order. The exception is that Soil Profiles must be entered before Soil Zones. Once the data has been entered the program places a tick against that item in the menu list.

Graphical Input allows the areas for rectangular or circular load data, soil zones and displacement data to be drawn rather than entered as tabular input.

The Graphic Settings option displays a dialog that controls the format and content of 3D Graphics View.

Pile-soil interaction related information can be entered only if the "GSA raft analysis data" option is selected in the Analysis Options.

3.3.1 Titles

The first window to appear, for entry of data into **Pdisp**, is the **Titles** window.

This window allows entry of identification data for each program file. The following fields are available:


Job Number	allows entry of an identifying job number
Initials	for entry of the user's initials
Date	this field is set by the program at the date the file is saved
Job Title	allows a single line for entry of the job title
Subtitle	allows a single line of additional job or calculation information
Calculation Heading	allows a single line for the main calculation heading

The titles are reproduced in the title block at the head of all printed information for the calculations. The fields should therefore be used to provide as many details as possible to identify the individual calculation runs.

An additional field for **notes** has also been included to allow the entry of a detailed description of the calculation. This can be reproduced at the start of the data output by selection of notes using File | Print Selection.

3.3.1.1 Titles window - Bitmaps

The box to the left of the Titles window can be used to display a picture beside the file titles.

To add a picture place an image on to the clipboard. This must be in a RGB (Red / Green / Blue) Bitmap format. Select the  Paste button to place the image in the box.

The image is purely for use as a prompt on the screen and can not be copied into the output data. Care should be taken not to copy large bitmaps, which can dramatically increase the size of the file.

To remove a bitmap select the  Remove button.

3.3.2 Units

The Units dialog is accessible via the Gateway, or by choosing Data | Units from the program's menu. It allows the user to specify the units for entering the data and reporting the results of the calculations. These choices are stored in, and therefore associated with, the data file.

Default options are the Système Internationale (SI) units - kN and m. The drop down menus provide alternative units with their respective conversion factors to metric.

Standard sets of units may be set by selecting any of the buttons: SI, kN-m, kip-ft kip-in.

Once the correct units have been selected then click 'OK' to continue.

SI units have been used as the default standard throughout this document.

3.3.3 Analysis Options

The following data is entered to define the outline of the problem and the type of analysis to be carried out.

- **General tab** - for general model parameters that are relevant to both elastic and consolidation calculations
- **Elastic tab** - for general model parameters that are relevant to only elastic calculations
- **Consolidation tab** - for general model parameters that are relevant to only consolidation calculations

3.3.3.1 General

- **Global Poisson's Ratio** for calculation of stresses (Boussinesq solution only)

See also Global Poisson's ratio.

- **Maximum Allowable Ratio (Ra)** between values of Young's modulus (E) at adjacent displacement levels. The default value is 1.5.

See also Young's modulus (E).

- **An equivalent rigid boundary level** i.e. the solution boundary or base of the lowest soil layer.
- **GSA raft analysis data** enables the input of pile-soil interaction properties and pile-soil interaction coefficients. The pile-soil interaction data is not used in Pdisp's analyses and so does not affect its results. These data are included for export to Oasys GSA in order for GSA to perform raft analysis.
- **Displacements at load centroids** reports the displacements and stress/strain results at the centre of the specified loaded areas. This is in addition to the locations specified by Displacement Data.

3.3.3.2 Elastic

- **Elastic** enables the elastic calculations
- **Analysis Method**

Boussinesq

This method calculates vertical displacements only. It is applicable for settlements and stresses resulting from vertical loads on horizontal planes. If other loads are specified, these will be ignored by the analysis. For further details see the Boussinesq Analysis Method.

Mindlin

The **Legacy** method represents the Mindlin method of Vdisp versions 18.2 and earlier. If

the **Legacy Mindlin** checkbox is unchecked, then the most recently implemented Mindlin method, of Pdisp versions 19.0 and later, will be invoked. See Mindlin and the Legacy Mindlin Method for a comparison of these methods.

Elastic analysis above loads reduces, with height, the settlement above loads which are applied below ground level. It may only be switched off in the Legacy Mindlin solution, see Mindlin and the Legacy Mindlin Method.

If horizontal displacements are not required, then **Calculate horizontal displacements** should be un-checked. This will speed up the calculations. This option is not applicable for the Legacy Mindlin and Boussinesq methods since they do not predict horizontal displacements.

- **Stiffness for horizontal displacement calculations**

- Use weighted average**

- In this method, the average Young's modulus and Poisson's ratio are calculated between the centroid of each load and the displacement point at which the horizontal displacement is required. For further details see Horizontal displacements.

- Use greatest stiffness**

- In this method, the maximum Young's modulus that occurs between the centroid of each load and the displacement point is used for the calculations. The Poisson's ratio is set to that of the stratum where the greatest E is found. For further details see Horizontal displacements.

- Use stiffness at displacement point**

- In this method, the stiffness at the displacement point is used for calculating horizontal displacements. The soil properties between the load and the displacement points are disregarded. This method should be used with caution. For further details see the Horizontal displacements.

- **Heave correction factor**

When calculating the displacements above the load, especially when there are softer soils over stiffer soils, correction factors are applied to the calculations to prevent excessive displacements in the softer soil layers. There are two options to choose from - the older version of correction factor that was used in the legacy Mindlin solution, or the new correction factor which is believed to be more accurate. By default, the newer option is used. However, if the user decides to use the Legacy correction factor, he should select the corresponding check box. See also Settlement above the load.

- **Effect of soil above load**

When calculating the displacements below the load acting on horizontal plane, the user has the option to ignore the effect of soil above the load in calculations - both for normal and tangential loads. See also Mindlin and Legacy Mindlin methods and Settlement below the load.r topic text here.

3.3.3.3 Consolidation

- **Consolidation** enables the consolidation calculations
- **Time Period** over which the consolidation calculations are to be performed.
- **Time Step** i.e. the interval at which the consolidation calculations are to be performed and their results reported.
- **Impermeable Rigid Boundary** - the boundary condition for the calculation of excess pore water pressure.
- **k/C_v** input permeability or coefficient of consolidation

The ground water profile is hydrostatic.

- **Level** of the water table
- **Pressure** at the phreatic surface
- **Unit weight** of water

3.3.4 Soil Profiles

The **soil profiles** window allows the ground conditions to be entered. These are modelled as a series of ground profiles. The profiles are entered in tabular form.

Soil profiles are vertical columns through the ground which are separated into levels of strata. A new table is created for each soil profile. Each new profile is created by selecting the next tab along the top of the table.

Layers must be entered in order of decreasing level.

The lateral extent of each soil profile is specified later as a soil zone.

Each soil profile requires the following data to be entered:

- name of stratum
- level at top of each stratum
- number of intermediate displacement levels
- Young's modulus
- Poisson's ratio

If the consolidation option has been selected, then the following additional data items need to be entered:

- Method : m_v/C_c /None
If m_v is selected
 - m_v - coefficient of volume compressibility

- C - modified secondary compression index

If C_c is selected

- e₀ - initial void ratio
- C_c - compression index
- C_r - Recompression index
- Overcons. Calc. Type :
 - Pre-consolidation pressure
 - Over-consolidation Ratio (OCR)
 - Pre-consolidation margin
- C - secondary compression index

If None is selected then the layer undergoes no consolidation

- C_v - coefficient of consolidation.
- k - coefficient of permeability

Default values for the above can be set by clicking on the grey **default** boxes at the top of each column and entering a value. These values are then adopted for new layers unless reset.

The **Colour** field indicates the colour of the stratum of the profile when displayed in the 3D Graphical Output. The program will assign a default colour when creating a record if all other fields in the record are valid. The colour can be changed by left-clicking the cell.

The column for identifying non-linear curves to individual layers of strata is only added to the table for soil profiles once a non-linear curve has been defined. See section for Non-linear Materials.

The **pile-soil interaction property** column is only available if GSA raft analysis data has been enabled in the Analysis Options. It allows the selection of a pile-soil interaction property to be associated with each layer of a soil profile. The pile-soil interaction data is not used in PDisp's analyses and so does not affect its results. These data are included for export to Oasys GSA in order for GSA to perform raft analysis. For further details see Pile-soil interaction using GsRaft.

3.3.4.1 Displacement Levels

Displacement levels sub-divide each layer of soil into a number of sub-layers. For example the specification of two intermediate displacement levels will divide the layer of soil into three sub-layers.

This process also defines the number of stress calculation points, with depth, for the Boussinesq solution. The stresses are calculated at the centre of each sub-layer.


The lateral location of each calculation point is defined by the use of displacement grids, see Displacement Data.

3.3.4.2 Number of Displacement Levels

The number of displacement levels calculated is determined as the larger of:

- a user-specified number (N) given for each soil layer

- an automatically generated number (n) taken from the Maximum Allowable Ratio (R_a) between values of Young's modulus (E), see Young's modulus (E).

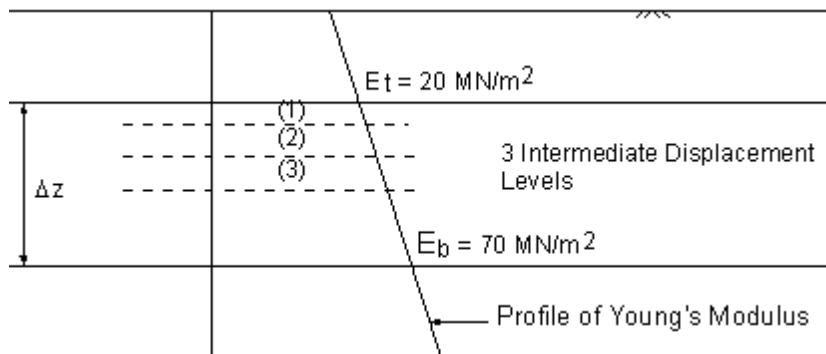

The value of n is calculated by

$$n = \frac{\log\left(\frac{E_b}{E_t}\right)}{\log R_a}$$

So, for the example illustrated above, if $R_a = 1.5$

then


$$n = \frac{\log\left(\frac{70}{20}\right)}{\log 1.5} = 3.089 \Rightarrow 3$$

The value of n is always taken as the next lowest integer.

The value of $R_a = 1.5$ is normally sufficiently accurate for most problems.

3.3.4.3 Location of Displacement Levels

If Young's modulus (E) is constant with depth then the displacement levels will be evenly spaced. If E increases with depth then the sub-layers are bunched around the lowest values of E in the following way:

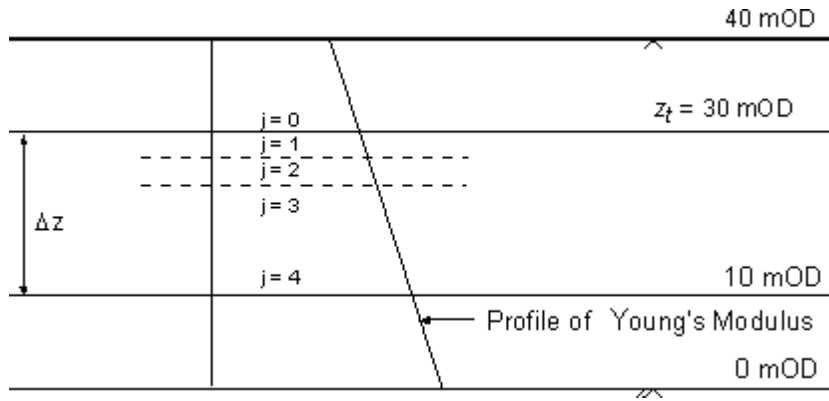

z_t = level of top of strata layer

Δz = thickness of strata layer

j = number of sub-layer (as shown above)

l = level of sub-layer

$n = n$ or N (See Number of Displacement Levels).

$$R = \left(\frac{E_b}{E_t} \right)^{\frac{1}{n}} \text{ e.g. } R = \left(\frac{70}{20} \right)^{\frac{1}{3}} = 1.518$$

where:

$$l = z_t - \Delta z \left(\frac{E_t R_j - E_t}{E_t R^{n+1} - E_t} \right)$$

$$\text{e.g. } l = 30 - 20 \left(\frac{20 \times 1.518^2 - 20}{20 \times 1.518^{3+1} - 20} \right) = 23.95\text{m}$$

For consolidation calculations, a displacement level is added at the water level if it does not coincide with the existing levels.

3.3.4.4 Young's Modulus (E)

The Young's modulus for the soil can be entered as a constant value or varying linearly with depth. Values are required for the top and base of each stratum layer.

For soils in which the Young's modulus (E) varies linearly with depth, additional sub-layers can be generated automatically by specifying the Maximum Allowable Ratio (R_a) of Young's modulus between adjacent stress evaluation points. This ratio controls the maximum variation of E within each sub-layer.

The **Maximum Allowable Ratio** (R_a) between values of E at adjacent displacement levels is

$$\frac{E_b}{E_t} = R_a$$

where:

E_t = Young's modulus at the top of the stratum

E_b = Young's modulus at the base of the stratum

The minimum value of R_a is 1.0. The default value of R_a is 1.5. This is normally sufficiently accurate for most general models. See also Number of Displacement Levels.

3.3.5 Load Data

The following types of loads can be input.

- **Rectangular**
- **Circular**
- **Polygonal**

3.3.5.1 Rectangular

If the Mindlin analysis method is chosen then rectangular loads may be applied vertically and/or horizontally on horizontal and vertical planes (i.e. in both the normal and horizontal directions).

If the Boussinesq analysis method is chosen then loads may be applied only vertically on horizontal planes (i.e. in the normal direction).

Loads can be superimposed and placed at any level. All loads are completely flexible - no allowance is made for stiffness of the structures.

Note : The loaded areas can be entered in tabular form (as described below). Horizontal planes with vertical rectangular loads, without any rotation can be entered in graphical form. For information on entry of graphical data see Graphical Input.

Specification of the load in the table view. Much is context sensitive so its accessibility depends on the load shape and orientation of the loaded plane


Orientation can be either horizontal or vertical.

Centre of load is the centre-point of the load for defining its plane entered in global co-ordinates.


Angle of local x w.r.t. global X orientates the local axis. The plane can be rotated (in plan) by an angle. The base point for the rotation is the centre of the load. The figures below illustrate the local axis in relation to the global axis. Although the shape then remains the same, and normal loads are unaffected, the directions of tangential loads will be affected. The angle of local x w.r.t. global X is zero for loads parallel to the Cartesian co-ordinate system. Positive angles are counter-clockwise.

Width and Depth of a rectangular load are measured in the local x and local y directions respectively.

Load value specifies the load intensity to be applied to the plane. Depending on the analysis methods, loads can be either normal or tangential to the loading plane. Tangential loads are specified with respect to the local axis of the loaded plane (i.e. "tangential x" and "tangential y"). Normal loads on horizontal planes are applied vertically downwards. The direction of normal loads on vertical planes depends on the angle of rotation of the loaded plane as shown in figures below. Negative load intensities can be specified to reverse their direction.

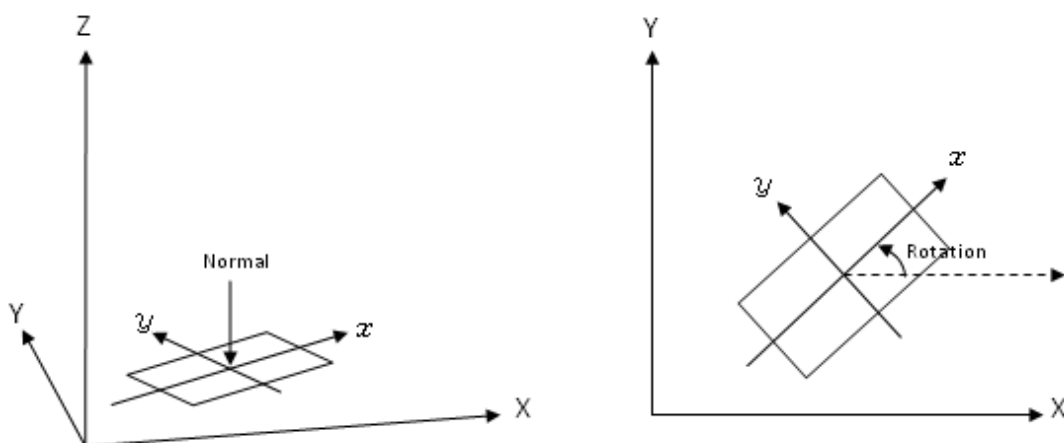

Vertical load on horizontal plane rotated in counter-clockwise direction

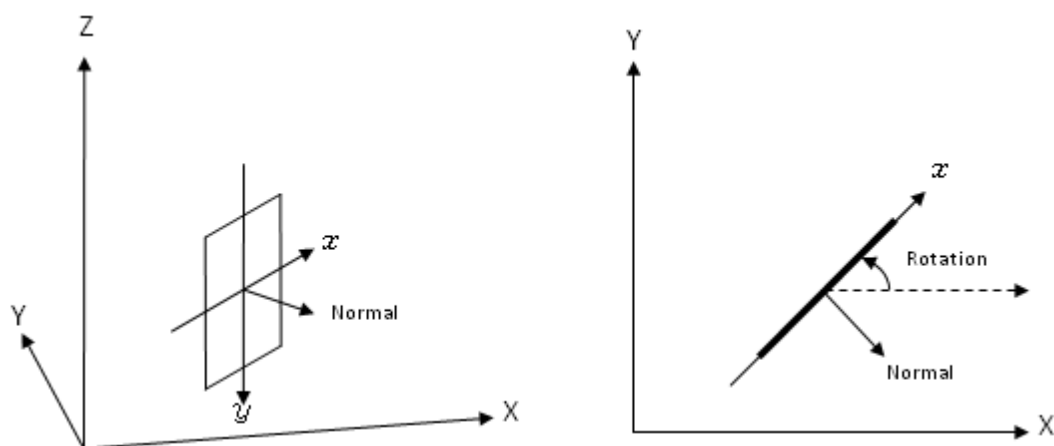

Horizontal load on vertical plane rotated in counter-clockwise direction

3.3.5.2 Circular

If the Mindlin analysis method is chosen then circular loads may be applied vertically and/or horizontally on horizontal and vertical planes (i.e. in both the normal and horizontal directions).

If the Boussinesq analysis method is chosen then loads may be applied only vertically on horizontal planes (i.e. in the normal direction).

Loads can be superimposed and placed at any level. All loads are completely flexible - no allowance is made for stiffness of the structures.

Note : The loaded areas can be entered in tabular form (as described below). Horizontal planes with vertical circular loads, without any rotation can be entered in graphical form. For information on entry of graphical data see Graphical Input.

Specification of the load in the table view. Much is context sensitive so its accessibility depends on the load shape and orientation of the loaded plane


Orientation can be either horizontal or vertical.

Centre of load is the centre-point of the load for defining its plane entered in global co-ordinates.

Angle of local x w.r.t. global X orientates the local axis. The plane can be rotated (in plan) by an angle. The base point for the rotation is the centre of the load. The figures below illustrate the local axis in relation to the global axis. Circular loads can also be rotated. Although the shape then remains the same, and normal loads are unaffected, the directions of tangential loads will be affected. The angle of local x w.r.t. global X is zero for loads parallel to the Cartesian co-ordinate system. Positive angles are counter-clockwise.


Radius is for circular loads only.

Number of rectangles It defines the number of rectangles that will be used to represent the circular load for the purpose of calculation. An odd number must be specified. A larger number will improve the accuracy of the results close to the edge of the loaded area.

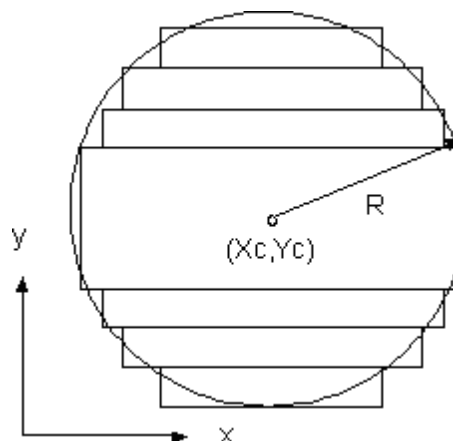


Representation of circular load by rectangles

Load value specifies the load intensity to be applied to the plane. Depending on the analysis methods, loads can be either normal or tangential to the loading plane. Tangential loads are specified with respect to the local axis of the loaded plane (i.e. "tangential x" and "tangential y"). Normal loads on horizontal planes are applied vertically downwards. The direction of normal loads on vertical planes depends on the angle of rotation of the loaded plane as shown in figures below. Negative load intensities can be specified to reverse their direction.

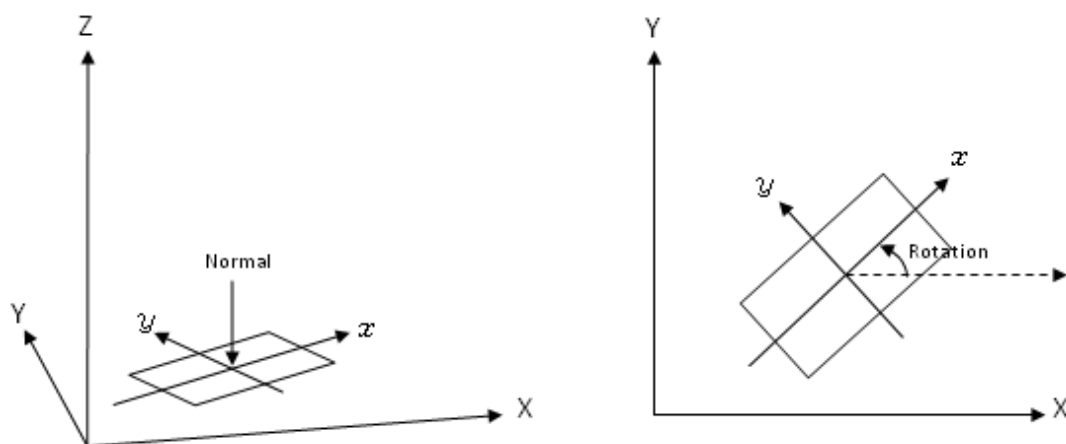

Vertical load on horizontal plane rotated in counter-clockwise direction

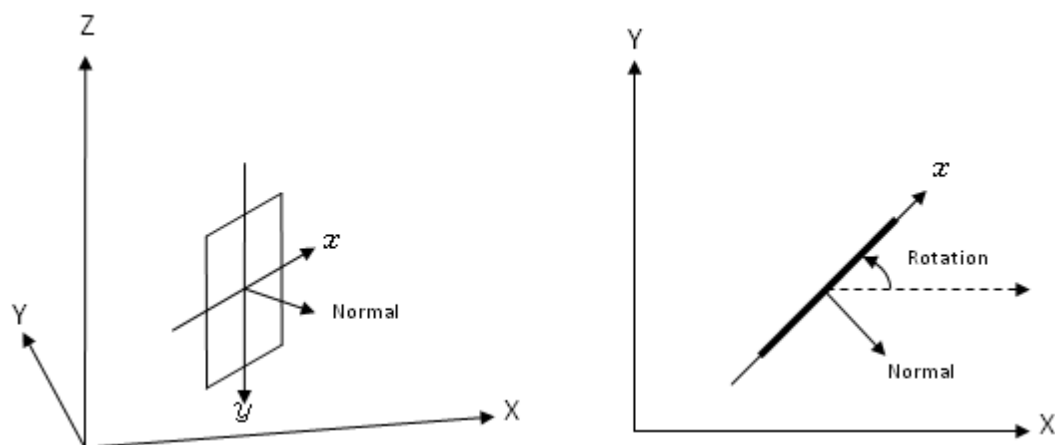

Horizontal load on vertical plane rotated in counter-clockwise direction

3.3.5.3 Polygonal

For both the Mindlin and Boussinesq methods polygonally shaped loads may be applied only vertically on horizontal planes (i.e. in the normal direction).

If the Boussinesq analysis method is chosen then loads may be applied only vertically on horizontal planes (i.e. in the normal direction).

Loads can be superimposed and placed at any level. All loads are completely flexible - no allowance is made for stiffness of the structures.

Specification of the load in the table view. Much is context sensitive so its accessibility depends on the load shape and orientation of the loaded plane

Orientation can be either horizontal or vertical.


Angle of local x w.r.t. global X orientates the local axis. The plane can be rotated (in plan) by an angle. The base point for the rotation is the centre of the load. The figures below illustrate the local axis in relation to the global axis. Although the shape then remains the same, and normal loads are unaffected, the directions of tangential loads will be affected. The angle of local x w.r.t. global X is zero for loads parallel to the Cartesian co-ordinate system. Positive angles are counter-clockwise.

The **Coordinates** of a polygonal load specify the vertices of the polygon, in the global X,Y plane since polygonal loads may only be applied to horizontal surfaces.


The **Rectangle Tolerance** of a polygonal load specifies the tolerance that will be used to fit rectangles to the load's polygon. For analysis the polygon is represented by a series of rectangular loads. The rectangles that will be generated can be viewed, and the effect of adjusting tolerance investigated, via the Polygon Wizard that is accessed by clicking the **more** button.

If more rectangles are required to represent a polygonal load then this can be achieved by altering the **Rectangle Tolerance**. An illustration of the arrangement of rectangles that are used to represent a polygonal load is available in the Polygon Wizard that is accessed by clicking the **more** button.

Load value specifies the load intensity to be applied to the plane. Depending on the load shape and analysis methods, loads can be either normal or tangential to the loading plane. Tangential loads are specified with respect to the local axis of the loaded plane (i.e. "tangential x" and "tangential y"). Normal loads on horizontal planes are applied vertically downwards. The direction of normal loads on vertical planes depends on the angle of rotation of the loaded plane as shown in figures below. Negative load intensities can be specified to reverse their direction.

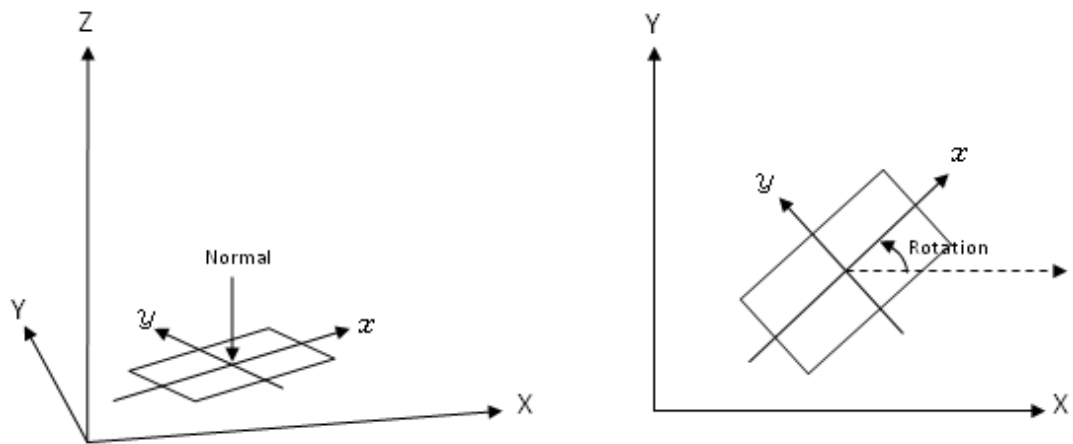

Vertical load on horizontal plane rotated in counter-clockwise direction

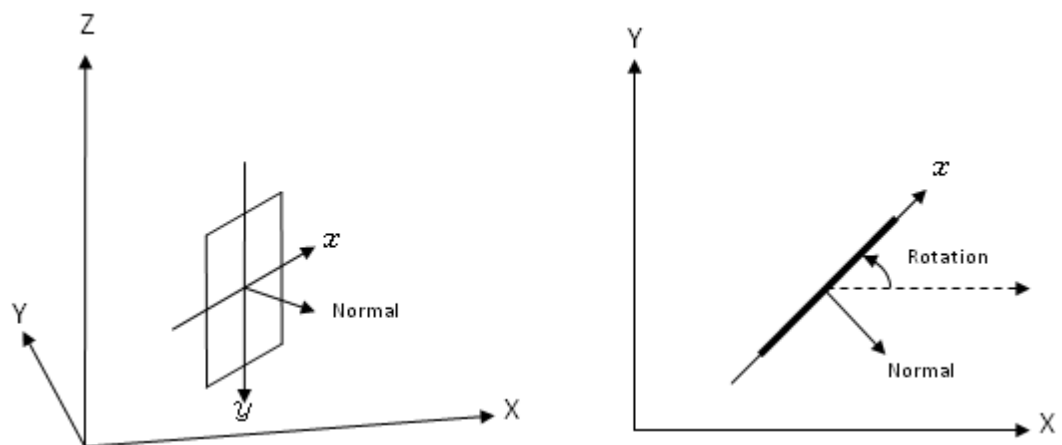

Horizontal load on vertical plane rotated in counter-clockwise direction

3.3.6 Polygon Wizard

The Polygon Wizard is opened by clicking the "more" button in the Load Data table. It allows editing of a polygonal load's **coordinates** and its rectangle **tolerance**, together with the display of the rectangles that will be generated for representation by rectangular loads during analysis.

The **X** and **Y** values are specified in global coordinates and define the vertices of the polygon upon which the vertical (normal) load is to be applied. A polygon with duplicate vertices will only be accepted if the duplicates are its start and end points. If the end point does not match the start point then a closing edge will be assumed.

A polygon with coordinates that define edges that cross each other will not be accepted.

Coordinates may be pasted from a range in a spreadsheet by copying it from the spreadsheet to the clipboard, then right-clicking in the top left cell of the coordinates to which that range is to be pasted, and pressing <ctrl> + "v".

To delete coordinates click the row header number, and press .

The **Display** check-box should be selected in order to display the polygon expanded to rectangles. Rectangles will only be generated for valid polygons. The coordinates may not be edited while the rectangles are displayed. The **Display** check-box must first be de-selected.

In order to generate rectangles from a polygon the polygon is first expanded into trapezoids. Each trapezoid is then expanded into one or more rectangles. The rectangle **Tolerance** is defined as the total "overlap" and "underlap" of rectangles within each trapezoid, as a proportion of the total area of that trapezoid. It may be varied via the slider or via direct input to the edit box in order to vary the accuracy of fit. A lower tolerance will increase the accuracy of the fit but with the consequence that analysis will take longer since more calculations will be required. Due to the methodology used, trapezoids with greater differences in length of their parallel edges will generate more rectangles than those of lesser difference - even though those with lesser difference may have larger areas.

Rectangles are recalculated immediately that the **Tolerance** is changed. Therefore, if using the edit box to type a value, ensure that that value is always a valid number. This can be done most easily by highlighting the whole number to edit it, rather than by positioning the cursor precisely in the edit box, which risks creating invalid numbers upon typing.

The procedure for generating rectangles considers every edge as a candidate at right angles to which rectangles can be created. Whichever edge would produce the fewest rectangles is then selected. Hence, as the tolerance is varied the alignment of rectangles may change as well as their number, as first one edge and then another becomes optimal.

The minimum width of rectangle that will be produced is 50mm. Trapezoids whose parallel sides are less than that distance apart will be ignored, and those whose parallel sides are wider will be filled with rectangles of width to suit the rectangle tolerance, or 50mm, whichever is smaller. In this way the creation of insignificantly narrow rectangles arising from rounding of coordinates by the user (particularly for non-orthogonal edges) is avoided.

The definition of each rectangle that is generated can be viewed in the Text Output by selecting the Polygonal Loads' Rectangles item in its wizard.

3.3.7 Soil Zones

The soil zones window allows the lateral limits, if any, of each soil profile to be specified. This is defined in terms of rectangular areas specified by corner x and y co-ordinates. The soil zones are therefore aligned with the Cartesian coordinate system.

Soil zone areas may overlap. If this occurs then the profile relating to the soil zone with **highest** allocated number will be used in the calculation.

If no soil zone is specified then the **first** soil profile is assumed to be widespread. Similarly, if displacements are to be calculated for locations that are wide of any soil zones then the **first** soil profile will be used.

The soil zones can be entered in either this tabular form or graphical form. For information on entry

of graphical data see Graphical Input.

3.3.8 Polylines

Polylines are used to define displacement polylines.

The following input data is required to define a polyline.

Data may be input in dialog form by double-clicking within a cell of the Polylines input table.

Ref.	Name	Coordinates
		[m]
Defaults	Polyline #	
1	Polyline 1	(-70, -80, 0) (20, 80, 0)
2		

Name specifies the name of the polyline.

Coordinates specify the end points of the segments that make up the polyline.

3.3.9 Displacement Data

The points at which displacement results are required can be specified using grids, lines, polylines or individual points. Results can also be given for the centre of each loaded area, see Analysis Options.

The grids, lines, polylines or points can be entered in tabular form.

Any number of grids, lines, polylines or points can be entered.

The following types of displacement data can be input.

- **Points**
- **Lines**
- **Polylines**
- **Grids**

3.3.9.1 Points

Points are specified by single x, y and z co-ordinates.

Name is the name of the point.

X is the x coordinate of the point.

Y is the y coordinate of the point.

Z(level) is the level of the point.

Calculate specifies whether displacement calculations are to be performed for the point.

Detailed Results specifies whether the detailed results are to be reported for the point

3.3.9.2 Lines

Lines can be entered in any orientation by specifying the co-ordinates at both ends.

Name is the name of the line.

Start and **End** points of the line are specified by entering their **X, Y** and **Z (level)** coordinates.

Intervals specify the number of intervals on the line.

Calculate specifies whether displacement calculations are to be performed for the line.

Detailed Results specifies whether the detailed results are to be reported for the line.

3.3.9.3 Polylines

Displacement Polylines specify a series of point locations on a 3D polyline, for which ground movement results are required.

Ref.	Name	Polyline	Intervals [No.]	Calculate
Defaults	Displacement Polyline #	1	10	No
1				
2				

Name is the name of the Displacement Polyline.


Polyline is the polyline that is to be associated with the displacement polyline.

Intervals is the number of intervals on the displacement polyline.

Calculate specifies whether displacement calculations are to be performed for the point.


3.3.9.4 Grids

Grids can be entered horizontally, vertically or at an vertical inclination by extruding a line. The Direction of extrusion is specified as one of the Global axes (X, Y or Z). A Line for extrusion must be entered by specifying its end coordinates. For example, if 'Global X' is the direction of extrusion then the table allows the specification of a line in the YZ plane.

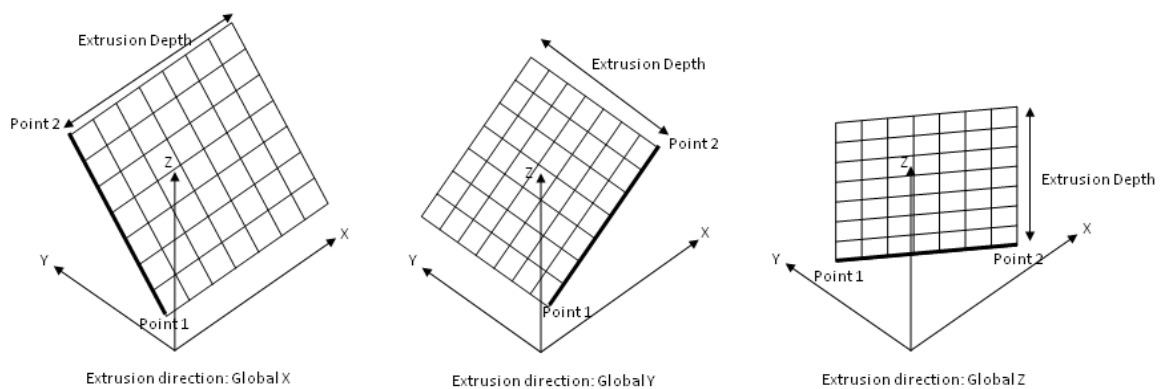

The extrusion depth should not be zero. Negative extrusion depth extrudes in the opposite to the global directions.

The number of intervals is specified across and along the extrusion as shown below.

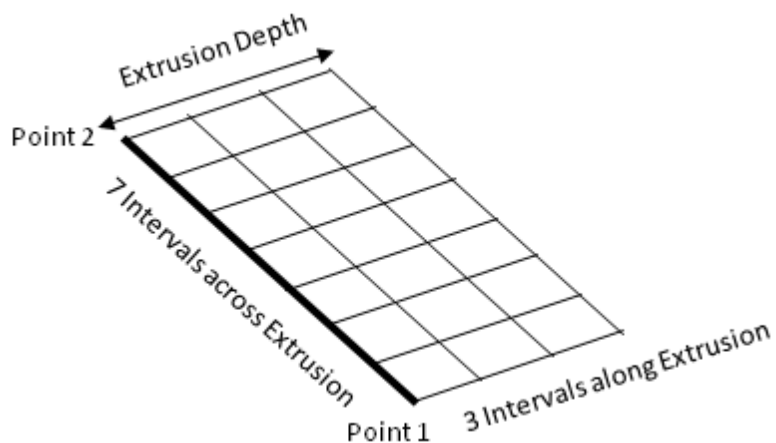

Calculate specifies whether displacement calculations are to be performed for the grid.

Detailed Results specifies whether the detailed results are to be reported for the grid.

3.3.10 Imported Displacements

Displacements from other programs may be imported from CSV files via 'File | Import | Displacements...' from the program menu.

The subsequent CSV Results Import dialog allows the choice of whether locations in the CSV file that are duplicates of those already read are to be ignored. If the "Skip duplicate locations" option is checked, then a tolerance may be specified which is used to determine whether two locations are considered to be duplicates. The tolerance specifies the maximum distance within which locations are deemed to be duplicates. If a point is found to be a duplicate of a location already read from the CSV file, then it will be ignored, and only the first point and its results read into the model's data.

The purpose of Imported Displacements is to combine the displacements from other programs together with those from Xdisp. The combined displacements may then be shown on the Text Output, the Plan View or the 3D Graphical Output View.

The import file should include rows of data beginning with one of the following keywords. Each row of data contains displacement results for a single coordinate.

- LOAD_RESULT
- POINT_RESULT
- LPOINT_RESULT
- GPOINT_RESULT
- INTERMEDIATE_LOAD_RESULT
- INTERMEDIATE_POINT_RESULT
- INTERMEDIATE_LPOINT_RESULT
- INTERMEDIATE_GPOINT_RESULT

Whichever of these keywords is used, the data will be imported and treated in the same way. The range of keywords is to allow the import of CSV files that have been exported from Xdisp or Oasys Pdisp, which may contain any of these keywords.

Displacements follow the sequence: Keyword,x Coordinate,y Coordinate,z Coordinate,x Displacement,y Displacement,z Displacement.

Units for data in the file are specified by the keywords DISP and LENGTH (displacement and length units respectively) followed by the index of the unit. Length and displacement units' indices are: 0 - metres; 1 - centimetres; 2 - millimetres; 3 - feet; 4 - inches.

Units information should appear in the file before the displacement results.

e.g.

```
DISP, 2
LENGTH, 0
LOAD_RESULT, 0.5, 43.5, 0, -0.4967472, -93.72664, 47.38838
INTERMEDIATE_LOAD_RESULT, 0.5, 43.5, -2.587683439, 0, 0, 38.77201
INTERMEDIATE_LOAD_RESULT, 0.5, 43.5, -4, 0, 0, 34.85815
```

```
GPOI NT_RESULT, - 80, - 90, 0, 32. 98127, 27. 33411, - 0. 5642965
INTERMEDI ATE_GPOI NT_RESULT, - 80, - 90, - 4, 0, 0, - 0. 5535589
INTERMEDI ATE_GPOI NT_RESULT, - 80, - 90, - 6, 0, 0, - 0. 5062072
LPOI NT_RESULT, - 70, - 80, 0, 41. 05777, 32. 48021, - 6. 13E- 03
INTERMEDI ATE_LPOI NT_RESULT, - 70, - 80, - 4, 0, 0, 3. 54E- 02
INTERMEDI ATE_LPOI NT_RESULT, - 70, - 80, - 6, 0, 0, 0. 1545731
POI NT_RESULT, 0, 0, 0, 0. 7738549, - 31. 88898, 30. 52104
INTERMEDI ATE_POI NT_RESULT, 0, 0, - 4, 0, 0, 26. 76711
INTERMEDI ATE_POI NT_RESULT, 0, 0, - 6, 0, 0, 23. 55008
```


If units are not specified in the file then a dialog will be shown at the beginning of the import process for the user to specify the units of the data in the file.

These imported displacements may be viewed via 'Data | Imported Displacements...' from the program menu or via the Gateway. Once imported they are non-editable. Imported displacements can be deleted by right-clicking in the Imported Displacements Table View and selecting 'Delete All' from the subsequent context menu.

In order that imported displacements may be combined sensibly with displacements that are generated by **Xdisp**, the following rules apply.

- 1) All coordinates of data in the import file are imported whether a match is found for them or not in the displacement grids, lines and points of the current Xdisp file.
- 2) The checking of whether coordinates match those of the displacement grids, lines and points in the Xdisp file is performed at the time of analysis. The tolerance for coincidence is 1 mm in all of the x, y and z directions. Those coordinates which match any in the Xdisp file will have their results added to those of that Xdisp file after analysis.
- 3) If there are multiple entries of displacements for the same point in the import file, all those displacements will be added to those calculated by Xdisp for the displacement position, whether that position is modelled by Xdisp as a displacement point, or as a point within a displacement line or grid.
- 4) Similarly, if one point in the import file is matched with more than one in the data file, e.g. if displacement points, lines or grids contain coincident positions, then the imported displacements will be added to each of the matching positions in the data file.

The diagram below illustrates a series of displacement coordinates in a CSV import file, a Displacement Grid, a Displacement Line, and three Displacement Points in an Xdisp data file. It shows how the results would be combined.

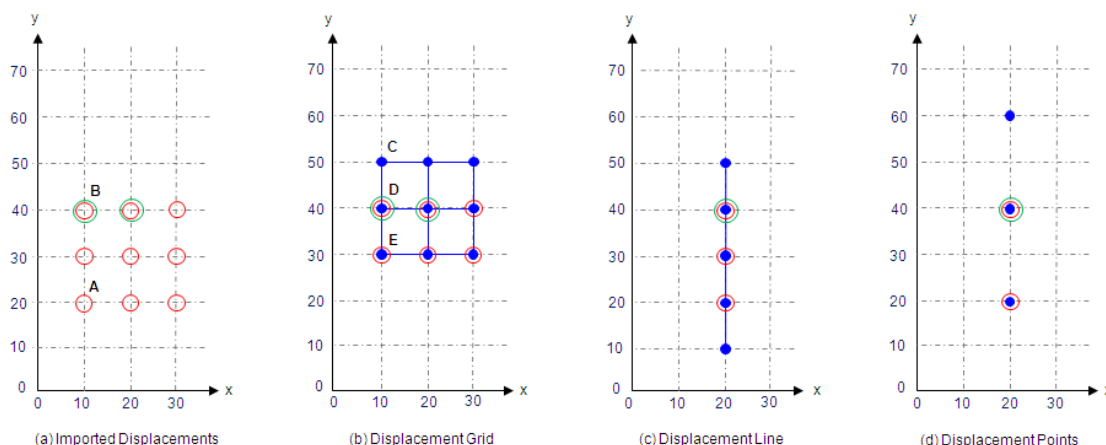

Key

- ○ Imported displacement data point representing a single row of the CSV import file
- Displacement data point specified in data file whose results will not be added to any of the imported data points
- ● ● Displacement data point specified in data file whose results will be added to those of an imported data point

Coordinates such as 'A' are present in the CSV import file in one row of data only with one set of x, y and z displacements. Coordinates such as 'B' are present in the CSV file in two rows of data and so have two sets of x, y and z displacements. Coordinates such as 'C' are present only in the Xdisp data file and not in the CSV import file. Their results will therefore only reflect the results from Xdisp's calculation of displacements. Coordinates such as 'D' are present in the Xdisp data file, but also in two rows of the CSV import file. Their results will therefore be the sum of those from Xdisp's calculation of displacements and the two rows of results in the CSV import file. Coordinates such as 'E' are present in the Xdisp data file and in one row of the CSV import file. Their results will therefore be the sum of those from Xdisp's calculation of displacements and that one row of results in the CSV import file.

If an imported result is intended to be added to results at each displacement point in the Xdisp data file, then care should be taken to ensure that the imported file contains one result for every data point. When importing results from Oasys Pdisp this is most easily achieved by creating the same set of Displacement Grids, Lines and Points in the two programs for export from one and import to the other. Having created the Displacement Grids, Lines and Points in one of the programs they can be input to the other by copying and pasting between the programs' Displacement Data table views by highlighting the required cells and via the right-click context menu options of 'Copy' and 'Paste'. Note that the last columns in the Displacement Data for the two programs may display different data, so only the first, common columns should be copied.

Caution should be employed if results are inspected for which not all points of Displacement Grids, Lines and Points have matching imported displacements.

The Text Output may be inspected for a summary of the displacements that have been imported and, after analysis, those which have been found to match displacement points in the Xdisp file.

3.3.11 DXF Import of Background Data

The Background Data table can be accessed via 'Data | Background Data' from the program menu or via the Gateway. It displays the DXF entities (LINES, POLYLINES, LWPOLYLINES and CIRCLES), that have been imported from a DXF file by selecting File->Import->AutoCAD (DXF file)... from the program menu. This data may then be displayed on the 3D Graphical Output view as a backdrop to the model data.

The data may be manipulated by right-clicking in the table, or, in the case of the wizard, by double-clicking in a cell. The subsequent context menu presents the following options.

Wizard displays a wizard dialog showing the DXF entity in more readable form. The **Specification** field of the Background Data table gives the condensed information of DXF entities. The wizard may also be accessed by clicking on the wizard button present on the Pdisp Toolbar.

Delete deletes a row of the table, i.e. one DXF entity. First select a row by clicking its row header number.

Delete All deletes all rows of the table, i.e. all the DXF entities. The Background Data table will then be removed from the Gateway.

Translate shifts all DXF entities by specified x, y and z distances. In this way the origin of the DXF data can be moved to suit that of the Pdisp model.

Crop removes all DXF entities that lie either wholly outside, or partially outside a specified "box" of x, y and z range. If all DXF data has been imported with the same z level, then the cropping volume will remove all data if its minimum and maximum z values are not changed from their defaults of the sole z level found in the data.

Cropping allows the easy removal of rogue DXF data (e.g. from title blocks of drawings) that has been imported inadvertently with coordinates far distant from the Pdisp model data. Such data may otherwise make invisible the display of model data in the 3D Graphical Output.

All Background data can also be deleted via the 3D Graphical Output's context menu (i.e. by right-clicking on the 3D Graphical Output view and selecting "Delete Background Data" from the subsequent context menu). Imported DXF background data in the 3D Graphical Output view can be displayed or hidden via the Graphic Settings property sheet.


A sample DXF file is supplied with the program. See Sample Files for more information.

3.3.12 Non-linear Materials

The value of stiffness (Young's modulus E) with depth is specified in the Soil Profiles window. For linear materials each specified value of E will remain constant, at the given depth, throughout the calculation for stress, strain and thereby displacement.

For models of materials where the relationship between stress and strain is non-linear a non-linear curve must also be specified. This can be defined by the specification of a curve of strain versus stiffness factor.

The curve is developed from the soil stress/strain relationship.

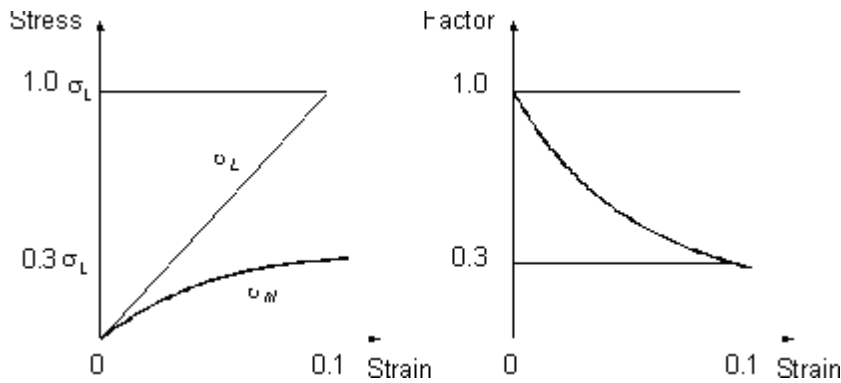

For increasing values of strain, the factor (F) by which Young's modulus is to be modified, is defined by:

$$\frac{\sigma_{nl}}{\sigma_L}$$

where σ_L is the equivalent stress for a linear curve at a given strain (ϵ) and σ_{nl} is the stress for the non-linear curve.


All stresses referred to in this manual are stress changes due to the application of loads. No account is taken of stresses existing in the ground before loading.

Entering new data

To enter a new non-linear curve click on the Add Curve tab at the top of the grid. This highlights the Graph title box and provides the number of the next curve. If you then click the right button whilst still on the tab the Page Edit Options screen will appear. This allows the name of the curve to be altered in addition to copying and deleting curves.

Non-linear curves can then be specified either in the table provided or by using the mouse cursor on a pre-defined grid and clicking the left button to identify the required points.

Strain can be entered on a linear or log scale. The scales on the x and y axes can also be changed clicking on the X max and Y max arrow keys in the view's status bar.

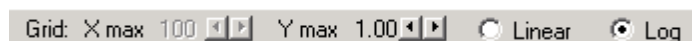

Editing data

Points entered on the grid can be refined by editing the values displayed on the table.

Once the required curves have been entered then the user must return to the **soil profile data window**. The table now allows the appropriate curve to be allocated to the correct soil type.

3.3.13 Pile-Soil Interaction Using GsRaft

Pile-soil interaction properties can be entered only if the "GSA raft analysis data" option is selected in the Analysis Options. The Oasys GSA program, which depends on Pdisp application data for GsRaft analyses, uses these Pile-soil interaction properties, which provide additional information for each soil stratum. The Pile-soil interaction properties do not affect the analyses or results of Pdisp.

The facility can also be used to model interaction between soil and spread foundations.

The ground interacts with elements of the shaft of a pile in 3 dimensions (x, y, z) and in the vertical, z, direction at the pile base. In each case, the shape of the force-displacement curve for the interaction is represented by $\sigma/\sigma_{ult} = C(\delta/D)$ for vertical displacement and $C(\delta/B)$ for horizontal displacement, where:

σ	= interaction stress (shear or normal as relevant)
σ_{ult}	= maximum value of the stress
$C()$	= a coefficient defined by a user-defined function (see Pile-soil interaction curves
$C(..)$	
δ	= displacement
D, B	= geometry parameters defined as below.

The values of δ represent the relative displacement between the pile and the elastic ground near it. That is, δ is the non-linear deformation of the soil local to the pile, which is usually behaving in a non-linear manner.

For circular piles:

D	= diameter
B_x	= $B_y = D$

For rectangular piles, B_x and B_y are the sides of the rectangle.

p	= $2B_x + 2B_y$
D	= p/π

For H sections:

B_x	= flange width
B_y	= web height + 2 x flange thickness
p	= complete perimeter (roughly 2 x web height + 4 x flange)
D	= $(2B_x + 2B_y)/\pi$

3.3.14 Pile-Soil Interaction Curves (PSICs) C(..)

The user is required to specify a number of shapes for the Pile-Soil Interaction Curves named PSIC1, PSIC2 etc.

For each PSIC, the coefficient $C(d)$ is related to normalised relative displacement d ($=\delta/B$ or δ/D). C values for d beyond the range of values specified will be taken as 1.0 on the positive side and -1.0 on the negative side.

The scales on the x and y axes can also be changed by clicking on the x max and y max arrow keys in the view's status bar. There is no limit for x max but 1.0 is the limit for y max.

The curve can be made symmetric about the origin by selecting the **Symmetric** check box for the view's status bar. An asymmetric curve can be converted to a symmetric curve by choosing either to use positive values to replace the negative values or vice-versa.

Pile-Soil Interaction Coefficients for lateral directions X and Y, vertical direction Z, and base, may be derived by the user from p-y (lateral load - displacement), t-z (axial load - displacement) and q-z (tip load - displacement) curves (tables and formulae) examples of which are given in section: References - Pile-Soil Interaction Curves.

3.3.15 Allocation of PSICs to Soil Strata

In each soil stratum, a Pile-Soil Interaction Curve (PSIC) is required for each dimension of displacement of the shaft and for the vertical displacement of the base. If there is no pile base in the stratum, then the base data are ignored. The maximum stress in each mode of interaction is also required.

3.3.16 Graphical Input






Graphical Input is accessed via the Data menu, the Gateway or the **Pdisp Toolbar**. The following data can be entered in both tabular and graphical form. The methods are fully interchangeable.



This section describes how to enter the data graphically.

Entering New Data

1. Select 'Data->Graphical Input' from the program's menu.
2. Select 'Graphics->Input' from the program's menu or select the appropriate icon from the

Graphics Toolbar for soil zones , displacement data    or load data . These buttons are context dependent. When the Graphical Input View is active they both display and allow input of soil zones, displacement data and load data respectively. Subsequently deactivating a button does not hide the entity. Instead, when the Graphical Input View is active these entities are hidden via 'Graphics -> Toggle items' from the program's menu. When the Plan View is active these buttons allow display or hiding of soil zones, displacement data and load data respectively.

Once selected the cursor and left and right mouse buttons can then be used to enter the data. Corresponding items can also be accessed via Graphics | Input from the program menu.

3.3.16.1 Inserting Bitmaps

Bitmaps can be inserted behind the plan view. If the site plan is available, at a suitable scale in bitmap form, then this can be placed behind the input data to check locations of loads etc. The bitmap can be inserted in the following manner:

Select the bitmap button and open the required bitmap file.


This opens the Bitmap Scaling dialog.

Define the area required for the bitmap to cover in terms of maximum and minimum co-ordinates and select "Load Bitmap".

The bitmap is then placed behind the main graphic in the Plan View.

Care should be taken not to copy large bitmaps, which can dramatically increase the size of the file. If the bitmap was used during data input it may be better to remove and store it separately from the **Pdisp** file.

3.3.16.2 Soil Zones - Graphical input

To enter the soil zones graphically; select the appropriate button for soil zones  from the 2D Graphics Toolbar. Or select: Graphics | Input | Soil zones from the program's menu.




1. Place the cursor (cross) over the start of the area required.
2. Hold down the left button and drag the mouse until the full area is defined.

Once the area has been defined the screen will prompt for the entry of additional data.

Enter the number of the appropriate soil zone and "Add to data".

This will also update the tabular input. If the zone's area requires additional editing then this should be carried out using the tables.

3.3.16.3 Displacement Grids - Graphical input


To enter the displacement points, lines and grids graphically, select the appropriate button on the 2D Graphics Toolbar    or select: Graphics ->Input ->Displacements -> Points (Lines or Grids) from the program's menu.

1. Use the cursor (cross) to place the corner of a grid or at the start of the a line or point location.
2. Left-click to place a displacement point, or hold down the left button and drag the mouse until the full displacement grid's area or displacement line's extent is defined .

Once defined the screen will prompt for the following additional information.


This will also update the **Displacement Data table**. If the grid requires additional editing then this should be carried out using that table.

Once input of displacement points, lines or grids has been selected, the right mouse button may be used to active a context menu from which the type of displacement entity for subsequent input may be changed.

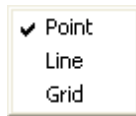


Only horizontal lines and horizontal grids can be entered by Graphical Input. Others must be entered in the **Displacement Data table**.

3.3.16.4 Load Data - Graphical input

To enter rectangular or circular load data graphically, select the load data button on the 2D Graphics Toolbar . Or Select: Graphics ->Input ->Loads from the program's menu.

1. Use the right mouse button to activate the context menu from which to select the type of data entry.

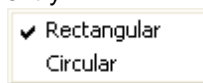

2. Use the cursor (cross) to place the corner of a rectangular area or centre of a circle.
3. Hold down the left button and drag the mouse until the full area is defined.

Once defined the screen will prompt for the following additional information.

The number of rectangles is only required for the circular loaded areas, see Load Data.

This will also update the Load Data table. If the area requires additional editing then this should be carried out using that table.

Only normal (vertical) loads on horizontal planes, with no rotation in plan can be entered by Graphical Input. Others must be entered in the Load Data table.

4 Programming Interface

Programming interface is provided by COM Automation in PDisp

COM Automation allows commands to be issued from a separate process via a set of VBA or C++ instructions. The separate process could be a separate program or, indeed, a VBA script in a spreadsheet.

4.1 COM Automation

COM Automation allows other programs to access PDisp operations by creating an instance of PDisp class "pdispauto_XX_X.Application", where "XX_X" is the major and minor version of PDisp, e.g. "pdispauto_20_0.Application", then calling the exported functions of that class.

The available COM functions are listed in COM Functions. Some use enums and structs.

Note that function names are case sensitive.

When installing PDisp the installer should be run with Administrator rights to ensure the PDisp.tlb file is registered in the host computer's registry, thus enabling its functions to be recognised e.g. by the Microsoft VBA editor. If the functions are not recognised, then it may be necessary to set the reference to the PDisp.tlb file manually in the editor. The PDisp.tlb file can be found in the program installation folder whose default location is specified in Sample Files.

More:

COM Export Functions

COM VBA Example

COM C++ Example

4.1.1 COM Export Functions

The PDisp COM export functions are listed below:

The return code (short data type) for all these functions is zero on successful execution, and -1 on failure.

All input data are in SI units. All the results obtained through the below mentioned functions are in SI units.

short NewFile()

Open a new model.

short Open (string filename)

Open a *.pdd file.

filename – the name of the file to be opened, including path and extension.

short Save ()

Save the data to the default file (i.e. overwriting the file that was opened or last saved).

short SaveAs (string filename)

Save the data to *.pdd file.

filename – the name of the file to be saved, including path and extension.

short Close ()

Close the current file.

short CheckData()

Checks the data of the current file. (Recommended before analysis.)

short Analyse ()

Analyse the current file.

short Delete ()

Deletes the results in the current file.

short Show ()

Show the running instance of PDisp created by the Automation client.

short AnalysisMethod (short* sMethod)

Gets the method of analysis.

0 - Mindlin

1 - Boussinesq

short SetAnalysisMethod (short sMethod)

Sets the method of analysis.

0 - Mindlin

1 - Boussinesq

short Elastic (VARIANT_BOOL* bElastic)

Gets the state of Elastic analysis option.

short Consolidation (VARIANT_BOOL* bConsolidation)

Gets the state of Consolidation analysis option.

short NumDisplacementData (short* sNumDispData)

Gets the number of displacement data entries in the current file.

short NumRectLoads (short* sNumRectLoads)

Gets the number of rectangular loads in the current file.

short NumCircLoads (short* sNumCircLoads)

Gets the number of circular loads in the current file.

short NumPolyLoads (short* sNumPolyLoads)

Gets the number of polygonal loads in the current file.

short NumDisplacementPoints (short* sNumDispPoints)

Gets the number of displacement points in the current file.

short NumDisplacementLines (short* sNumDispLines)

Gets the number of displacement lines in the current file.

short NumDisplacementGrids (short* sNumDispGrids)

Gets the number of displacement grids in the current file.

short NumPointsAlongLine (short sIndex, short* sPoints)

Gets the number of points along the extrusion direction of the displacement line identified with sIndex.

sIndex is a one based input.

short NumPointsAlongGrid (short sIndex, short* sPoints)

Gets the number of points along the extrusion direction of the displacement grid identified with sIndex.

sIndex is a one based input.

short NumPointsAcrossGrid (short sIndex, short* sPoints)

Gets the number of points across the extrusion direction of the displacement grid identified with sIndex.

sIndex is a one based input.

short NumResults (short* sResults)

Gets the number of results.

short NumPointResults (short sIndex, short* sResults)

Gets the number of results of the displacement point identified with sIndex.

short NumLineResults (short sIndex, short* sResults)

Gets the number of results of the displacement line identified with sIndex.

short NumGridResults (short sIndex, short* sResults)

Gets the number of results of the displacement grid identified with sIndex.

short NumStrata (SHORT sIndexSoilProfile, SHORT* sNumStrata)

Gets the number of strata in the soil profile identified with sIndexSoilProfile.

sIndexSoilProfile is a one based input.

short NumSoilProfiles (SHORT* sNumSoilProfiles)

Gets the number of soil profiles in the current file.

short NumSoilZones (SHORT* sNumSoilZones)

Gets the number of soil zones in the current file.

short NumTimeSteps (short* sNumTimeSteps)

Gets the number of time steps.

short NumPolylines (short* sNumPolylines)

Gets the number of polylines in the current file.

short NumDisplacementPolylines (short* sNumDispPolylines)

Gets the number of displacement polylines in the current file.

short GetDisplacementPoint(SHORT sIndex, DisplacementPoint* dispPoint)

Gets the DisplacementPoint at sIndex.

sIndex is a one based input.

short GetDisplacementLine(SHORT sIndex, DisplacementLine* dispLine)

Gets the DisplacementLine at sIndex.

sIndex is a one based input.

short GetDisplacementGrid(SHORT sIndex, DisplacementGrid* dispGrid)

Gets the DisplacementGrid at sIndex.

sIndex is a one based input.

short GetRectLoad(SHORT sIndex, RectLoad* rectLoad)

Gets the RectLoad at sIndex.

sIndex is a one based input.

short GetCircLoad(SHORT sIndex, CircLoad* circLoad)

Gets the CircLoad at sIndex.

sIndex is a one based input.

short GetPolyLoad(SHORT sIndex, PolyLoad* polyLoad)

Gets the PolyLoad at sIndex.

sIndex is a one based input.

short GetStratum(SHORT sIndexProfile, SHORT sIndexStratum, PDispStratum* stratum)

Gets the PDispStratum at sIndexStratum of the soil profile identified with sIndexProfile.

sIndexProfile is a one based input.

sIndexStratum is a one based input.

short GetRigidBoundaryLevel(DOUBLE* dValue)

Gets the Rigid Boundary Level.

short GetTimePeriod(DOUBLE* dValue)

Gets the time period over which the consolidation calculations are to be performed.

short GetTimeStep(DOUBLE* dValue)

Gets the interval at which the consolidation calculations are to be performed and their results reported.

short GetWaterLevel(DOUBLE* dValue)

Gets the level of the water table.

short GetWaterUnitWt(DOUBLE* dValue)

Gets the unit weight of water.

short GetPolyline(SHORT sIndex, Polyline* polyline)

Gets the Polyline at sIndex.

sIndex is a one based input.

short GetSoilZone (SHORT sIndex, SoilZone* zone)

Gets the SoilZone at sIndex.

sIndex is a one based input.

short GetDisplacementPolyline(SHORT sIndex, DisplacementPolyline* dispPolyline)

Gets the DisplacementPolyline at sIndex.

sIndex is a one based input.

short SetDisplacementPoint(SHORT sIndex, DisplacementPoint* dispPoint)

Sets the DisplacementPoint at sIndex.

sIndex is a one based input.

short SetDisplacementLine(SHORT sIndex, DisplacementLine* dispLine)

Sets the DisplacementLine at sIndex.

sIndex is a one based input.

short SetDisplacementGrid(SHORT sIndex, DisplacementGrid* dispGrid)

Sets the DisplacementGrid at sIndex.

sIndex is a one based input.

short SetSoilZone (SHORT sIndex, SoilZone* soilzone)

Sets the SoilZone at sIndex.

sIndex is a one based input.

short SetElastic (VARIANT_BOOL bElastic)

Set elastic analysis to true or false.

short SetConsolidation (VARIANT_BOOL bConsolidation)

Set consolidation analysis to true or false.

Below is the VB code that illustrates how the above displacement functions can be called

```

Dim pt As pdispauto_20_0.DisplacementPoint

sResult = PdispObj.GetDisplacementPoint(1, pt)

pt.Name = "Point1"
pt.X = 10
pt.Y = 10
pt.Z = 0

sResult = PdispObj.SetDisplacementPoint(1, pt)

Dim ln As pdispauto_20_0.DisplacementLine

sResult = PdispObj.GetDisplacementLine(1, ln)

ln.Name = "Line1"
ln.nIntervals = 10

sResult = PdispObj.SetDisplacementLine(1, ln)

```

short SetRectLoad(SHORT sIndex, RectLoad* rectLoad)

Sets the RectLoad at sIndex.

sIndex is a one based input.

short SetCircLoad(SHORT sIndex, CircLoad* circLoad)

Sets the CircLoad at sIndex.

sIndex is a one based input.

short SetPolyLoad(SHORT sIndex, PolyLoad* polyLoad)

Sets the PolyLoad at sIndex.

sIndex is a one based input.

sIndex is a one based input.

short SetStratum(SHORT sIndexProfile, SHORT sIndexStratum, PDispStratum* stratum)

Gets the PDispStratum at sIndexStraum of the soil profile identified with sIndexProfile.

sIndexProfile is a one based input.

sIndexStratum is a one based input.

short SetStrata (SHORT sIndexProfile, SAFEARRAY(PDispStratum)* strata)

Sets the strata of Soil Profile identified with sIndexProfile.

short SetPolyline(SHORT sIndex, Polyline* polyline)

Sets the Polyline at sIndex.

sIndex is a one based input.

short SetDisplacementPolyline(SHORT sIndex, DisplacementPolyline* dispPolyline)

Sets the DisplacementPolyline at sIndex.

sIndex is a one based input.

short SetTimePeriod(DOUBLE dValue)

Sets the time period over which the consolidation calculations are to be performed.

short SetTimeStep(DOUBLE dValue)

Sets the interval at which the consolidation calculations are to be performed and their results reported.

short SetRigidBoundaryLevel(DOUBLE dValue)

Sets the Rigid Boundary Level.

short SetWaterLevel(DOUBLE dValue)

Sets the level of the water table.

short SetWaterUnitWt(DOUBLE dValue)

Sets the unit weight of water.

short AddDisplacementPoint(DisplacementPoint* dispPoint)

Adds the DisplacementPoint.

Below is the VB code that illustrates how the above load functions can be called

```
Dim rl As pdispauto_20_0.RectLoad

sResult = PdispObj.GetRectLoad(1, rl)

rl.Name = "RectLoad1"
rl.Length = 10
rl.Orientation = Vertical

sResult = PdispObj.SetRectLoad(1, rl)

Dim cl As pdispauto_20_0.CircLoad

sResult = PdispObj.GetCircLoad(1, cl)
```

```

cl.Name = "CircLoad1"
cl.Normal = 100
cl.Orientation = Vertical

sResult = PdispObj.SetCircLoad(1, cl)

Dim pl As pdispauto_20_0.PolyLoad

sResult = PdispObj.GetPolyLoad(1, pl)

Dim pts(2) As pdispauto_20_0.Point2D

pts(0).X = -60
pts(0).Y = 60

pts(1).X = -60
pts(1).Y = 0

pts(2).X = -40
pts(2).Y = 60

p.Coor = pts

p.Name = "Polygonal Load"
sResult = PdispObj.SetPolyLoad(1, p)

```

short AddDisplacementPoint(DisplacementPoint* dispPoint)

Adds the DisplacementPoint.

short AddDisplacementLine(DisplacementLine* dispLine)

Adds the DisplacementLine.

short AddDisplacementGrid(DisplacementGrid* dispGrid)

Adds the DisplacementGrid.

short AddRectLoad(RectLoad* rectLoad)

Adds the RectLoad.

short AddCircLoad(CircLoad* circLoad)

Adds the CircLoad.

short AddPolyLoad(PolyLoad* polyLoad)

Adds the PolyLoad.

short AddStratum (SHORT sIndexProfile, PDispStratum* stratum)

Adds the Stratum to soil profile identified with sIndexProfile.

short AddSoilProfile (SAFEARRAY(PDispStratum)* strata)

Adds the Soil Profile (array of strata).Set

short AddSoilZone (SoilZone* soilzone)

Adds the Soil Zone.

short AddPolyline(Polyline* polyline)

Adds the Polyline.

short AddDisplacementPolyline(DisplacementPolyline* dispPolyline)

Adds the DisplacementPolyline.

short DeleteDisplacementPoint(SHORT sIndex)

Deletes the DisplacementPoint at sIndex.

sIndex is a one based input.

short DeleteDisplacementLine(SHORT sIndex)

Deletes the DisplacementLine at sIndex.

sIndex is a one based input.

short DeleteDisplacementGrid(SHORT sIndex)

Deletes the DisplacementGrid at sIndex.

sIndex is a one based input.

short DeleteRectLoad(SHORT sIndex)

Deletes the RectLoad at sIndex.

sIndex is a one based input.

short DeleteCircLoad(SHORT sIndex)

Deletes the CircLoad at sIndex.

sIndex is a one based input.

short DeletePolyLoad(SHORT sIndex)

Deletes the PolyLoad at sIndex.

sIndex is a one based input.

short DeleteSoilZone(SHORT sIndex)

Deletes the SoilZone at sIndex.

sIndex is a one based input.

short DeleteStratum (SHORT sIndexProfile, SHORT sIndexStratum)

Deletes the PDispStratum at sIndexStraum of the soil profile identified with

sIndexProfile.

sIndexProfile is a one based input.

sIndexStratum is a one based input.

short DeletePolyline(SHORT sIndex)

Deletes the Polyline at sIndex.

sIndex is a one based input.

short DeleteDisplacementPolyline(SHORT sIndex)

Deletes the DisplacementPolyline at sIndex.

sIndex is a one based input.

short GetBoussResult_RectLoad(SHORT sIndex, PdispBoussinesqResult* loadResult)

Gets the PdispBoussinesqResult object for the rectangular load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Boussinesq.

short GetBoussResult_CircLoad(SHORT sIndex, PdispBoussinesqResult* loadResult)

Gets the PdispBoussinesqResult object for the circular load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Boussinesq.

short GetBoussResult_PolyLoad(SHORT sIndex, PdispBoussinesqResult* loadResult)

Gets the PdispBoussinesqResult object for the polygonal load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Boussinesq.

short GetBoussResult_DispPoint(SHORT sIndex, PdispBoussinesqResult* dispResult)

Gets the PdispBoussinesqResult object for the displacement point identified with
sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Boussinesq.

short GetMindlinResult_RectLoad(SHORT sIndex, PdispMindlinResult* loadResult)

Gets the PdispMindlinResult object for the rectangular load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Mindlin.

short GetMindlinResult_CircLoad(SHORT sIndex, PdispMindlinResult* loadResult)

Gets the PdispMindlinResult object for the circular load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Mindlin.

short GetMindlinResult_PolyLoad(SHORT sIndex, PdispMindlinResult* loadResult)

Gets the PdispMindlinResult object for the polygonal load identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Mindlin.

short GetMindlinResult_DisplacementPoint(SHORT sIndex, PdispMindlinResult* dispResult)

Gets the PdispMindlinResult object for the displacement point identified with sIndex.

sIndex is a one based input.

This function is to be called if the analysis method chosen is Mindlin.

**short GetBoussResults_RectLoad(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispBoussinesqResult object for the rectangular load identified with sIndex.

sIndex - index of the rectangular load. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the rectangular load identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetBoussResults_CircLoad(SHORT sIndex, SAFEARRAY(PdispBoussinesqResult)
* loadResults)**

Gets the PdispBoussinesqResult object for the circular load identified with sIndex.

sIndex - index of the circular load. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the circular load identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetBoussResults_PolyLoad(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispBoussinesqResult object for the polygonal load identified with sIndex.

sIndex - index of the polygonal load. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the polygonal load identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetBoussResults_DispPoint(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispBoussinesqResult object for the displacement point identified with sIndex.

sIndex - index of the displacement point. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the displacement point identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetBoussResults_DispLine(SHORT sIndex, SAFEARRAY(PdispBoussinesqResult)
* loadResults)**

Gets the PdispBoussinesqResult object for the displacement line identified with sIndex.

sIndex - index of the displacement line. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the displacement line identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetBoussResults_DispGrid(SHORT sIndex, SAFEARRAY(PdispBoussinesqResult)
* loadResults)**

Gets the PdispBoussinesqResult object for the displacement grid identified with sIndex.

sIndex - index of the displacement grid. It is a one based input.

loadResults - SAFEARRAY of PdispBoussinesqResult objects for the displacement grid identified with sIndex.

This function is to be called if the analysis method chosen is Boussinesq.

**short GetMindlinResults_RectLoad(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the rectangular load identified with sIndex.

sIndex - index of the rectangular load. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the rectangular load

identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

**short GetMindlinResults_CircLoad(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the circular load identified with sIndex.

sIndex - index of the circular load. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the circular load identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

**short GetMindlinResults_PolyLoad(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the polygonal load identified with sIndex.

sIndex - index of the polygonal load. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the polygonal load identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

**short GetMindlinResults_DispPoint(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the displacement point identified with sIndex.

sIndex - index of the displacement point. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the displacement point identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

**short GetMindlinResults_DispLine(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the displacement line identified with sIndex.

sIndex - index of the displacement line. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the displacement line identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

**short GetMindlinResults_DispGrid(SHORT sIndex,
SAFEARRAY(PdispBoussinesqResult)* loadResults)**

Gets the PdispMindlinResult object for the displacement grid identified with sIndex.

sIndex - index of the displacement grid. It is a one based input.

loadResults - SAFEARRAY of PdispMindlinResult objects for the displacement grid identified with sIndex.

This function is to be called if the analysis method chosen is Mindlin.

short GetConsolidationResult_Load(enum ELoad eLoadType, SHORT sIndex, SHORT sTimeStep, PDispConsolidationResult* loadResult)

Gets the PdispConsolidationResult object for the eLoadType load identified with sIndex.

sTimeStep is the time step for which the result is accessed.

sIndex is a one based input.

This function is to be called only for Consolidation problems.

short GetConsolidationResults_Load(enum ELoad eLoadType, SHORT sIndex, SHORT sTimeStep, SAFEARRAY(PDispConsolidationResult)* loadResults)

Gets the PdispConsolidationResult object for the eLoadType load identified with sIndex.

sIndex - index of the eLoadType load. It is a one based input.

loadResults - SAFEARRAY of PDispConsolidationResult objects for the rectangular load identified with sIndex.

This function is to be called only for Consolidation problems.

short GetConsolidationResult_Displacement(enum EDispEntity eDispType, SHORT sIndex, SHORT sAlong, SHORT sAcross, SHORT sTimeStep, PDispConsolidationResult* dispResult)

Gets the PdispConsolidationResult object for the eDispType entity identified with sIndex.

sTimeStep is the time step for which the result is accessed.

sIndex is a one based input.

This function is to be called only for Consolidation problems.

short GetConsolidationResults_Displacement(enum EDispEntity eDispType, SHORT sIndex, SHORT sAlong, SHORT sAcross, SHORT sTimeStep, SAFEARRAY(PDispConsolidationResult)* dispResults)

Gets the PdispConsolidationResult object for the eDispType entity identified with sIndex.

sIndex - index of the eDispType entity. It is a one based input.

loadResults - SAFEARRAY of PDispConsolidationResult objects for the rectangular

load identified with sIndex.

This function is to be called only for Consolidation problems.

4.1.2 COM VBA Example

The following is an example VBA script to run Pdisp remotely. This script can be found in the Excel file in the Samples folder shipped with the program.

```
Sub TestPdispCOM()
Dim PdispObj
Set PdispObj = CreateObject("pdispauto_20_0.Application")

Dim PdispFilePath As String

Dim sResult As Integer

Dim rFileName As Range
    With Worksheets("Alp Auto")
        Set rFileName = .Cells(3, 3)
    End With

PdispFilePath = rFileName.Text

sResult = PdispObj.Open(PdispFilePath)

'Delete existing results
sResult = PdispObj.Delete()

Dim nDisps As Integer

sResult = PdispObj.NumDisplacementData(nDisps)

'Perform Analysis
sResult = PdispObj.Analyse()

'Save file
sResult = PdispObj.SaveAs(PdispFilePath)

sResult = PdispObj.Close()

Set PdispObj = Nothing

End Sub
```

4.1.3 COM C++ Example

The following is an example C++ code to run Pdisp remotely.

```
bool RunOneFunction(
    COleDispatchDriver* pDispDriver,
```

```
CString          csFuncName,
BYTE*           pArgType,
CString          csArgument,
SHORT* pShort)
{
    DISPID        dispid;
    OLECHAR*      pcsFunc;
    CString        csMsg;
    int            iReturn(0);
    pcsFunc = csFuncName.AllocSysString();

    //Find the function ID
    if(pDispDriver->m_lpDispatch->GetIDsOfNames(
        IID_NULL,
        &pcsFunc,
        1,
        NULL,
        &dispid) != S_OK)
    {
        csMsg.Format(_T("Function (%s) cannot be found"),csFuncName);
        AfxMessageBox(csMsg);
        return false;
    }

    //Run the function
    if(csArgument.IsEmpty())
        pDispDriver->InvokeHelper(
            dispid,
            DISPATCH_METHOD,
            VT_I2,
            &iReturn,
            pArgType,
            pShort);
    else
        pDispDriver->InvokeHelper(
            dispid,
            DISPATCH_METHOD,
            VT_I2,
            &iReturn,
            pArgType,
            csArgument,
            pShort);

    if(iReturn != 0)
        return false;
    else
        return true;
}

void RunPdisp()
{
    CoInitialize(NULL);
```

```

COleDispatchDriver cPdispDispDriver;

BYTE          pArgType1[] = VTS_WBSTR VTS_PI2;
BYTE          pArgType2[] = VTS_PI2;
CString       csPath1("D:\\Tests\\PDisp\\Auto\\Test.pdd");//Replace this
with the correct path and file location
CString       csPath2("D:\\Tests\\PDisp\\Auto\\TestCopy2.pdd");//Replace
this with the correct path and file location

// Create an instance of the Alp class "Alp.Automation"
if(!cPdispDispDriver.CreateDispatch(_T("pdispauto_19_4.Application")))
{
    AfxMessageBox(
        _T("Pdisp not found or not registered"));
    return;
}

bool bStat(true);
SHORT sRet;
// Function Open
if(bStat)
    bStat = RunOneFunction(&cPdispDispDriver,
        _T("Open"),
        pArgType1,
        csPath1, &sRet);
// Function Save
if(bStat)
    bStat = RunOneFunction(&cPdispDispDriver,
        _T("Save"),
        pArgType2,
        _T(""),
        &sRet);

// Function SaveAs
if(bStat)
    bStat = RunOneFunction(&cPdispDispDriver,
        _T("SaveAs"),
        pArgType1,
        csPath2,
        &sRet);

// Function Close
if(bStat)
    bStat = RunOneFunction(&cPdispDispDriver,
        _T("Close"),
        pArgType2,
        _T(""),
        &sRet);

cAlpDispDriver.ReleaseDispatch();

CoUninitialize();
}

```

4.1.4 Enums and Structs

Enum EOrientation

HORIZONTAL
VERTICAL

Enum EExtrusion

X
Y
Z

Enum EPrimaryMethod

Mv
Cc
None

Enum EOverConsolidation

PRECONSPRESS
OCR
OCM

Enum ELoad

RECTANGULAR
CIRCULAR
POLYGONAL

Enum EDispEntity

DISPLACEMENT_POINT
DISPLACEMENT_LINE
DISPLACEMENT_POLYLINE
DISPLACEMENT_GRID

Struct RectLoad

BSTR Name
double X
double Y
double Z
double Angle
double Width
double Length
double Normal
double TangentialX
double TangentialY
EOrientation Orientation

Struct CircLoad

BSTR Name
double X
double Y
double Z
double Angle
double Width
int nRectangles
double Normal
double TangentialX
double TangentialY
EOrientation Orientation

Struct Point2D

double X
double Y

Struct PolyLoad

BSTR Name
double Level
double Tolerance
int nRectangles
double Normal
SAFEARRAY(struct Point2D) Coord

Struct Point3D

double X
double Y
double Z

Struct Polyline

BSTR Name;
SAFEARRAY(struct Point3D) Coord;

Struct DisplacementPoint

BSTR Name
double X
double Y
double Z
VARIANT_BOOL Calculate

Struct DisplacementLine

BSTR Name
double X1
double Y1
double Z1


```
double X2  
double Y2  
double Z2  
int nIntervals  
VARIANT_BOOL Calculate
```

Struct DisplacementPolyline

```
BSTR Name  
int iPolylineRef  
int nIntervals  
VARIANT_BOOL Calculate
```

Struct DisplacementGrid

```
BSTR Name  
double X1  
double Y1  
double Z1  
double X2  
double Y2  
double Z2  
int nIntervalsAlong  
double ExtrusionDistance  
int nIntervalsAcross  
EEextrusion Extrusion  
VARIANT_BOOL Calculate
```

Struct PdispMindlinResult

```
double X  
double Y  
double Z  
double DispX  
double DispY  
double DispZ
```

Struct PdispBoussinesqResult

```
double X  
double Y  
double Z  
double DispZ  
double StressCalcLevel  
double Stress  
double SumPrincStress  
double Strain
```

Struct PDispStratum

```
BSTR Name  
double toplevel  
int ndispLevels
```

double Etop
double EBottom
double PoissonsRatio
double Mv
double e0
double Cc
double Cr
EOverConsolidation OverCons
double PreConsPress
double OCR
double OCM
double Cv
double UnitWeight
double Ca
double Cae
double k

Struct SoilZone

BSTR Name
double Xmin
double Xmax
double Ymin
double Ymax
int iProfile

Struct PDispConsolidationResult

BSTR Name
double X
double Y
double Z
double u
double DegOfCons
double primary
double secondary
double total

5 Output

5.1 Analysis and Data Checking

Results can be obtained by selection of the Analysis menu:

Prior to analysis the program provides warning messages if applicable.

Note: The option to 'Delete Results' becomes active once the calculations have been completed.

5.2 Text Output

Text Output is available from the View menu, the Gateway or the Pdisp Toolbar. This output may include input data and results - if an analysis has been performed. The results are provided in both a full and condensed tabular form. The lists of tabulated output can be highlighted and then copied to the clipboard and pasted into most Windows type applications e.g. Word or Excel. The output can also be directly exported to various text or HTML formats by selecting Export from the File menu.

RESULTS FOR GRIDS

Analysis: Boussinesq

Global Poisson's ratio: 0.2

Rigid boundary level: -30.0

The maximum displacement difference between
Boussinesq method = 168.0mm and Mindlin method = 59.17mm
occurs at point X=16.00m Y=-39.00m Level -2.588mOD and is: 108.9mm

Type	Location			Displacement		
	X	Y	Z[Level]	X	Y	Z
	[m]	[m]	[mOD]	[mm]	[mm]	[mm]
Loads	0.5000	43.50	0.0	105.8	-12.50	1.253
	1.000	-54.00	-2.000	117.1	-12.50	1.253
	0.0	-6.000	-1.000	31.97	-12.50	1.253
Point 1	0.0	0.0	-10.00	34.90	-12.46	1.641
Point 2	0.0	4.000	-10.00	36.67	-14.46	2.539
Point 3	0.0	8.000	-10.00	38.23	-15.96	3.327
Point 4	0.0	12.00	-10.00	38.16	-16.61	3.676
Grid 1	0.0	0.0	-10.00	34.90	-12.46	1.641
	0.0	4.000	-10.00	36.67	-14.46	2.539
	0.0	8.000	-10.00	38.23	-15.96	3.327
	0.0	12.00	-10.00	38.16	-16.61	3.676
	0.0	16.00	-10.00	36.03	-16.25	3.668
	0.0	20.00	-10.00	33.12	-15.14	3.799
	4.000	0.0	-10.00	36.72	-10.72	2.827
	4.000	4.000	-10.00	37.66	-12.84	4.777
	4.000	8.000	-10.00	38.50	-14.13	6.645
	4.000	12.00	-10.00	38.23	-14.67	7.302
	4.000	16.00	-10.00	36.18	-14.84	6.865
	4.000	20.00	-10.00	32.82	-14.52	6.859

An asterisk "*" at the right of a row indicates that the coordinate's result includes an imported displacement.

5.2.1 Full Text Output

The tabulated results listed below are available in the full output.

Type lists the type of location for the displacement co-ordinates, i.e. the centre of the loaded areas, the points, lines and grids.

Location provides the global co-ordinates for the displacement points (X, Y, Z[level]) in metres.

Displacement calculation level provides the level of the grid and all intermediate displacement levels

Displacement lists displacements at the displacement points and all intermediate displacement levels. Displacement in mm. Positive displacement indicates settlement, negative indicates heave.

An asterisk "*" to the right of the 'Displacement' columns indicates that the coordinate's result includes an imported displacement.

For the Boussinesq solution only, and if the point does not include the results of an imported displacement:

Stresses list the stress values at all stress calculation points and at the centre of each sub-layer, as defined by the intermediate displacement levels.

For consolidation problems, stresses are calculated and reported even at the displacement calculation levels.

Once selected the program will scroll through all the results before allowing access to the data.

For Consolidation problems,

u is the excess pore pressure

U is the degree of consolidation

TimeStep : No is the number of time step at which the consolidation results are reported

TimeStep: Value is the consolidation time at which the results are reported

primary is the primary consolidation

secondary is the secondary consolidation

5.2.2 Condensed Text Output

The tabular results listed below are available in the condensed output.

Type describes the type of location for the displacement co-ordinates, i.e. the centre of the loaded areas, the points, lines and grids.

Location provides the global co-ordinates for the displacement points (X, Y and Z[level]).

Displacement lists displacement of the point resulting from the applied loading. Horizontal displacements are given in Global X, Y directions. Positive Z displacements indicate settlement, negative Z displacements indicate heave.

An asterisk "*" to the right of the 'Displacement' columns indicates that the coordinate's result includes an imported displacement.

5.3 Graphical Output

Graphical output is accessed via the View menu, the Gateway or the Pdisp Toolbar.

The graphics menu is available if any of the following windows is visible:

- Plan
- Cross section
- Graphical Input

This menu allows the use of templates to save specific types of graphical displays. It also allows the user to display the load magnitudes, to annotate the grids, lines and points and to set an exact scale for the display.

Label objects is only available for the cross section view.

Input is only available for the Graphical Input view.

5.3.1 Templates

The templates function is used as follows.

1. Set up the graphics view which you would like to repeat for other files in the future.
2. Select the 'Save as template' option and save the view with a specific file name.
3. To reload the template select the 'Load template' option.
4. To return to the original view when the graphics option is opened select "reset defaults".

5.3.2 Plan View

Plots of the plan area of the problem can be created.

The graphical displays may be customised via menu commands or the following icons on the toolbars.

5.3.2.1 Set Contour Interval

Intervals for contours shown in the Plan View can be set by selecting from the program's menu: Graphics -> Grid results -> Set contour interval. The Interval dialog box will appear.

5.3.2.2 Set Exact Scale

Selection of Set Exact Scale allows you to set any required scale for the graphics. The chosen scale will be maintained when the graphic is printed. The scale is set via the Specify Scaling dialog.

5.3.2.3 Line Displacements

This provides a plot of displacement versus distance along the defined displacement lines.

To reach the plots click the "Line Graph" button, then place the cursor over the line you wish to view and click with the left button. The program then requests whether you wish to view the line number available.

This view shows only horizontal lines. The deflected shapes of inclined lines can be viewed on the 3D graphical output.

If 'No' is selected then the program will go to any lines below the area and ask again. This allows you to view lines which are superimposed at different levels.

5.3.2.4 Soil Column Displacements

This view provides the displacement profile along a vertical line under the user specified point. Displacement is plotted against level or depth according to the user's choice.

To view the graph click the "Soil Column Displacements" item in the Gateway, or select "View | Soil Column Displacements" on the program menu. A dialog box will pop up which asks for the plot data.

Enter the coordinates of the point under which the displacement profile is to be generated, and the parameter against which displacement is to be plotted i.e. level or depth..

Press the "OK" button to view the graph.

The different soil layers of the zone in which the point lies are represented as coloured rectangles in the graph.

The coordinates and the parameter against which the displacement should be plotted can be changed via the dialog bar at the top of the view.

Select the "Apply" button to view the graph.

5.3.3 Cross Section Plot

This provides a plot of the generalised cross-section through the problem.

The section is not at any particular location and merely provides an illustration of the location of all the input information which has both line and level.

5.3.3.1 Label objects

This option from the "Graphics" menu allows the user to label the Grids, Lines and Points with their appropriate numbers and the Loads with their assigned values.

5.3.4 3D Graphical Output

The 3D Graphical Output displays a three dimensional plot of the model and its available results.

This entities and labels that are to be displaced are defined in the Graphic Settings property sheet

The orientation of the model in the view is controlled via rotation, zooming and panning as described below, and via buttons on the 3D Graphics toolbar which select the x, y or z elevation, perspective mode and zooming to the extent of model data.

Rotate

The model can be rotated by pressing and holding the left mouse button and dragging the mouse.

Horizontal drag rotates the model with respect to its Z axis. Vertical drag rotates the model with respect to the axis parallel to a horizontal line through the centre of the view.

Zoom

The model can be zoomed in or out by scrolling the mouse wheel. The model can be zoomed to its original scale by pressing 'z' from keyboard.

Pan

The model can be panned by holding 'shift + left-click' and dragging the mouse. Panning is effective for the orthogonal view.

Saving the view

The view point and zoom factor can be saved by selecting "Save default view settings" from the context menu of the view. The context menu is accessible by right-clicking in the view or by using the context menu key on the keyboard).

Printing


The view can be printed. The print may differ slightly from the image viewed on screen owing to differing resolutions.

5.3.4.1 Graphic Settings

The Graphic Settings property sheet allows the parameters that govern the format and content of 3D Graphical Output View to be specified.

These graphic settings are stored in the data file. Default settings are provided by the program. The defaults can be restored by clicking the 'Restore Defaults' button. The 'Apply' button applies the settings to the 3D Graphics view.

This property sheet may be accessed via:

- "Data | Graphic Settings" from the program's main menu; or
- the Wizard button  on the Pdisp Toolbar when the 3D Graphics Output is active; or
- selecting "Graphic settings" from the context menu of the 3D Graphics Output (the context menu is accessible by right-clicking in the view or typing the context menu key from keyboard); or
- the Gateway, by selecting "Output | 3D Graphics".

The controls are separated into four different pages:

- Soil
- Loads
- Displacements
- Preferences

Each of these is described in detail below.

Soil zones and labelling

This section specifies which soil zones are to be displayed, and, if displayed, which should be labelled.

Soil profiles

This section specifies how soil profiles are to be displayed.

Solid display

If this is selected soil profiles will be displayed as solid surfaces with their respective strata colours as specified in the Soil Profiles table. Solid display does not allow the display of loads or displacements.

Wire frame display

If this is selected soil profiles are displayed as a wire frame. Wire frame display allows the display of loads and displacements.

Soil zones display

This selection chooses which soil zones are to be displayed. The list shows those soil zones that have been defined in the Soil Zones table. It allows multi-selection.

All

This button causes all the soil zones to be selected.

None

This button clears the selection of soil zones.

Annotation

When this is checked all displayed zones are given labels on the 3D Graphics view.

Loads

This specifies which loads are to be displayed.

All the controls from this page are enabled only when the 'Wire frame display' button is selected in the Soil page -> 'Soil profiles' section.

Loads and labelling

This section specifies which loads are to be displayed, and, if displayed, which should be labelled.

Load intensity can be viewed in two ways.

Loaded areas

Each different load intensity, as specified in the Load Data table, is displayed with a different colour. A legend of colour vs load intensity will be displayed. Load orientation i.e. normal, tangential x and tangential y can be selected from the drop down list.

Loads as arrows

All loads associated with a loaded plane are viewed at once as arrows. The values of intensity will be displayed at the tip of each arrow. **Arrow size based on intensity** allows the arrow length to be scaled according to the size of the load. The scale can be doubled or halved by clicking the "x2" or "/2" buttons.

Displacements

The Displacements' page specifies how the displacement input data and results are to be displayed.

The components of this page are enabled only when the 'Wire frame display' option is selected in the 'Soil profiles' section.

After performing an analysis, results are available for the Points, Lines and Grids specified in the Displacement Data table. The 3D Graphics View can illustrate these results. If no results are available then only the undeflected locations of the proposed displacement data are available for display.

Displacement data and labelling

This section specifies which displacement entities are to be displayed, and, if displayed, which should be labelled.

Grids

Filled polygons

When this is checked the deflected nodes on a grid form a surface with filled polygons. When unchecked it displays polygons by outlines. This button is enabled only if results exist and when the 'Contour surface' button is unchecked.

Contour surface

This selection allows display of line contours, filled contours or no contours. Contours are displayed with an interval specified in the 'Contour interval' edit box. This represents the deflection pattern on a grid. This contour surface is drawn on an undeflected grid. This is enabled only if results exist.

Contour interval

The value of the contour interval is automatically initialised with a default value based on the minimum and maximum extents of the deflection results. The contour surface can be viewed at another contour interval by changing this value. The minimum value that is required is such as to limit the number of contours to less than 50. The maximum value is the contour range.

Direction

The component of displacement in the X, Y and Z directions, or the resultant displacement, may be chosen for display. The contour surface or deflected shape will be based on this selection.

Display nodes

When this is checked the nodes on the grid will be highlighted with a small cube. This is helpful to identify nodes on a deflected surface when the 'Filled polygons' button is unchecked.

Display values

When this is checked the nodes will be annotated with displacement values. This button is enabled only if results exist.

Undelected/Deflected shape

When this is checked the undelected positions of Points, Lines and Grids are displayed. This is required to view the locations of displacement entities when there are no results.

General**Centre of rotation**

This specifies the co-ordinate of the centre for rotating and zooming.

Centre of drawing

When this is selected the centre of rotation is set to the centre of the model, the resulting X and Y co-ordinates are displayed in the edit boxes. These cannot be edited directly.

Custom

When this is selected the edit boxes X and Y are enabled so that the centre of rotation may be entered directly.

Labels**Name**

Indicates that labels, where specified, are to display the names of entities only.

No.

Indicates that labels are to display the reference numbers of entities only.

No.:Name

Indicates that labels, where specified, are to display both the names and numbers of entities.

Transparent

When this is checked the surfaces become semi-transparent. The transparency depends on the sequence of the drawing order.

Lighting

When this is checked light falls on the model from a pre-defined position set by the program. This button is enabled only when lighting is appropriate.

Picture area to exclude legend panel

When this is checked the picture area used for the legend is used exclusively for the legend and that used for the display of the image is reduced by the width of the legend panel. Otherwise the legend is superimposed on the image.

Perspective view

Toggles the view between orthogonal and perspective.

Defaults

This resets all the settings to the program's defaults and applies them to the 3D Graphics View.

OK

This applies to the 3D Graphics View the current settings from all the pages, and closes the property sheet.

Undo

This undoes the changes to all those pages that have been modified since the 'Apply' button was last pressed.

Apply

This applies to the 3D Graphics View the current settings from all the pages without exiting the property sheet.

5.4 Chart Output

Chart outputs can be directly accessed from the output explorer.


Following are the chart outputs that the program provides:

- 1) Displacement vs Time
- 2) Displacement Lines
 - Settlement
 - Stress
 - Strain
- 3) Soil Column Displacements

5.4.1 Displacement vs Time

This is active only for consolidation problems. It shows the displacements at various time steps.

The user can select a particular displacement point or a point of any of the lines and grids by using the drop lists provided.

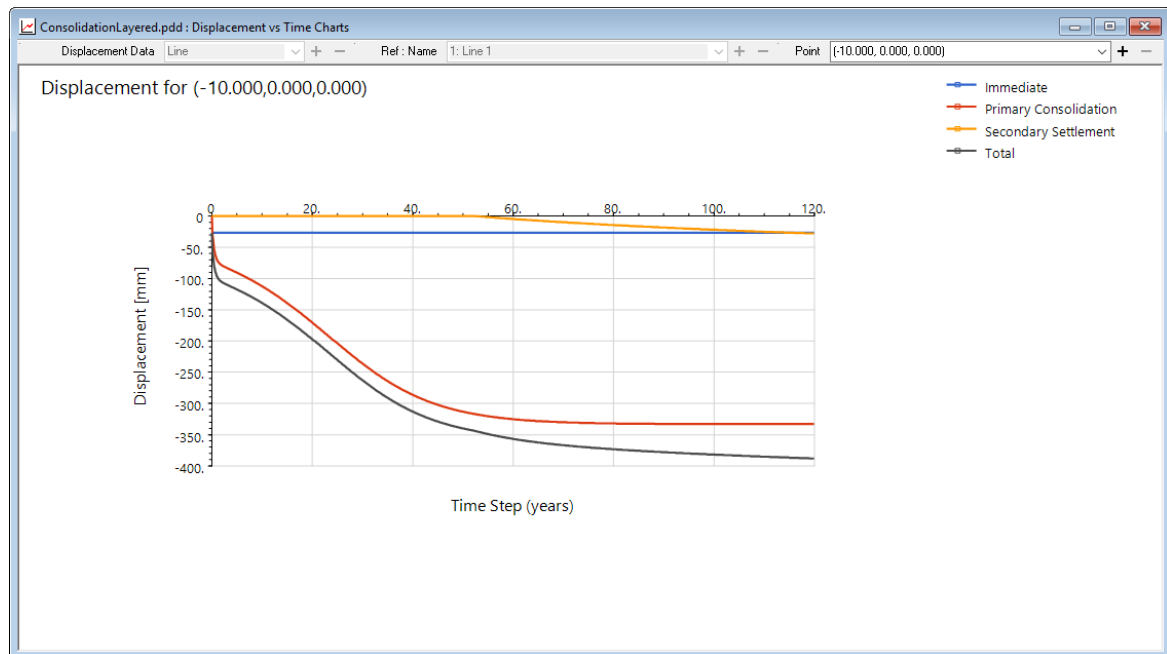

5.4.2 Displacement Lines


Following charts for can be viewed for displacement lines.

- Settlement
- Stress
- Strain

5.4.2.1 Displacements


This provides a plot of displacements versus distance along the defined displacement lines.

The type of displacement (immediate or consolidation or total) can be selected from the drop down provided. The time step at which the consolidation is to be viewed can also be selected from the drop down provided,

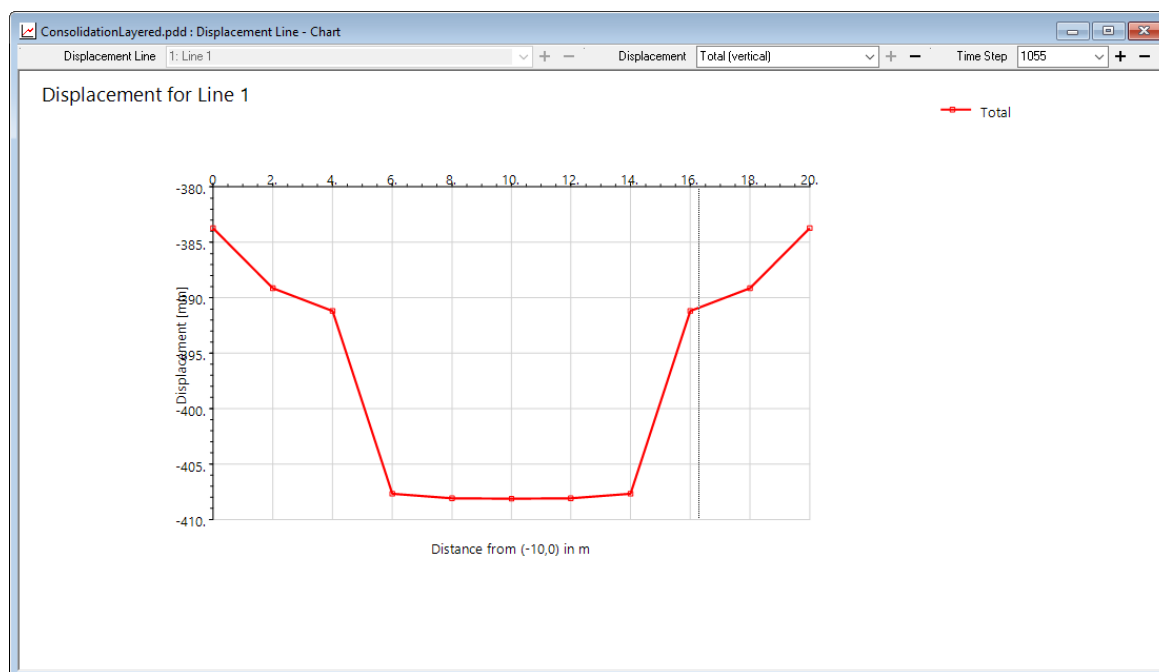


5.4.2.2 Stress

This provides a plot of stress versus distance along the defined displacement lines. This is active only for Boussinesq.

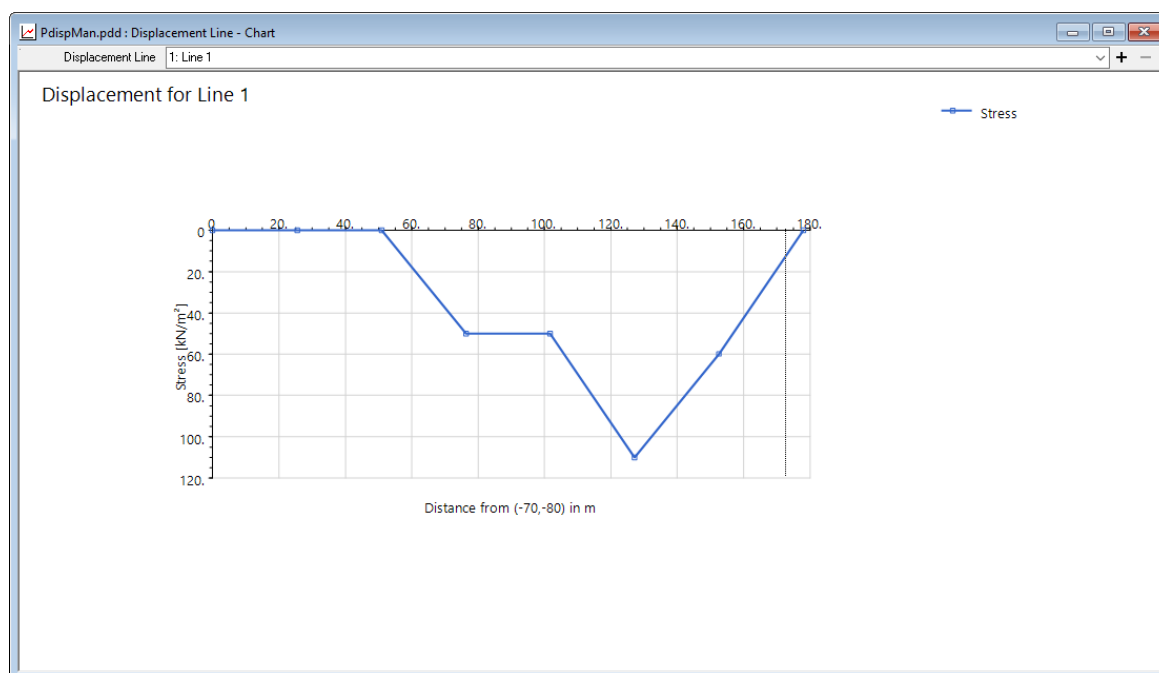

5.4.2.3 Strain

This provides a plot of stress versus distance along the defined displacement lines. This is active only for Boussinesq.

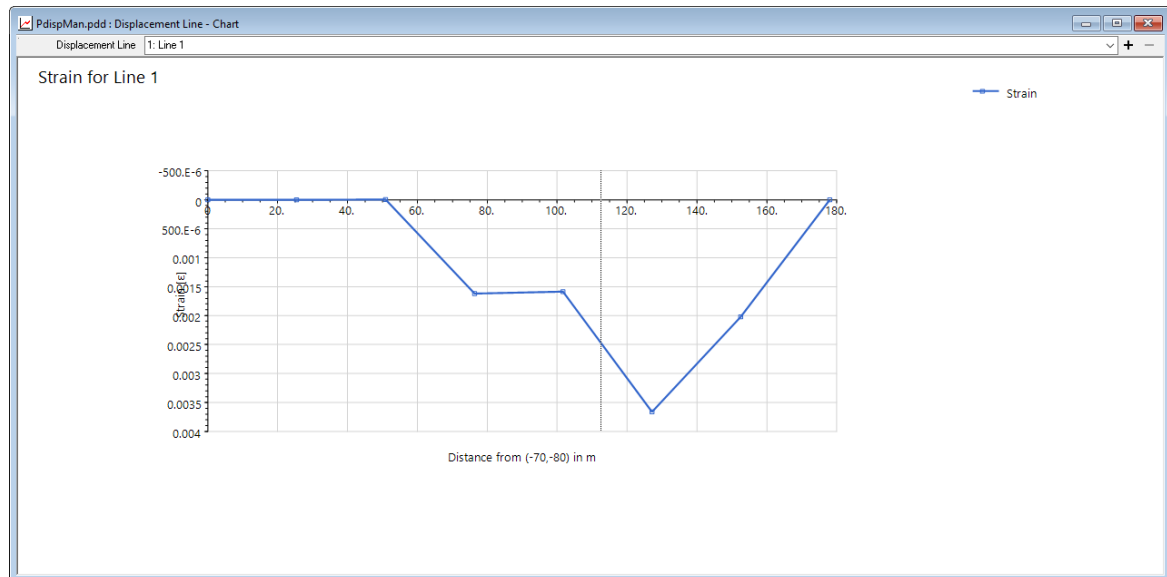

5.4.3 Displacement Polylines


Following charts for can be viewed for displacement polylines.

- Settlement
- Stress
- Strain

5.4.3.1 Displacements


This provides a plot of displacements versus distance along the defined displacement polylines.

The type of displacement (immediate or consolidation or total) can be selected from the drop down provided. The time step at which the consolidation is to be viewed can also be selected from the drop down provided,

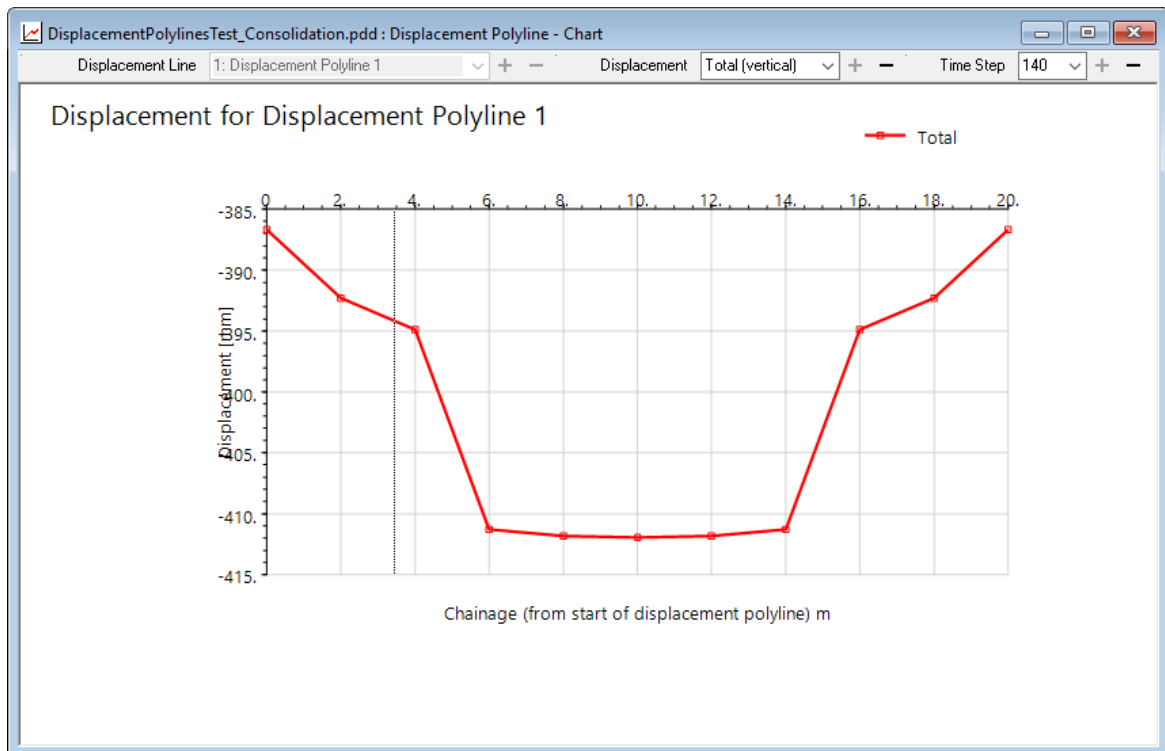


5.4.3.2 Stress

This provides a plot of stress versus distance along the defined displacement polylines. This is active only for Boussinesq.

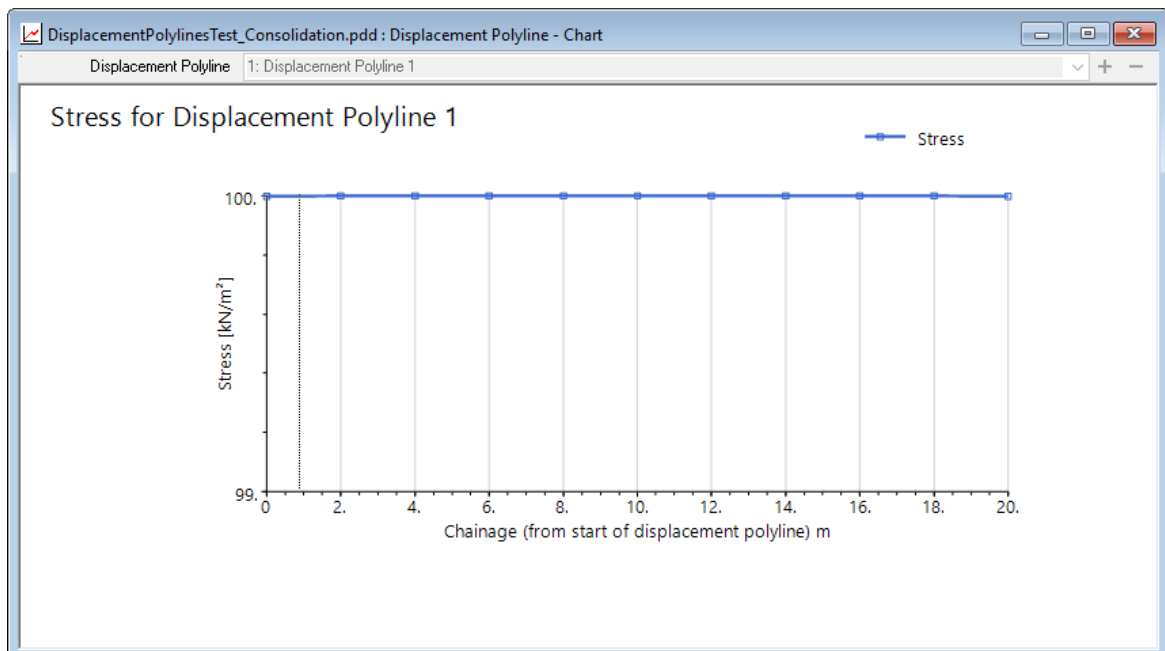

5.4.3.3 Strain

This provides a plot of stress versus distance along the defined displacement polylines. This is active only for Boussinesq.

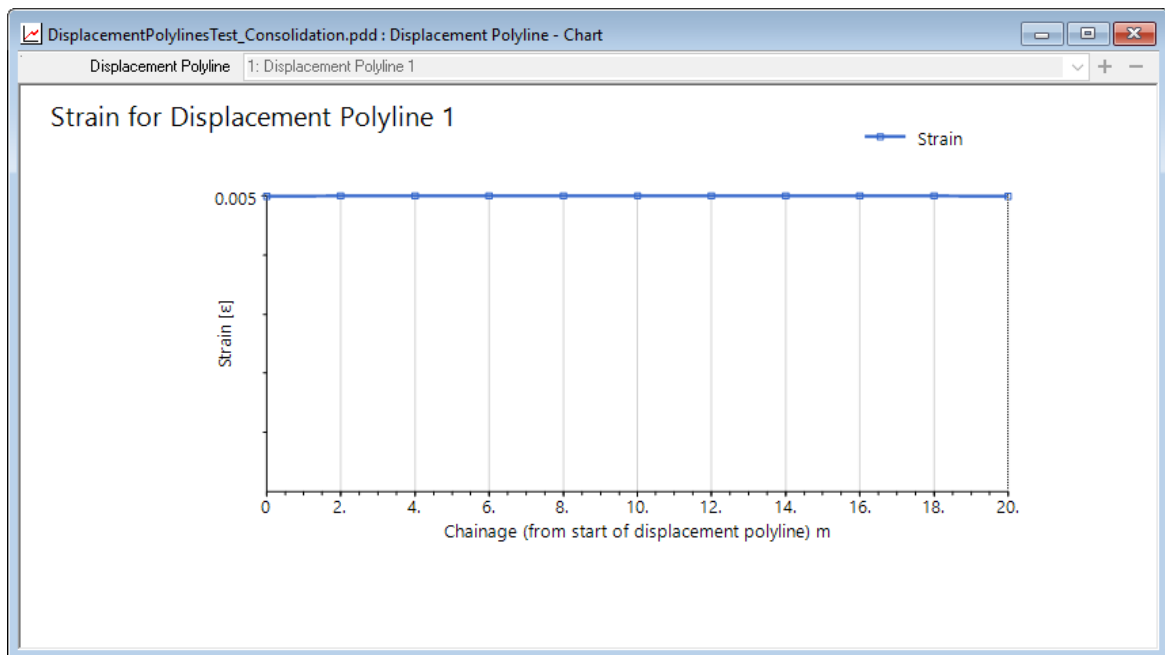

5.4.4 Soil Column Displacements

This view provides the displacement profile along a vertical line under the user specified point. Displacement is plotted against level or depth according to the user's choice.

5.5 CSV Results File

A comma-separated value (CSV) file of results may be output by selecting 'File | Export | CSV Results File ...' on the program menu. This option is disabled if there are no results, so an analysis must have first been performed. On selection of that option the CSV Results Export dialog will appear. This allows the specification of which results are to be written.

The CSV output file may contain any of the following:

- grid, line and point displacements;
- as appropriate to the analysis method, alignments of contours of displacements in the x, y, z or resultant direction, and stresses (vertical and sum principal) and vertical strain.

One purpose of this output is to allow building damage segments/categories and displacement contours to be plotted on drawings in other design programs e.g. AutoCAD.

In the case of displacement results, the CSV Results Export dialog allows the choice of whether locations that are duplicates of those that have already been written are to be ignored. If the "Skip duplicate locations" option is checked, then a tolerance may be specified which is used to determine whether two locations are considered to be duplicates. The tolerance specifies the maximum

distance within which locations are deemed to be duplicates. If a point is found to be a duplicate of a location already written, then it will be ignored, and only the first location and its results written.

For example, if Displacement Line 1 ends at coordinates (10,10,10), and Displacement Line 2 begins at coordinates (10,10,10), then choosing "Skip duplicate locations" will ensure the location and results at (10,10,10) are written to the CSV file only once.

If a grid is selected for a direction that contains results that are all zero, then that direction will be disabled for the export of contour results.

The output file includes keywords to identify the content of each row of data. Samples are given below which show the format.

Grid, line and point displacements follow the sequence: Keyword,x Coordinate,y Coordinate,z Coordinate,x Displacement,y Displacement,z Displacement.

Contour data lines follow the sequence: Keyword,Grid No.,Contour value,x Coordinate 1,y Coordinate 1,x Coordinate 2,y Coordinate 2. They describe discrete segments of a contour line.

Dimensions for output data are chosen by the user in the "Save As" dialog that follows the "CSV Results File Output Selection" dialog. Length and displacement units' indices are: 0 - metres; 1 - centimetres; 2 - millimetres; 3 - feet; 4 - inches.

Units information should appear in the file before the results.

e.g.

```
DI SP, 2
LENGTH, 0
CONTOUR_RESULTANT, 1, 10., 30., 22. 94968, 27. 96293, 23. 98147
CONTOUR_RESULTANT, 1, 10., 27. 96293, 23. 98147, 26. 13617, 25.
CONTOUR_RESULTANT, 1, 10., 26. 13617, 25., 23. 26587, 26. 63294
...
CONTOUR_X, 1, - 60., 90., 80. 55464, 89. 26049, 80. 36975
CONTOUR_X, 1, - 60., 89. 26049, 80. 36975, 88. 89082, 80.
CONTOUR_X, 1, - 60., 95. 56882, 75., 91. 57434, 74. 21283
...
CONTOUR_Y, 1, - 60., 48. 88889, 80., 49. 25906, 79. 62953
CONTOUR_Y, 1, - 60., 49. 25906, 79. 62953, 50., 79. 4441
CONTOUR_Y, 1, - 60., 49. 77666, 85., 49. 81781, 84. 90891
...
CONTOUR_Z, 1, 0., 50., 0. 4412712, 48. 84946, 0. 5752676
CONTOUR_Z, 1, 0., 48. 84946, 0. 5752676, 43. 20705, 0.
CONTOUR_Z, 1, 0., 60., 0. 3418683, 59. 22948, 0. 3852612
...
GPOI NT_RESULT, 150., 240., - 25., 0., 0., - 1. e- 003
GPOI NT_RESULT, 150., 250., - 25., 0., 0., - 1. e- 003
...
LPOI NT_RESULT, 50., 150., 0., 0. 4636086, 0., 0. 3708869
LPOI NT_RESULT, 51., 150., 0., 0. 6526436, 0., 0. 5438696
...
POI NT_RESULT, 5., 150., 0., 0. 9029427, 0., 0. 7851676
POI NT_RESULT, 55., 150., 0., 1. 227543, 0., 1. 115948
```

5.6 Old Data File Version

Pdisp files may be read by Oasys GSA in order to perform raft analysis. However, GSA may not be able to read Pdisp data files that have been written by the current version of Pdisp if this version of Pdisp has been released after the current version of GSA. In such situations it may be useful to export Pdisp data files in the earlier format that can be read by GSA, although some data may then be lost if recently added data cannot be converted to the earlier format.

To export a Pdisp data file in an earlier GSA-compatible format choose "File -> Export -> Old Version..." from the program menu.

6 Miscellaneous

6.1 Keyboard Accelerators

Key	Action
Ctrl+Num 1	Window bottom-left
Ctrl+Num 2	Window bottom
Ctrl+Num 3	Window bottom-right
Ctrl+Num 4	Window left
Ctrl+Num 5	Window middle (full)
Ctrl+Num 6	Window right
Ctrl+Num 7	Window top-left
Ctrl+Num 8	Window top
Ctrl+Num 9	Window top-right
Ctrl+C	Copy
Ctrl+F	Find
Ctrl+G	Go To
Ctrl+H	Replace
Ctrl+M	Modify
Ctrl+N	New
Ctrl+O	Open
Ctrl+P	Print
Ctrl+S	Save
Ctrl+Shift+S	Save As
Ctrl+V	Paste
Ctrl+W	Wizard
Ctrl+X	Cut
F1	Context Help
Esc	Quit

Tab	Next Cell
Return	Next Cell
Insert	Insert
Delete	Delete
Home	Beginning of Cell
Ctrl+Home	Beginning of Table
End	End of Cell
Ctrl+End	End of Table
Page Up	Scroll up
Page Down	Scroll down
↑Up	Row Up
←Lft	Column Left
→Rt	Column Right
↓Dn	Row Down

6.2 File Backups

A file backup results in a temporary copy of the model (input data and results) being saved in the user's temporary folder (i.e. C:\Users\<username>\AppData\Local\Temp).

Backups may be manual backups, timed backups, or backups before and after analysis.

Manual backups have "_M.xdd" appended to the file name. Timed backups and backups before and after analysis have "_bak" appended to the file name.

A manual backup of the data file is created automatically on opening a file.

A timed backup of the model is created periodically according to the user's preferences for timed backups. Those preferences are reached via Tools -> Preferences from the program menu, where the option to save timed backups may be set along with a backup interval.

A backup is also made automatically on beginning an analysis (so with no results) and on completion of a successful analysis (so with results).

If a model has results then no timed backup is made since, if the file is unchanged since opening there is no need, and if the file has been changed then an analysis must have been performed to create those results, so a backup will have already been created on completion of the analysis.

If the program shuts down prematurely (as a result of program malfunction or power failure etc.) then the backup files remain on disk for subsequent use if recent changes were not saved by the user and so have otherwise been lost. The user may delete such backup files manually from their temporary folder when they are no longer needed. They will, however, be overwritten if a data file with the same name is opened, so their previous contents will be lost.

All instances of a model's backup files are automatically deleted when the data file is closed properly.

7 Toolbars

Toolbars provide a short cut to the more commonly used commands. Toolbars except can be docked (attached to the application frame) or floating (free to be positioned by the user). The toolbars can be switched on and off as required from the “View | Toolbars” menu command.

7.1 Standard Toolbar

The Standard Toolbar provides access to the following common Windows functions along with some that are specific to the program.



New — create a new model

Open — open an existing file

Save — save the model to file

Cut — cut the data and place on clipboard

Copy — copy the data and place on the clipboard

Paste — paste the data from the clipboard into the model

Print — print the current view

Print Preview — preview the current view

About — opens the program's About Dialog e.g. to show version information

PDisp Home — opens the programs home page on the internet

Email — opens an email to the Oasys support team




- Undo any change in the table view



- Redo any change in the table view

7.2 PDisp Toolbar

The PDisp Toolbar provides access to the following functions.

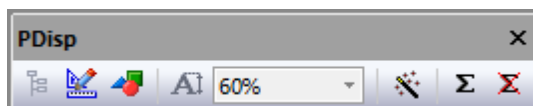


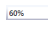

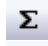

- open or close the Gateway



- open the 3D Graphics View



- open the Text Output View

-  - specify a custom font scale to size text in the Plan View, or when printing the Text Output (dependent on which of those views is active)
-  - select from a list of font scales to size text as above
-  - open the context sensitive wizard
-  - perform an analysis
-  - delete the results

7.3 Plan Toolbar

The following graphical displays are available for the Plan View and can be displayed or hidden by toggling the individual icons on the Plan Toolbar or Graphics Menu.



Axis - Provides an axis and defined grid upon which the plan is drawn.



Engineering Scale - This allows the user to toggle between the default 'best fit' scale and the closest available engineering scale. e.g. 1:200, 1:250, 1:500, 1:1000, 1:1250, 1:2500.



Save Metafile: Save icon allows the file to be save in the format of a Windows Metafile. This retains the viewed scale. The metafile can be imported into other programs such as a word processor, spreadsheets and drawing packages.



Inserting Bitmaps: Allows a bitmap to be placed behind the main graphical view, see Inserting Bitmaps.



Zoom Facility - The user can select an area to 'zoom in' to by using the mouse to click on a point on the drawing and then dragging the box outwards to select the area to be viewed. The program will automatically scale the new view. The original area can be restored by clicking on the 'restore zoom' icon as shown here.



Edit Colours - The user can edit the colours of lines in the Plan View.



Soil Zones: Plots the extent of the soil zones.



Points - Toggles the display of displacement points.



Lines - Toggles the display of displacement lines.

The plan view shows only horizontal lines. Inclined lines can be viewed on the 3D graphical output.



Grids - Toggles the display of displacement grids.

The plan view shows only horizontal grids. Inclined grids can be viewed on the 3D graphical output.



Imported Displacements: Plots the locations of imported displacement points.



Loaded Areas: Plots the locations and sizes of the defined loaded areas. The plan view shows only normal (vertical) loads on horizontal planes, with no rotation in plan.



Contours: The plan view shows contours (line contours or filled contours) for only vertical displacements. Contours for horizontal, vertical and resultant displacements can be viewed on 3D graphical output.



Annotation: Selection of this button allows the use of the mouse to place the value of settlement at the exact location of the cursor and at the level of the displacement grid selected. **Not** the closest contour value.

To operate place the cursor over the required location and press return or the left button on the mouse.

Tip: If a **displacement line** is in the vicinity of a point you wish to annotate then de-select the displacement grids icon and proceed with the annotation. To get the maximum accuracy for the location of the points maximise the size of the screen and scale of working.



Change Displacement Grids: The user can move up or down to the data defined for the different displacement grid levels. The number of the level currently being viewed is given at the top of the figure.



Line Graphs - Allows the user to plot the displacements along the selected displacement line, building damage results for the selected building, or utility damage results for the selected utility.

7.4 3D Graphics Toolbar

The 3D Graphics Menu and Toolbar provide rapid access to the functions to control the 3D Graphics View display. Greater control is possible via the 3D Graphics Settings wizard. For instance, the settings wizard allows individual displacement lines to be viewed or hidden, whereas the toolbar allows only the display of all or none.



- Toggles the display of all soil zones.



- Toggles the display of all displacement points.




- Toggles the display of all displacement lines.



- Toggles the display of all displacement grids.




- Toggles the display of all loads.

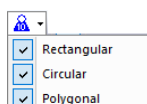





- Toggles the display of all labels.

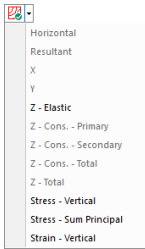

- Toggles the display of line contours for Displacement Grids (clicking the button toggles contours of Z displacement, clicking the drop arrow on the right of the button allows more specific selection).^[1]

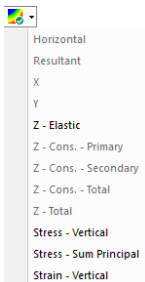

- Toggles the display of filled contours for Displacement Grids (clicking the button toggles contours of Z displacement, clicking the drop arrow on the right of the button allows more specific selection).^[1]

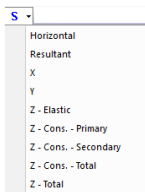

- Toggles the display of the deflected shape of Displacement Data (clicking the button toggles deflected shape based on Z displacement, clicking the drop arrow on the right of the button allows more specific selection).^[1]



- Toggles the display of displacement values for Displacement Data locations (values are sensitive to which results are currently being displayed, or, if none, will show values for Z displacement).



- Orientates the view so as to be looking down the X axis.



- Orientates the view so as to be looking down the Y axis.



- Orientates the view so as to be looking down the Z axis (i.e. a plan view).



- Orientates the view so as to be viewing an isometric view.



- Toggles the display of the model in perspective mode.



- Re-sizes the view so as to be scaled to fit the available window size (when in graphical input mode it also resizes the grid if extents are not locked).



- Toggles the display of the model in wire frame mode.



- Toggles the display of nodes for Displacement Data.



- Toggles the display of the model in transparency mode.



- Toggles lighting on or off.

Notes

- [1] Grids must first be visible, by selecting Displacement Data button to toggle Displacement Grids, before line contours, filled contours or the deflected shape of Displacement Grids can be shown.

8 References

8.1 References - General

Boussinesq, J. (1885). Applications des potentiels a l'etude de l'equilibre et de mouvement des solides elastiques. (Gauthier-Villars, Paris)

Mindlin, R.D. (1936). Force at a point in the interior of a semi-infinite solid. Journal Appl. Phys. 7, No. 5, pp. 195-202.

Vaziri, H., Simpson, B., Pappin, J.W. and Simpson, L. (1982). Integrated forms of Mindlin's equations. Geotechnique Vol. 32. No. 3 September.

Poulos, H.G. and Davis, E.H. (1974). Elastic solutions for soil and rock mechanics. Wiley.

Knappett, J.A. and Craig, R.F. Craig's Soil Mechanics. Eighth Edition.

Holtz, R.D, Kovacs, W.D and Sheahan, T.C. An Introduction to Geotechnical Engineering. Second Edition (2013).

Abid, M.M and Pyrah, I.C. Guidelines for using the Finite Element Method to predict one-dimensional consolidation behaviour. Computers and Geotechnics 5 (1988), pp 213-226.

8.2 References - Pile-Soil Interaction Coefficients

The following references provide examples of p-y (lateral load - displacement), t-z (axial load - displacement) and q-z (tip load - displacement) curves (tables and formulae) which may be helpful in specifying Pile-Soil Interaction Coefficients.

API (1993). Recommended practice for planning, designing and constructing fixed offshore platforms - LRFD. API Recommended Practice 2A - LRFD. 1st edn.

API, RP2A (1989). Recommended practice for planning, designing and constructing fixed offshore platforms. 18th edn. American Petroleum Institute.

API, RP2A (2000). Recommended practice for planning, designing and constructing fixed offshore platforms - working stress design. 21st edn. American Petroleum Institute.

Bailie, P. (2013). An investigation into the cyclic response of piles, MSc thesis, Imperial College London.

Berezantzev, V.G., Khristoforov V.S. and Golubkov, V.N. (1961). Load bearing capacity and deformation of piled foundations. Proceedings of the 5th International Conference on Soil Mechanics and Foundation Engineering, pp. 11-15.

Bolton, M.D. (1986). The strength and dilatancy of sands. Geotechnique 36, no.1, pp. 65-78.

Broms, B. (1964b). Lateral resistance of piles in cohesionless soils. JSMFD. ASCE. vol. 90, SM3, pp. 123-156.

Broms, B. (1972). Stability of flexible structures (piles and pile groups). General report. American proceedings 5th Euro Conference, SMFE, Madrid, vol. 2, pp. 239-269.

Brinch Hansen, J. (1961). The ultimate resistance of rigid piles against transversal forces. Geoteknisk Institut, Bull, No. 12, Copenhagen.

BS EN 1997-1:2004. Eurocode 7: geotechnical design. Part 1: general rules.

BS EN 1997-1:2004. UK national annex to Eurocode 7: geotechnical design. Part 1: general rules.

BSI (2009). Eurocode 7: geotechnical design. Part 1: general rules. BS EN 1997-1:2004. British Standards Institute.

BSI (2009). UK national annex to Eurocode 7: geotechnical design. Part 1: general rules. NA to BS EN 1997-1:2004. British Standards Institute.

Chin, J.T. and Poulos, H.G. (1991). A "T-Z" approach for cyclic axial loading analysis of single piles. Computers and geotechnics 12 (1991), pp. 289-320.

D'Appolonia, E. and Romualdi, J.P. (1963). Load transfer in end bearing steel H-piles. Journal of the Geotechnical Engineering Division, ASCE, vol. 89.

Fleming, K., Weltman, A., Randolph, M., and Elson, K. (2009). Piling engineering. 3rd edn.

IS 2911 Part1 Section 1 - Section 4 (2010). Design and construction of pile foundations, code of practice.

Matlock, H. (1970). Correlations for design of laterally loaded piles in soft clay. OTC 1204, Proceedings Offshore Technology Conference, Houston.

Mattes, N.S. and Poulos, H.G. (1969). Settlement of single compressible pile. Journal of the Soil Mechanics and Foundation Division. Proceedings of ASCE, vol. 95, no. SM1, January 1969, pp.189-206.

Pappin, J.W., Simpson, B., Felton, P.J. and Raison, C. (1986). Numerical analysis of flexible retaining walls. Symposium on computer applications in geotechnical engineering. The Midland Geotechnical Society, April.

Poulos, H.G. and Mattes, N.S. (1968). The settlement behaviour of single axially loaded incompressible piles and piers. Geotechnique, vol. 18, pp. 351-371.

Poulos, H.G. and Mattes, N.S. (1969). The behaviour of axially loaded end-bearing piles. Geotechnique, vol. 19, no. 2, pp. 285-300.

Poulos, H.G. and Davis, E.H. (1980). Pile foundation analysis and design. Series in geotechnical engineering. Chapter 5. Lambe, T.W. and Whitman, R.V. (eds). John Wiley and Sons.

Puzrin, A.M. and Burland, J.B. (1996). A logarithmic stress-strain function for rocks and soils. Geotechnique, vol. 46, no. 1, pp. 157-164.

Puzrin, A.M. and Shiran, A. (2000). Effect of a constitutive relationship on seismic response of soils. Part I: constitutive modeling of cyclic behaviour of soils, soil dynamics and earthquake engineering, vol. 19, pp. 305-318.

Randolph, M.F., and Wroth, C.P. (1978). Analysis of deformation of vertically loaded piles. Journal of the Geotechnical Engineering Division, ASCE, 104, no.12 (1978), pp. 1465-1488.

Randolph, M. and Gournevec, M. (2011). Offshore geotechnical engineering. Taylor and Francis. ISBN: 978-0-415-47744-4.

Poulos, H.G. (1971). Behaviour of laterally loaded piles: I-single piles. Proceedings of JSMFE, ASCE, vol. 97, 5, pp. 711-731.

Reese, L.C. (1997). Analysis of laterally loaded piles in weak rock. Journal of geotechnical and geoenvironmental engineering, vol. 123, no. 11, 1997, pp. 1010-1017.

Reese, L.C. and Matlock, H. (1956). Non-dimensional solutions for laterally loaded piles with soil modulus assumed proportional to depth. Proceedings of the 8th Texas Conference on Soil Mechanics and Foundation Engineering, special publication 29, Bureau of Eng. Res., Univ. of Texas, Austin.

Reese, L.C., Cox, W.R. and Koop, F.D. (1974). Analysis of laterally-loaded piles in sand. OTC 2080. Proceedings of Offshore Technology Conference, Houston.

Seidel, M. and Coronel, M. (2011). A new approach for assessing offshore piles subjected to cyclic axial loading. Geotechnik 34 (2011).

Sullivan, W.R., Reese, L.C. and Fenske, C.W. (1980). Unified method for analysis of laterally loaded piles in clay. Proceedings of Conference on Numerical Methods in Offshore Piling, ICE,

London, pp. 135-146.

Terzaghi, K. (1955). Evaluation of the coefficients of subgrade reaction. *Geotechnique*, Vol. 5, No. 4, pp. 297-326.

Timoshenko, S. and Goodier, J. (1970). *Theory of elasticity*. 3rd edn. McGraw Hill.

Tomlinson, M.J. (1981). *Pile design and construction practice*. 2nd edn. Viewpoint Publications.

Tomlinson, M.J. (1981). *Foundation design and construction*. 5th edn. Longman. pp. 445 (Fig. 7.33).

Turner, J. (2006). Rock-socketed shafts for highway structure foundations. NCHRP synthesis of highway practice 2006, pp. 58.

Vijayvergiya, V.N. (1977). Load-movement characteristics of piles. *Proceedings, Ports 77, ASCE*, Vol. II, pp. 269-286.

9 Brief Technical Description

9.1 PDisp

PDisp Pressure Induced **Dis**placement Analysis

PDisp is a program which can calculate the displacements (and stresses if required) within a linear elastic or non-linear soil mass, arising from uniform normal or tangential pressure, applied to rectangular and circular loaded planes.

The ground is represented as a series of soil profiles. These are located in plan by using designated areas known as soil zones.

Loads are completely flexible. Pressures are applied as vertically and/or horizontally and uniformly distributed loads to rectangular and/or circular loaded areas. No allowance is made for the stiffness of the structures.

Displacements can be calculated both beneath and adjacent to the applied loads. Horizontal and vertical displacements can be calculated by choosing the Mindlin method. Vertical displacements and stresses can be calculated by choosing Boussinesq method.

Vertical displacements (settlement and heave) are calculated relative to a rigid base, using one of two approaches: Boussinesq and Mindlin.

In the Boussinesq method the stress distribution is correct for a uniform isotropic, elastic material having a constant Poisson's ratio (which must be specified). Vertical strains are derived from this stress distribution using the elastic constants appropriate to that strain level for each soil layer and then summed to give displacements.

In the Mindlin method relative displacements across each soil layer are calculated directly as if the whole of the ground had the same elastic properties as the layer concerned. The relative displacements are then summed to give total displacements.

The Mindlin approach is more accurate, but the Boussinesq method allows non-linear soil properties

and is relatively accurate if sufficient sub-layers (intermediate displacement levels) are used.

The sides of all soil zones are parallel to the Cartesian co-ordinate axes.

10 Manual Example

10.1 General

The data input and results for the **PDisp** manual are available in the 'Samples' sub-folder of the program installation folder. The example has been created to show the data input for all aspects of the program and does not seek to provide any indication of engineering advice.

Screen captures from this example have also been used throughout this document.

This example can be used by new users to practise data entry and become familiar with the details of the program.

Index

3

3D Graphical Output 80
3D Graphics 96
3D Graphics Toolbar 96

A

Accuracy of the Boussinesq solution 7
Accuracy of the Mindlin solution 14
Analysis and Data Checking 76
Analysis Options 31
Annotation 81
Average Poisson's ratio 13
Average Young's modulus 13

B

Background data 50
Backup 93
Boussinesq 31
Boussinesq Analysis Method 4

C

Calculation details 6, 12
Centre of drawing 81
Centre of rotation 81
Coefficients 52
COM interface
 C++ example 70
 COM automation 55
 COM functions 56
 VBA example 70
Components of the User Interface 1
Condensed Tabular Results 78
Contour interval 81
Contour surface 81
Cross Section Plot 80
CSV 47, 90
Cx 52, 53

Cy 52, 53
Cz 52, 53

D

Data Input 29
Determination of Stresses 4
Diameter 52
Displacement Data 44
Displacement Grids 44
Displacement Grids - Graphical input 54
Displacement Levels 34
Displacement Lines 44
Displacement Points 44
Displacements at load centroids 31
Display nodes 81
Display values 81
DXF 50

E

Elastic analysis above loads 31
Export 77, 90

F

File Backups 93
Filled polygons 81
Full Tabular Results 77

G

Gateway 1
General 3, 28, 102
General Program Description 1
Geometry parameters 52
Global Poisson's Ratio 5, 31
Graphic Settings 81
Graphical Input 53
Graphical Output 1, 79
Graphics menu 79
Graphics Toolbar 1
Greatest stiffness 13, 31
GSA 92
GsRaft analyses 52, 53

H

Horizontal displacements 13, 31

I

Imported Displacements 47

Inserting Bitmaps 54

Intermediate displacement levels 33

L

Label objects 80

Layer 33

Layers 52

Legacy 7

Legacy Mindlin 31

Legend panel 81

Lighting 81

Line Displacements 79

Load Data 37

Load Data - Graphical input 55

Location of Displacement Levels 35

M

Maximum stress 52, 53

Mindlin 7, 31

Mindlin Analysis Method 7

N

Non-linear curves 33

Non-linear Materials 50

Normalised relative displacement 52

Number of Displacement Levels 34

O

Old Version 92

P

Pdisp Toolbar 94

PdispBoussinesqResult 56

Pile base 52, 53

Pile-soil interaction coefficients 52, 53

Pile-soil interaction properties 33, 52, 53

Plan 95

Plan Toolbar 95

Plan View 79

Poisson's ratio 13, 33

Polygon 42

Polygonal loads 42

Polyline 44

Polylines 44

Printing 80

Program Features 2

programming interface

programming interface 55

PSI property 33

PSIC 52, 53

R

Rectangle 42

Relative displacement 52

Results 90

Results Output 77

Rigid boundary level 31

Rotate 80

S

Save As 92

Set contour interval 79

Set Exact Scale 79

Soil profiles 33, 52

Soil zone display 81

Soil Zones 43

Soil Zones - Graphical input 54

Standard Toolbar 1, 94

Stiffness 13

Strains and Displacements 5

Stratum 33

Symmetric curve 52

T

Table View 1

Tabular Output 1

Templates 79
Titles 30
Titles window - Bitmaps 30
Tolerance 42
Toolbar 1
Toolbars 94
Transects 44
Transparent 81

U

Ultimate stress 52
Undeformed shape 81
Units 30
User Interface 1

V

VBA interface
 C++ example 70
 COM automation 55
 COM functions 56
 VBA example 70
Vdisp 101
Vdisp Toolbar 1
Vertical displacements 12
View menu 79
visual basic interface
 C++ example 70
 COM automation 55
 COM functions 56
 VBA example 70

W

Weighted average 13, 31
Wire frame display 81

Y

Young's modulus 12, 13, 33
Young's modulus (E) 36
Young's modulus at base of layer 12
Young's modulus top of layer 12

Z

Zoom 80

